



1SFC132081M0201 EN, Rev G

# Softstarters Type PSTX30...PSTX1250

## Installation and commissioning manual



# Original instruction

This is the Installation and commissioning manual for Softstarters Type PSTX30...PSTX1250.

Document number: 1SFC132081M0201

Revision: G

Issue date: 2016-01-22

Data can be changed without notice.

We reserve all rights to this document, even in the event that a patent is issued and a different commercial proprietary right is registered. Improper use, in particular reproduction and dissemination to third parties, is not permitted.

This document is written carefully. If you find an error, please notify us as soon as possible.

The data contained in this manual is intended solely for the product description and is not to be deemed to be a statement of guaranteed properties. In the interests of our customers, we constantly seek to ensure that our products are developed to the latest technological

Author's address:

**ABB AB**  
**Control Products**  
**Low Voltage Products**  
SE-721 61 VÄSTERÅS, Sweden

**[www.abb.com/lowvoltage](http://www.abb.com/lowvoltage)**

© Copyright 2015. All rights reserved. Data can be changed without notice.

# Read this first

## Warning and safety

Thank you for selecting this ABB PSTX softstarter.

Carefully read and make sure that you understand all instructions before you install, connect, configure the softstarter.

This manual is intended for installation and advanced usage of the PSTX softstarter. For quick and easy installation, see 1SFC132082M9901 - Softstarters Type PSTX30...PSTX1250 User Manual short form. The manual is available on: **<http://www.abb.com/lowvoltage>**

When this manual refers to <http://www.abb.com/lowvoltage>: Select the link Control Products, continue to Softstarters and type in the specified reference in the search field.

- Only authorized and appropriately trained personnel are permitted to install and make the electrical connection of the softstarter. Obey all laws and regulations.
- Only authorized personnel are permitted to do service and repair on the softstarter.
- Unauthorized repair will have an effect on the warranty.
- ABB personnel must obey the instructions in **ABB CISE 15.4**.
- This manual is a part of the PSTX softstarter. Always keep this manual available when you work with the PSTX softstarter.
- Examine the softstarter and the package when you unpack your new PSTX softstarter. If there are damages, please speak to the transportation company or the ABB reseller/office immediately.
- Do not lift the softstarter by the connection bars, as this can do damage to the softstarter.

## Safety notes

This manual uses these symbols



### CAUTION

Caution symbol indicates a danger that can result in personal injury.



### WARNING

Warning symbol indicates a danger that can result in damage to equipment or property.



### INFORMATION

Information sign tells the reader important facts and conditions.

## General safety information



### CAUTION

Only authorized and appropriately trained personnel are permitted to install and make the electrical connection of the softstarter in accordance with existing laws and regulations.



### WARNING

Examine the softstarter and the package when you unpack your new PSTX softstarter. If there are damages, please speak to the transportation company or the ABB reseller/office immediately.



### WARNING

Do not lift the softstarter by the connection bars, as this can damage the softstarter.



### WARNING

Only authorized and appropriately trained service personnel are permitted to do service and repair on the softstarter. Note: unauthorized repair will have an effect on the warranty.





# Softstarters Type PSTX

## Installation and commissioning manual



[1 Introduction](#)

1

[2 Quick start](#)

2

[3 Description](#)

3

[4 Installation](#)

4

[5 Connection](#)

5

[6 Human machine interface \(HMI\)](#)

6

[7 Functions](#)

7

[8 Communication](#)

8

[9 Maintenance](#)

9

[10 Troubleshooting](#)

10

[11 Wiring diagrams](#)

11

[12 Revision](#)

12

[13 Index](#)

13



# 1 Introduction

## 1.1 Documentation for softstarter PSTX30...PSTX12500

8

1

### 1.1.1 Installation and commissioning manual

1.2 Intended audience	9
1.3 Revision notes and other documents	9
1.4 Acronyms and abbreviations	9

This chapter gives an introduction to the softstarter documentation manuals and its chapters, releases, intended audience and it tells about concepts.

## 1.1 Documentation for softstarter PSTX30...PSTX1250

For the softstarter types PSTX30...PSTX1250, these manuals and catalogs are available:

### 1SFC132081M0201

This document. Installation and commissioning manual (English version). See **chapter 1.1.1 Installation and commissioning manual** more information.

### 1SFC132082M9901

Installation and commissioning manual - Short form. See **chapter 1.1.2 Installation and commissioning manual** - Short form for more information.

### 1SFC132009C0201

Catalog Softstarters Type PSTX and PSTB.

These documents are available online in PDF format. A printed version of the "Installation and commissioning - Short form" is included with the softstarter.

These manuals are available as online PDF-files:

**Table 1** Languages

Document ID	Language
1SFC132081M1301	AR Arabic
1SFC132081M2001	ZH Chinese
1SFC132081M4601	CS Czech
1SFC132081M0101	DE German
1SFC132081M0201	EN English
1SFC132081M0701	ES Spanish
1SFC132081M1801	FI Finnish
1SFC132081M0301	FR French
1SFC132081M0901	IT Italian
1SFC132081M3101	NL Dutch
1SFC132081M4001	PL Polish
1SFC132081M1601	PT Portuguese
1SFC132081M1101	RU Russian
1SFC132081M3401	SV Swedish
1SFC132081M1901	TR Turkish

These documents can be found at:  
**[www.abb.com/lowvoltage](http://www.abb.com/lowvoltage)**. Select the link Control Products on the site, and then continue to Softstarters.

## 1.1.1 Installation and commissioning manual

This manual, "Softstarters Type PSTX30...PSTX1250 Installation and commissioning manual", contains instructions on how to install, commission and maintain the softstarter. It gives procedures for mechanical and electrical installation, and installation of communication devices. It also gives information about energizing, settings and configuration.

To start quickly, see **chapter 2 Quick start** or use the short form manual (1SFC132082M9901). For chapter content, see **Table 2 Chapter contents** below:

**Table 2** Chapters contents

Chapters	Description
1. Introduction	Introduces the reader to this manual.
2. Quick start	Contains information for quick installation of the softstarter and get it into operation.
3. Description	Gives a description of the softstarter with specifications and a list of functions.
4. Installation	Contains information of the delivery, how to unpack and install the softstarter.
5. Connection	Contains instructions to make the electrical connections, and connections for communication devices.
6. Human-Machine Interface	Gives a description of the Human-Machine Interface. Gives a description of all settings and navigation of the menu systems.
7. Functions	Gives a description of all functions of the softstarter, with their minimum, maximum and default values. This chapter is intended for the experienced user.
8. Communication	Gives a description of the communication ports of the softstarter.
9. Maintenance	Gives a description of the necessary maintenance and how to do it.
10. Troubleshooting	Contains instructions to find and correct the most common errors.
11. Wiring diagrams	Contains electrical and application diagrams for the softstarter.
12. Revision	Shows all revisions of the manual
13. Index	Index of the content of this manual.

## 1.1.2 Installation and commissioning manual - Short form

The "Softstarters Type PSTX30...PSTX1250 Installation and commissioning manual - Short form" contains brief information about the softstarter:

- Installation
- Electrical connections
- Basic functions
- Troubleshooting

The short form contains the languages shown in **Table 1 Languages**. The short form has document ID 1SFC132082M9901.

## 1.2 Intended audience

### 1.2.1 General

The Installation and commissioning manual is intended for authorized installation, commissioning, and maintenance personnel.

### 1.2.2 Requirements for personnel

The installation personnel must have a basic knowledge in how to handle electrical equipment. The commissioning and maintenance personnel must have good experience in how to use electrical equipment. ABB personnel must obey the instructions in **ABB CISE 15.4**.

## 1.3 Revision notes and other documents

For latest information on revisions and other documents related to the PSTX softstarters, please see [www.abb.com/lowvoltage](http://www.abb.com/lowvoltage). Select the link Control Products on the site, and then continue to Softstarters.

## 1.4 Acronyms and abbreviations

**Table 3** Acronyms and abbreviations

Acronym/ Abbreviation	Description
BP	Bypass
DOL	Direct-on-line
EOL	Electronic overload
FB	Fieldbus
FBP	Fieldbus Plug
HMI	Human-Machine Interface
$I_e$	Rated operation current
IT	Information Technology
LED	Light Emitting Diode
PCBA	Printed Circuit Board Assembly
PLC	Programmable Logic Controller
PTC	Positive Temperature Coefficient
SC	Short Circuit
SCR	Silicon Controlled Rectifier (thyristor)
TOR	Top of Ramp (full voltage/Full-On)
$U_c$	Rated control circuit voltage, used for controlling the softstarter. *
$U_e$	Rated operation voltage on the motor (3 phase main voltage feeding the motor). *
$U_s$	Rated control supply voltage, feeding the electronics in the softstarter. *

\*) For definition see IEC 60947-1 edition 5.0



# 2 Quick start

2.1 Connection	12
2.2 Configuration	14
2.2.1 Basic set-up	14
2.2.2 Application set-up	14
2.3 How to start/stop the motor	15

This chapter is a short guide on how to connect, configure and start the softstarter in an easy way.

This product was carefully manufactured and tested, but damage can occur during transportation. Therefore, obey these instructions:



### CAUTION

Dangerous voltage: Can cause death or serious injury. Always set the power switch to off and lock out all power to this device before you start to work on the equipment.



### WARNING!

Installation of electrical connections must be done by authorized personnel. Obey all laws and regulations.



### WARNING!

Before you connect the softstarters PSTX30... PSTX170 to the operation voltage for the first time, apply control supply voltage to open the bypass relays. (see 2.1 Connection). This is necessary to avoid an accidental start of the equipment while it is connected to operation voltage.



### INFORMATION

ABB personnel must obey the instructions in ABB CISE 15.4.

## 2.1 Connection

1. To install the softstarter see chapter 4 Installation.



### INFORMATION

You can connect PSTX softstarters In Line **1** and Inside Delta **2**, see **Figure 2.1**.

2. Connect the main circuit: terminals 1L1 - 3L2 - 5L3 to the line side **1**, and terminals 2T1 - 4T2 - 6T3 to the motor side **2**, see **Figure 2.2**. Use wire connection for PSTX30...105, see **Figure 2.2** and terminal connection for PSTX142...570, see **Figure 2.3**.
3. Connect the line side to terminals 1L1, 3L2, 5L3. see **1** and **Figure 2.2**. Connect the motor to terminals 2T1, 4T2, 6T3 on the motor side, see **2** **Figure 2.2** and **Figure 2.3**.



### INFORMATION

Use only wires of the same dimension when you connect 2 wires to each terminal. (Possible for PSTX30...105 only).

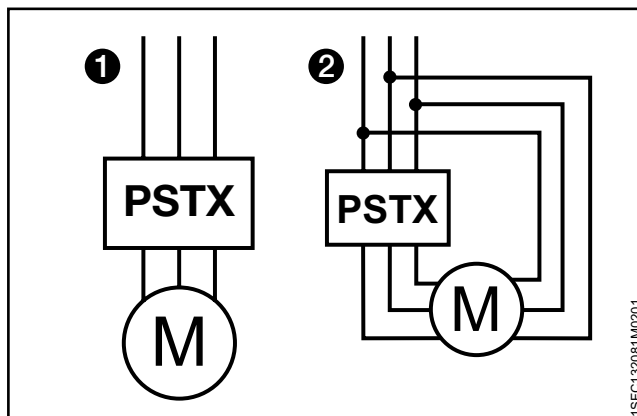


Figure 2.1

In Line (1) and Inside Delta (2) connection

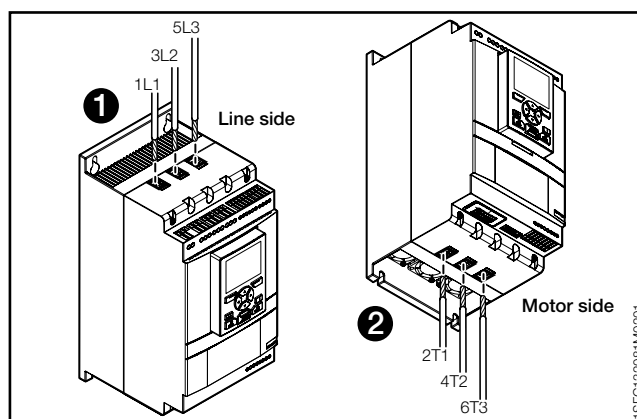


Figure 2.2

Terminal connection clamps

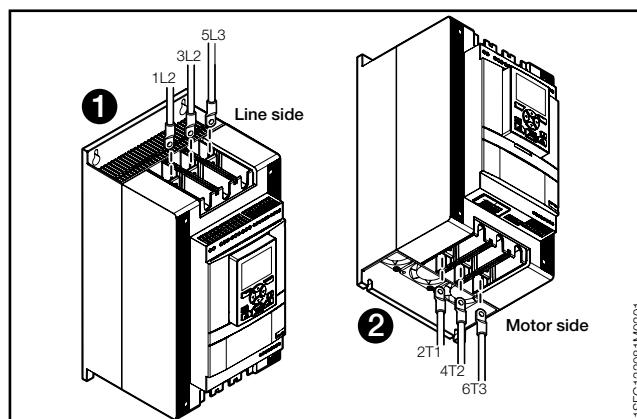


Figure 2.3

Terminal connection bars



4. Connect the control supply voltage (100-250V 50/60Hz) to terminal 1 and 2.
5. Connect the functional ground (terminal 22), to a ground point close to the softstarter, see **Figure 2.4**.



### INFORMATION

The ground is not a protective ground, it is a functional ground. The maximum length of the ground cable is 0.5 m. Connect the ground cable to the installation plate where the softstarter is attached. The installation plate must also be grounded.

### INFORMATION

Do not use functional ground in IT-networks, commonly found in for instance marine applications.


6. Look at the diagram, see **Figure 4.5**, and connect the start/stop circuits: terminal 13, 14, 18, 19 and 20/21, with the internal 24V DC terminal. When you use internal 24 V DC (terminals 20 or 21), the terminals 18 and 19 must be connected to each other. For external control circuit voltage, see **chapter 5.1.2.3 Start and Stop - terminals 13, 14, 18, 19, 20, 21**.




### WARNING

Use 24V DC only when you connect terminal 13, 14, 15, 16 and 17. Other voltages can cause damage to the softstarter and the warranty will no longer be valid. For more information about terminal 15, 16 and 17, see **chapter 5.1.2.4 Programmable inputs - terminals 15, 16 and 17**.


7. Connect terminals 4, 5, 6, 7, 8, 9, 10, 11 and 12 to use the signal output relays. These are potential-free contacts for maximum 250 V AC, 1.5 A AC-15 and 30 V DC, 5 A DC-12. See **Figure 2.6**.
8. Make sure that the operation voltage and control supply voltage agree with the softstarter ratings.
9. Set the control supply voltage switch to ON.
10. The green “Ready” LED on the HMI flashes, see **Figure 2.7**.
11. The language settings appear on the display. Select your language and push the selection soft key “OK”. The HMI now downloads the language data from the softstarter. This can take some minutes. When this is done the HMI shows the Home view.
12. Configure applicable parameters as given in **chapter 7 Functions** or use the assistants as given in **chapter 2.2 Configuration**.

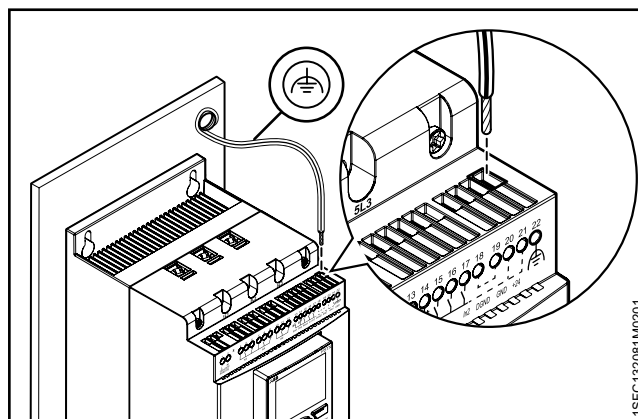


**Figure 2.4**  
Functional ground, terminal 22

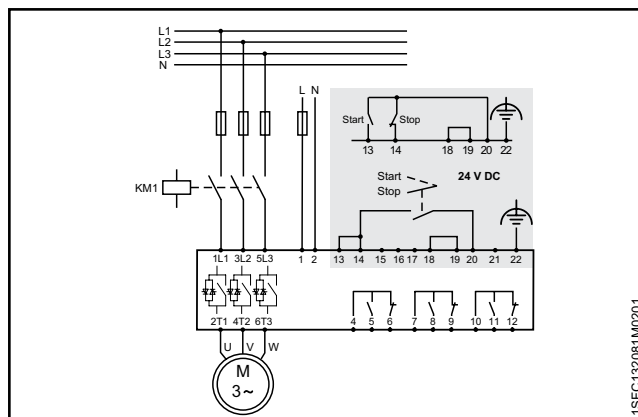

**Figure 2.5**  
Circuit diagram (Fuse and contactor version)

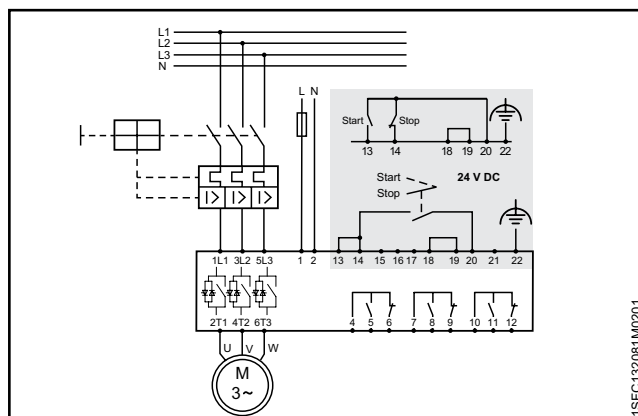

**Figure 2.6**  
Circuit diagram (MCCB version)

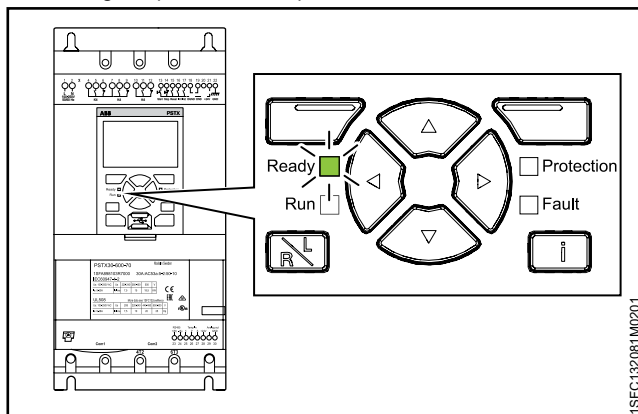

**Figure 2.7**  
Flashing “Ready” LED

## 2.2 Configuration



 
 


 


 


 

 
For a quick configuration of the softstarter, use the Assistants menu.

The Assistants menus are divided into:







- **Basic set-up**
  - The Basic set-up menu is divided into 4 steps:
    1. Language
    2. Date and time
    3. Motor data
    4. System configuration
- **Application set-up**
  - The Application set-up is divided into 3 steps:
    1. Application set-up
    2. Keep/Change values
    3. Tune settings

### 2.2.1 Basic set-up

  You see this set-up when you start the softstarter. To disable this set-up, see step 6 below.

1. Find the Assistants menu by pushing  "Menu". Scroll to Assistants with the Navigation keys. Push  "Select" to enter the Assistants menu.
2. Scroll to the Basic set-up menu with the Navigation keys. Push  "Select" to enter the menu.
3. The Basic set-up starts with step 1 of 5, Language. Push  "Edit" to change language. Use the Navigation keys to select language and then push  "Save".
4. Push  to enter step 2(5), Date and time. Push  "Edit" and use the Navigation keys to edit date and time, then push  "Save".
5. Push  to enter step 3(5), Motor data. Push  "Edit" to change the Motor rated current  $I_e$ . Use the Navigation keys to change the value and then push  "Save".
6. Push  to enter step 4(5), System configuration. Here you can set if the softstarter enters the Basic set-up at power on or not. Use the Navigation keys to select Yes or No and then push  "Save".
7. Push  to enter step 5(5) and then Push  "Done" to finish the Basic setup. For more settings, enter Application set-up.




 
## 2.2.2 Application set-up

1. Find the Assistants menu from the Home view by pushing  "Menu". Scroll to Assistants with the Navigation keys. Push  "Select" to enter the Assistants menu.
2. Scroll to the Application set-up menu with the Navigation keys and then enter the menu by pushing  "Select".
3. The Application set-up will start with step 1, Application type. Scroll to the appropriate application type and then push  "Select". For a full Application list, see **chapter 7.22 Complete parameter list**.
4. Push  to enter step 2, Values. You can select "Keep actual values" or "Change to recommended values". Scroll to the selection of your choice and Push  "Select" to apply.



### WARNING!

Note that your saved parameter values are lost if you select "Change to recommended values".

5. Push  to enter step 3, Tune settings. In most cases the recommended values are sufficient, but sometimes fine tuning is necessary. For fine tuning, push  "Edit" and then use the navigation keys to set:
  - Start ramp time: 1 - 120s
  - Stop ramp time: 1 - 120s
  - Start ramp initial level: 10 - 99%
  - Stop ramp end level: 10 - 99%
  - Current limit level: 1.5 - 7.5 x  $I_e$
  - Start mode: Voltage ramp, Torque ramp or Full voltage start
  - Stop mode: No ramp, Voltage ramp, Torque ramp, Dynamic brake
6. Push  and then push  "Done" to finish the Application set-up. If necessary, fine tuning can also be done in the Parameters menu.

## 2.3 How to start/stop the motor



### CAUTION

Dangerous voltage: Can cause death or serious injury. Always set the power switch to off and lock out all power to this device before you start to work on the equipment.



### WARNING!

Installation of electrical connections must be done by authorized personnel. Obey all laws and regulations.



### WARNING!

Before you connect the softstarters PSTX30... PSTX170 to the operation voltage for the first time, apply control supply voltage to open the bypass relays. (see 2.1 Connection). This is necessary to avoid an accidental start of the equipment while it is connected to operation voltage.



### INFORMATION

ABB personnel must obey the instructions in **ABB CISE 15.4.**

1. Set the operation voltage switch to ON.
2. To start the softstarter from the keypad, push the R/L-key to select local control, then push the Start key on the keypad. Push Stop to stop the softstarter
3. To start from hard wire control, push the R/L-key to select hard wire control, then push the remote Start key. Push Stop to stop the softstarter.



# 3 Description

## 3.1 Overview

	18
3.1.1 Operation functions	18
3.1.2 Protection functions	18
3.1.2.1 User defined protection	19
3.1.3 Warning functions	19
3.1.4 Fault detection functions	19
3.1.5 Softstarter overview	20
3.1.6 Type designation	21
3.1.7 Environmental influence	21
3.1.8 Specifications	21

## 3.2 Technical data

	22
3.2.1 General	22
3.2.2 Technical data for external keypad	22
3.2.3 Semi-conductor fuses	22
3.2.4 Weights	22
3.2.5 Softstarter ratings	23
3.2.6 Dimensions	25

This chapter gives a description of the softstarter in general, specifications and available components and spare parts.

## 3.1 Overview

The PSTX softstarter has the latest technology for soft start and soft stop of squirrel cage motors. The softstarter has multiple advanced motor protection features as standard.



### WARNING

If using the Rated Operational Voltage  $U_e$  (Phase /N) as source for Control Supply Voltage  $U_s$  make sure to not exceed  $U_s$  250V AC, 50/60Hz.

### Bypass

Softstarter range PSTX30...1250 have integrated bypass components.

### User interface

The keypad on the front has Navigation keys, Selection soft keys, Start and Stop keys, Local or Remote key, Information key and a clear information display. You can select 15 user languages.

You can control the softstarter in 3 different ways:

- Hardwire inputs control
- Keypad control (either attached to the softstarter front or detached and connected with the cable included)
- Fieldbus communication interface (by built in Modbus, Anybus module or the FieldBus Plug with adapter)

You can use only one type of control at the same time. Default selection is hardware inputs control.



### INFORMATION

Keypad control has the highest priority and overrides all other control methods.

### Fans

The integrated fans for cooling work during ramping (start/stop) and when the heatsink temperature is too high. A thermistor monitors the temperature.

## 3.1.1 Operation functions

### Available functions are listed below:

- Voltage start ramp
- Voltage stop ramp
- Torque start ramp
- Torque stop ramp
- Full voltage start
- No ramp
- Stand-still brake
- Current limit
- Kick start
- Slow speed
- Motor heating
- Sequence start
- Automatic restart

## 3.1.2 Protection functions

The PSTX softstarter has protection functions to protect the softstarter, motor and other equipment. All protections can have automatic reset or manual reset. You can enable or disable the protection.

### Available protections are listed below:

- EOL protection
- Locked rotor protection
- Phase reversal protection
- Current imbalance protection
- Overvoltage protection
- Under voltage protection
- Ground fault protection
- Voltage imbalance protection
- Voltage outputs protection
- External thermal sensor - PT100 protection
- External thermal sensor - PTC protection
- Power factor underload protection
- Current underload protection
- User defined protection
- Too long current limit protection
- Bypass open protection
- Fieldbus failure protection
- Extension IO failure protection
- HMI failure protection
- Max number of starts

- Frequency range protection
- Phase reversal protection
- Too long start time protection
- Auto restart protection

#### 3.1.2.1 User defined protection

You can use your own specified protection, with the programmable digital input and an external device/sensor. The protection operates when the input signal comes at high level (fieldbus or physical I/O).

### 3.1.3 Warning functions

The softstarter has warning functions for potential risks, that operate before a protection function operates.

A warning cannot stop the softstarter. A reset of a warning is not necessary.

You can change the warning level and other parameters for the warning functions. Warnings are stored in the event list.

#### Available warnings are listed below:

- Current imbalance warning
- Overvoltage warning
- Under voltage warning
- EOL time-to-trip warning
- EOL warning
- Total Harmonic Distortion (THD) warning
- Voltage imbalance warning
- Power factor underload warning
- Current underload warning
- Fans fault warning
- Locked rotor warning
- Thyristor overload warning
- Short circuit warning
- Number of starts warning
- Modbus configuration warning
- Phase loss warning
- Motor runtime warning

### 3.1.4 Fault detection functions

The softstarter has a number of fault detection functions to signal malfunction at softstarter, motor or power network level. The softstarter identifies external and internal faults. The user cannot disable fault detection functions except for Emergency mode, chapter 7.20.1.

#### Available faults are listed below:

- Phase loss fault
- High current fault
- Low supply voltage fault
- Bad network fault
- Thyristor overload fault
- Short circuit fault
- Shunt fault
- Unspecified fault
- Heatsink overtemperature fault
- Open circuit thyristor fault
- Faulty usage
- Connection fault

### 3.1.5 Softstarter overview

Change the settings through Keypad and Fieldbus communication.

Use the keypad to change settings for each parameter alone or as a selection of default parameters for different applications.

Most parameters have one possible setting, but some parameters have extra settings for sequence start. The default parameter settings are stored in the unit for a reset to default.

When the fieldbus communication is selected, most parameters can also be changed from this interface.

Overview, See **Figure 3.1**.

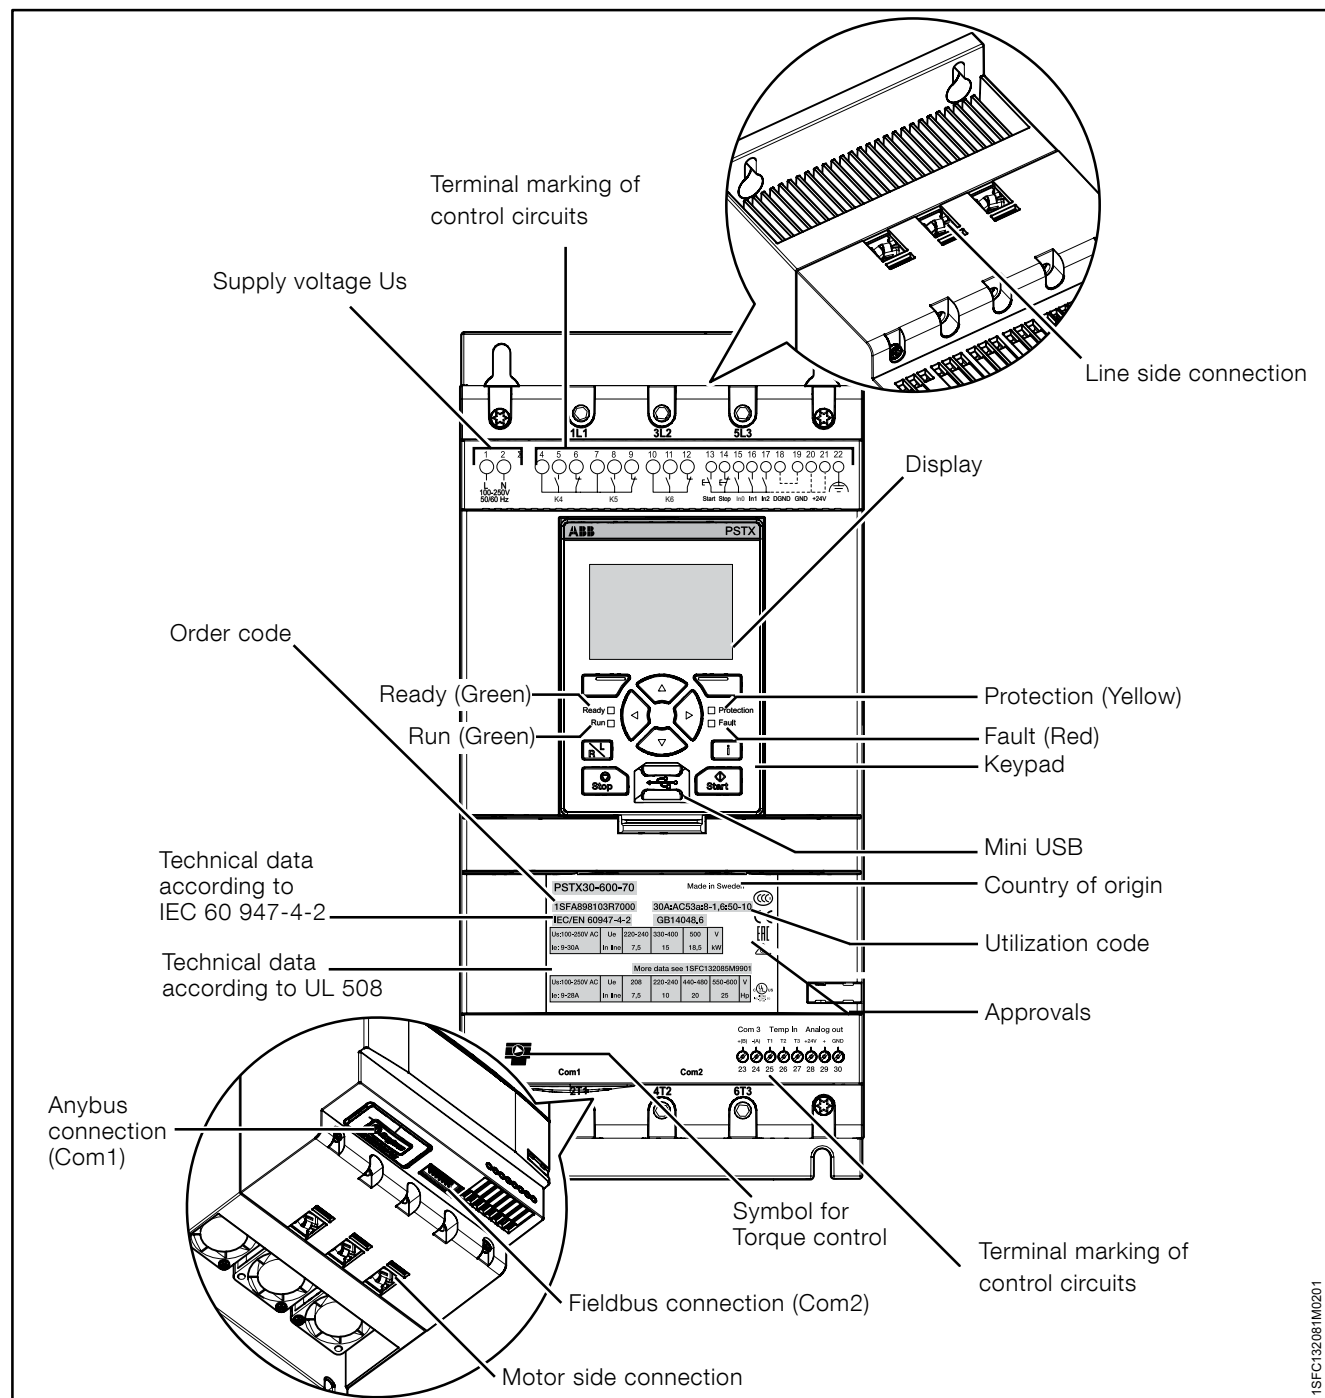


Figure 3.1

Softstarter overview



Table 1 Type designation	
Designation (i.e. PSTX370-600-70)	Description
PSTX	Softstarter type
370	Current rating 370 = 370A
600	Main voltage 600 = 208 - 600V 50/60 Hz 690 = 400 - 690V 50/60 Hz
70	Supply Voltage 70 = 100 - 250V 50/60 Hz

Type designation, see **Figure 3.2**.

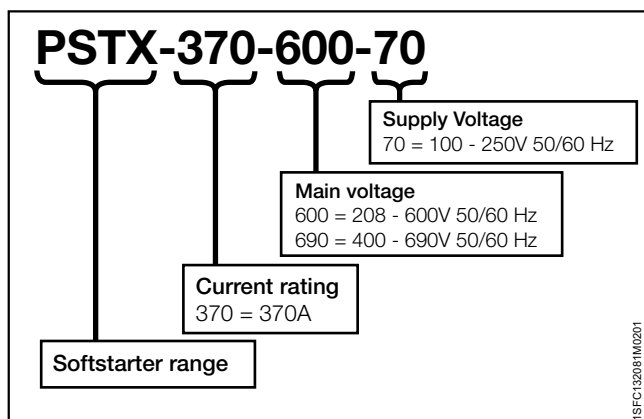


Figure 3.2

Type designation

### 3.1.7 Environmental influence

The product is designed to reduce the effects on the environment during manufacturing and use of the product.

Most of the materials used are recyclable. Obey local laws when you handle and recycle the materials.

You can find further information about used material and recycling of the product at:

[www.abb.com/lowvoltage](http://www.abb.com/lowvoltage)

Table 2 Specifications		
General data	Description	
Degree of protection:	<b>PSTX30...105:</b>	<b>PSTX142...1250:</b>
Main circuit	IP10	IP00
Degree of protection:	<b>PSTX30...105:</b>	<b>PSTX142...1250:</b>
Supply and control circuit	IP20	IP20
Operating position	Vertical at $\pm 30^\circ$	
Ambient temperature	<b>Storage:</b> -40 °C to +70 °C (-104 °F to 140 °F) <b>Operation:</b> -25 °C to +60 °C (-77 °F to 104 °F) <b>De-rating:</b> +40 °C to +60 °C (104 °F to 140 °F) with derating 0,6%/1° C (0,33%/1grF)	
Altitude	1000 m (3281 ft.) above sea level without derating. 1000 - 4000 m (3281 - 13123 ft.) with derating 0,7%/100 m (0,22%/100ft)	
Pollution degree	3	
Relative humidity	5 - 95% (non condensing)	
Standards	IEC 60529 IEC 60947-1 IEC60947-4-2	
Standards UL	UL508	
PTC input	IEC 60947-8 Mark A detectors DIN 44081 and DIN 44082	
EMC	IEC 60947-4-2 Class A <b>1</b>	
Marine approvals	Speak to your ABB sales office	

**1** The softstarter is designed for class A equipment. Use of the product in domestic environments can cause radio interference. If so, it can be necessary to use more mitigation procedures.

## 3.2 Technical data

### 3.2.1 General

**Table 3** General

General data	Description
24 V output	24 V ± 5% Max 250 mA
Rated insulation voltage, U <sub>i</sub>	600 V / 690 V
Rated operation voltage, U <sub>e</sub>	208-600 / 690 V, 50 / 60 Hz
Rated supply voltage, U <sub>s</sub>	100-250 V, 50 / 60 Hz
Voltage tolerance	+10% to -15%
Rated frequency	50 / 60 Hz
Frequency tolerances	± 10%
Rated impulse withstand voltage	6 kV Operation circuit 4 kV Control and supply circuit
Relay outputs	3 programmable
Number of controlled phases	3
Inputs	Start, stop, 3 programmable inputs (Digital I/O: In0, In1, In2), temperature sensor input.
Outputs	Relay outputs: K4 K5 K6.
Output relay performance	250 V AC, I <sub>th</sub> = 5A, I <sub>e</sub> = 1.5A (AC-15)
Analog output	4-20 mA, 0-20 mA, 0-10 V, 0-10 mA
PTC input	2825 ohm ± 20% switch off resistance 1200 ohm ± 20% switch on resistance
Cooling system	Fan
Recommended fuse	6 A Delayed
Control supply circuit	MCB use C characteristics
Communication	3 Fieldbus ports, Extension I/O
Communication protocols	DeviceNet / Profibus DP / Modbus / EtherNET/IP / Modbus TCP/ Profinet

### 3.2.2 Technical data for external keypad

**Table 4** Technical data for external keypad

Display	Display type
Status indicating LEDs	<b>Ready:</b> Green <b>Run:</b> Green <b>Protection:</b> Yellow <b>Fault:</b> Red
Ambient temperature	<b>Storage:</b> -25 °C to +70 °C (-13 °F to 158 °F) <b>Operation:</b> -25 °C to +60 °C (-13 °F to 140 °F)
Degree of protection	IP66
UL approval	Type 1 Type 4X Type 12
Marine approvals	Speak to your ABB sales office

### 3.2.3 Semi-conductor fuses



#### WARNING!

Semiconductor fuses must be used to keep the warranty on the thyristors.



#### INFORMATION

To achieve a type 2 coordination, semiconductor fuses must be used.

**Table 5** Semiconductor fuses

Type	U <sub>e</sub> (V)	I <sub>e</sub> (A)	Bussman Knife Fuses (DIN43 620)		
			Size	A	Type
PSTX30	500-690	30	000	100	170M1567
PSTX37	500-690	37	000	125	170M1568
PSTX45	500-690	45	000	160	170M1569
PSTX60	500-690	60	000	160	170M1569
PSTX72	500-690	72	000	250	170M1571
PSTX85	500-690	85	000	315	170M1572
PSTX105	500-690	106	1*	400	170M3819
PSTX142	500-690	143	2	500	170M5810
PSTX170	500-690	171	2	630	170M5812
PSTX210	500-690	210	2	630	170M5812
PSTX250	500-690	250	2	700	170M5813
PSTX300	500-690	300	3	800	170M6812
PSTX370	500-690	370	3	900	170M6813
PSTX370	500	370	3	2000	170M6021
PSTX370	690	370	3	1600	170M6019

### 3.2.4 Weights

**Table 6** Weights


Type	Weight in kg	Weight in lbs
PSTX30...105	6,1	13,5
PSTX142...170	9,6	21,2
PSTX210...370	12,7	27,9
PSTX470	25.5	55.1
PSTX570	27.5	59.5
PSTX720 ...840	46.2	101.4
PSTX1050	64.5	141.1
PSTX1250	65	143.3

### 3.2.5 Softstarter ratings

PSTX30...370    Temp ≤ + 40 °C (104 °F), 4 * Ie in 10 sec.													
IEC				Motor power when connected In Line				Motor power when connected Inside Delta				Rated current Ie	
				220- 230V	380- 400V	500V	690V	220- 230V	380- 400V	500V	690V	In Line	Inside Delta
Softstarter type		Order number	Ie range	kW	kW	kW	kW	kW	kW	kW	kW	A	A
PSTX30...170	PSTX30-600-70	1SFA898103R7000	9-30A	7,5	15	18,5		12,5	25	30		30	52
	PSTX30-690-70	1SFA898203R7000	9-30A		15	18,5	25		25	30	45	30	52
	PSTX37-600-70	1SFA898104R7000	11,1-37A	9	18,5	22		15	30	37		37	64
	PSTX37-690-70	1SFA898204R7000	11,1-37A		18,5	22	30		30	37	55	37	64
	PSTX45-600-70	1SFA898105R7000	13,5-45A	12,5	22	25		25	37	45		45	76
	PSTX45-690-70	1SFA898205R7000	13,5-45A		22	25	37		37	45	59	45	76
	PSTX60-600-70	1SFA898106R7000	18-60A	15	30	37		30	55	75		60	105
	PSTX60-690-70	1SFA898206R7000	18-60A		30	37	55		55	75	90	60	105
	PSTX72-600-70	1SFA898107R7000	21,6-72A	18,5	37	45		37	59	80		72	124
	PSTX72-690-70	1SFA898207R7000	21,6-72A		37	45	59		59	80	110	72	124
	PSTX85-600-70	1SFA898108R7000	25,5-85A	22	45	55		40	75	90		85	147
	PSTX85-690-70	1SFA898208R7000	25,5-85A		45	55	75		75	90	132	85	147
	PSTX105-600-70	1SFA898109R7000	31,8-106A	30	55	75		55	90	110		106	181
	PSTX105-690-70	1SFA898209R7000	31,8-106A		55	75	90		90	110	160	106	181
PSTX142-170	PSTX142-600-70	1SFA898110R7000	42,9-143A	37	75	90		75	132	160		143	245
	PSTX142-690-70	1SFA898210R7000	42,9-143A		75	90	132		132	160	220	143	245
	PSTX170-600-70	1SFA898111R7000	51,3-171A	45	90	110		90	160	200		171	300
	PSTX170-690-70	1SFA898211R7000	51,3-171A		90	110	160		160	200	257	171	300
PSTX210...370	PSTX210-600-70	1SFA898112R7000	63-210A	59	110	132		102	184	250		210	360
	PSTX210-690-70	1SFA898212R7000	63-210A		110	132	184		184	250	315	210	360
	PSTX250-600-70	1SFA898113R7000	75-250A	75	132	160		132	220	295		250	430
	PSTX250-690-70	1SFA898213R7000	75-250A		132	160	220		220	295	400	250	430
	PSTX300-600-70	1SFA898114R7000	90-300A	90	160	200		160	257	355		300	515
	PSTX300-690-70	1SFA898214R7000	90-300A		160	200	257		257	355	500	300	515
	PSTX370-600-70	1SFA898115R7000	111-370A	110	200	257		200	355	450		370	640
	PSTX370-690-70	1SFA898215R7000	111-370A		200	257	355		355	450	600	370	640
PSTX470...570	PSTX470-600-70	1SFA898116R7000	141-470A	132	250	315		250	450	600		470	814
	PSTX470-690-70	1SFA898216R7000	141-470A		250	315	450		450	600	800	470	814
	PSTX570-600-70	1SFA898117R7000	171-570A	160	315	400		295	540	700		570	987
	PSTX570-690-70	1SFA898217R7000	171-570A		315	400	560		540	700	960	570	987
PSTX720...840	PSTX720-600-70	1SFA898118R7000	216-720A	200	400	500		355	710	880		720	1247
	PSTX720-690-70	1SFA898218R7000	216-720A		400	500	710		710	880	1200	720	1247
	PSTX840-600-70	1SFA898119R7000	252-840A	250	450	600		450	800	1000		840	1455
	PSTX840-690-70	1SFA898219R7000	252-840A		450	600	800		800	1000	1400	840	1455
PSTX1050...1250	PSTX1050-600-70	1SFA898120R7000	315-1050A	315	560	730		500	1000	1250		1050	1810
	PSTX1050-690-70	1SFA898220R7000	315-1050A		560	730	1000		1000	1250	1700	1050	1810
	PSTX1250-600-70	1SFA898121R7000	375-1250A	400	710	880		670	1200	1500		1250	2160
	PSTX1250-690-70	1SFA898221R7000	375-1250A		710	880	1200		1200	1500	2000	1250	2160

1) All data for 40°C ambient. For temperatures above 40°C up to maximum 50°C. reduce rated current with 0.8% per degree C.

**PSTX30...370** Temp ≤ + 40 °C (104 °F), 4 \* Ie in 10 sec.

			Motor power when connected In Line				Motor power when connected Inside Delta				Rated current I <sub>e</sub>	
			208V	220- 240V	440- 480V	550- 600V	208V	220- 240V	440- 480V	550- 600V	In Line	Inside Delta
Softstarter type			hp	hp	hp	hp	hp	hp	hp	hp	A	A
PSTX30...170	PSTX30-600-70	1SFA898103R7000	7,5	10	20	25	10	15	30	40	28	48
	PSTX30-690-70	1SFA898203R7000			20	25			30	40	28	48
	PSTX37-600-70	1SFA898104R7000	10	10	25	30	15	20	40	50	34	58
	PSTX37-690-70	1SFA898204R7000			25	30			40	50	34	58
	PSTX45-600-70	1SFA898105R7000	10	15	30	40	20	25	50	60	42	72
	PSTX45-690-70	1SFA898205R7000			30	40			50	60	42	72
	PSTX60-600-70	1SFA898106R7000	20	20	40	50	30	40	75	100	60	103
	PSTX60-690-70	1SFA898206R7000			40	50			75	100	60	103
	PSTX72-600-70	1SFA898107R7000	20	25	50	60	30	40	75	100	68	117
	PSTX72-690-70	1SFA898207R7000			50	60			75	100	68	117
	PSTX85-600-70	1SFA898108R7000	25	30	60	75	40	50	100	125	80	138
	PSTX85-690-70	1SFA898208R7000			60	75			100	125	80	138
PSTX105-600-70	1SFA898109R7000	30	40	75	100	60	60	150	150	104	180	
PSTX105-690-70	1SFA898209R7000			75	100			150	150	104	180	
PSTX142-170	PSTX142-600-70	1SFA898110R7000	40	50	100	125	75	75	150	200	130	225
	PSTX142-690-70	1SFA898210R7000			100	125			150	200	130	225
	PSTX170-600-70	1SFA898111R7000	50	60	125	150	75	100	200	250	169	292
	PSTX170-690-70	1SFA898211R7000			125	150			200	250	169	292
PSTX210...370	PSTX210-600-70	1SFA898112R7000	60	75	150	200	100	125	250	300	192	332
	PSTX210-690-70	1SFA898212R7000			150	200			250	300	192	332
	PSTX250-600-70	1SFA898113R7000	75	100	200	250	150	150	350	450	248	429
	PSTX250-690-70	1SFA898213R7000			200	250			350	450	248	429
	PSTX300-600-70	1SFA898114R7000	100	100	250	300	150	200	450	500	302	523
	PSTX300-690-70	1SFA898214R7000			250	300			450	500	302	523
	PSTX370-600-70	1SFA898115R7000	125	150	300	350	200	250	500	600	361	625
	PSTX370-690-70	1SFA898215R7000			300	350			500	600	361	625
PSTX470...570	PSTX470-600-70	1SFA898116R7000	150	200	400	500	250	300	600	700	480	830
	PSTX470-690-70	1SFA898216R7000			400	500			600	700	480	830
	PSTX570-600-70	1SFA898117R7000	200	200	500	600	300	350	700	800	590	1020
	PSTX570-690-70	1SFA898217R7000			500	600			700	800	590	1020
PSTX720...840	PSTX720-600-70	1SFA898118R7000	250	300	600	700	400	500	1000	1200	720	1240
	PSTX720-690-70	1SFA898218R7000			600	700			1000	1200	720	1240
	PSTX840-600-70	1SFA898119R7000	300	350	700	800	500	600	1200	1500	840	1450
	PSTX840-690-70	1SFA898219R7000			700	800			1200	1500	840	1450
PSTX1050...1250	PSTX1050-600-70	1SFA898120R7000	400	450	900	1000	600	700	1500	1900	1062	1830
	PSTX1050-690-70	1SFA898220R7000			900	1000			1500	1900	1062	1830
	PSTX1250-600-70	1SFA898121R7000	400	500	1000	1200	800	900	1800	2000	1250	2160
	PSTX1250-690-70	1SFA898221R7000			1000	1200			1800	2000	1250	2160

4 \* Ie in 10 sec

Ordering data according to UL (40°C ambient)

### PSTX30...105

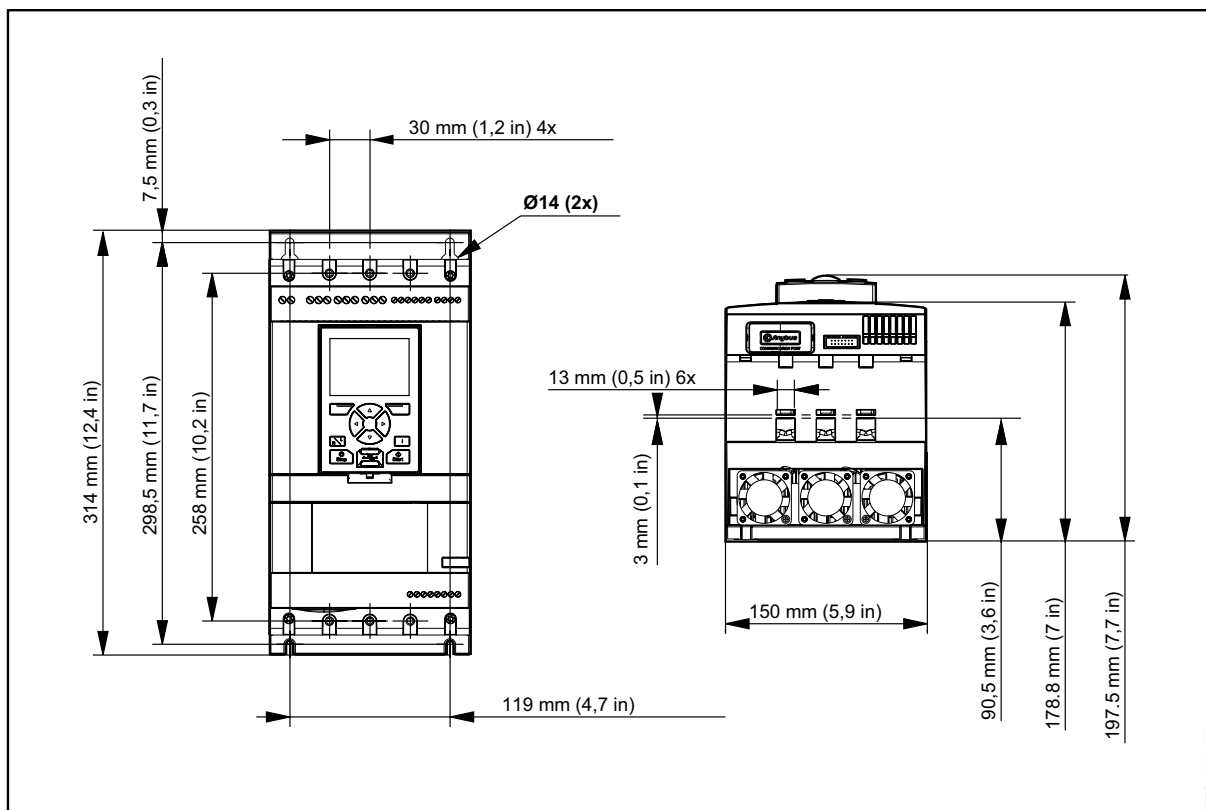


Figure 3.3

Dimensions PSTX30...105

### PSTX142...170

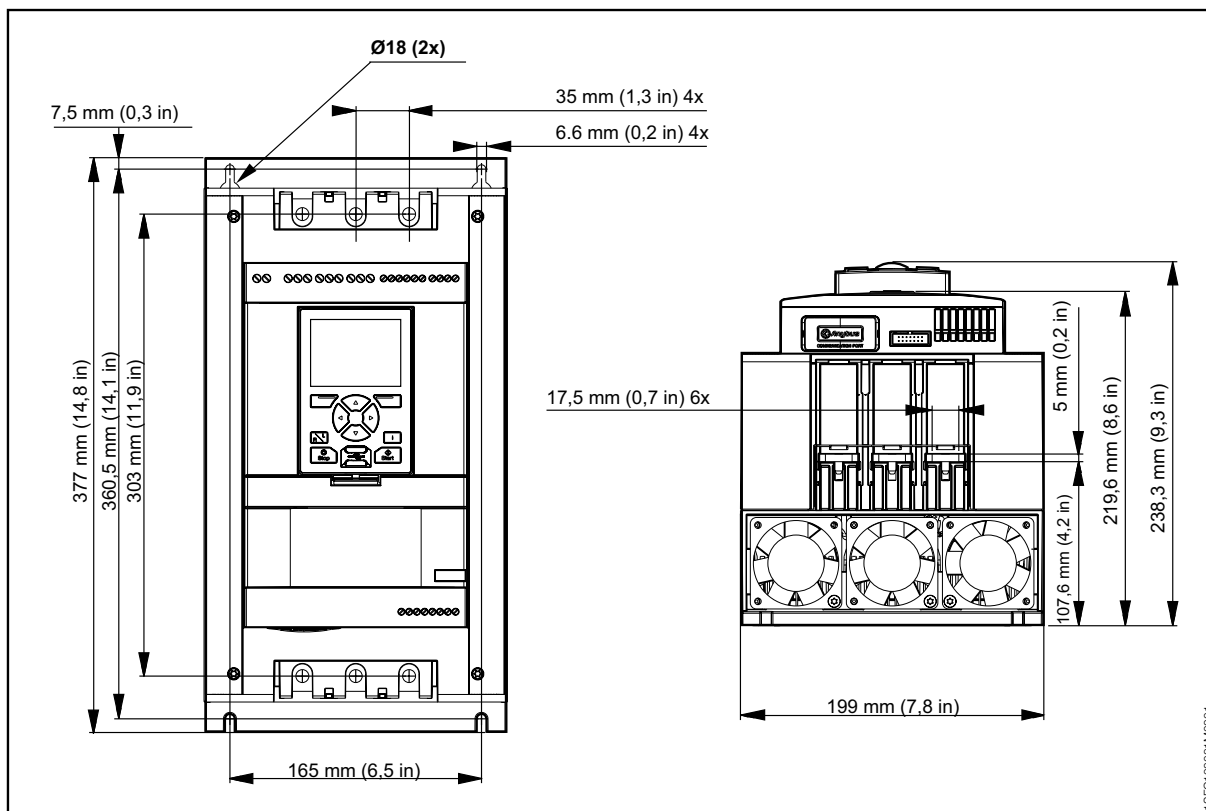


Figure 3.4

Dimensions PSTX142...170

## PSTX210...370

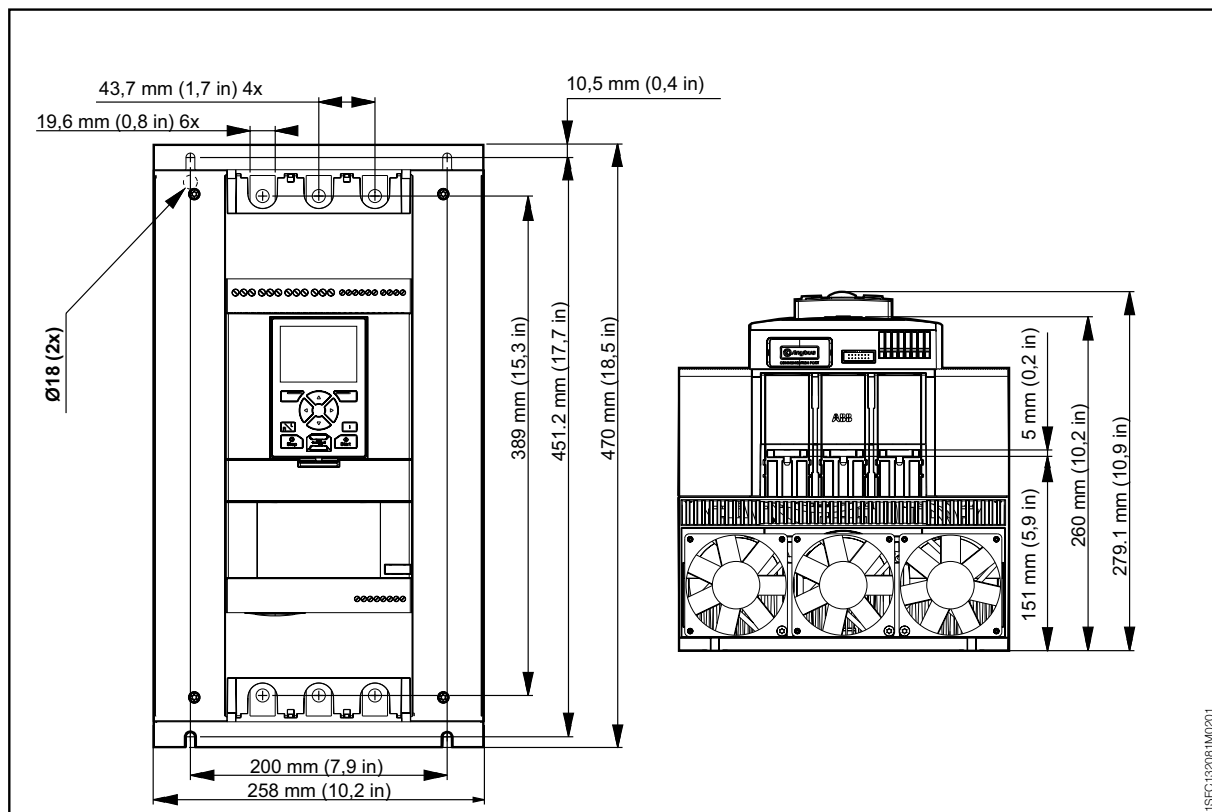


Figure 3.5  
Dimensions PSTX210...370

## PSTX470...570

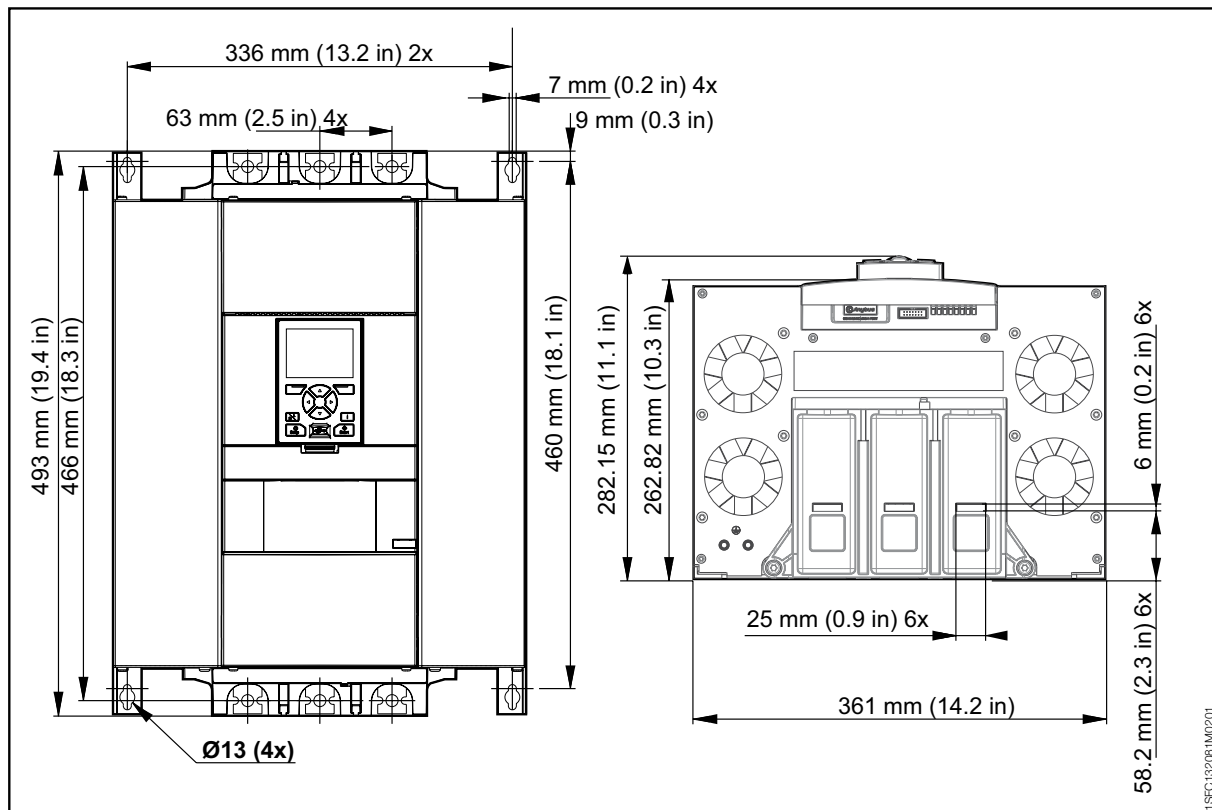


Figure 3.6  
Dimensions PSTX470...570

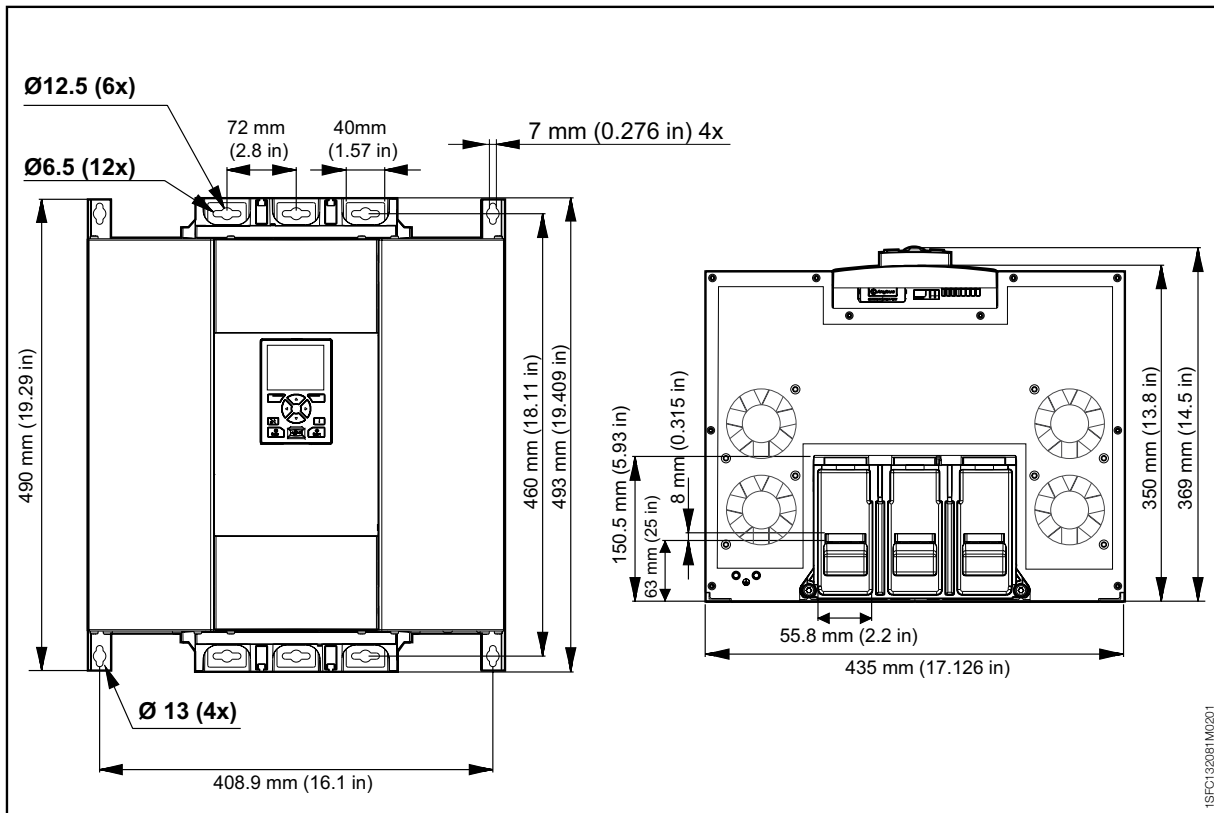


Figure 3.7

Dimensions PSTX720..840

### PSTX1050...1250

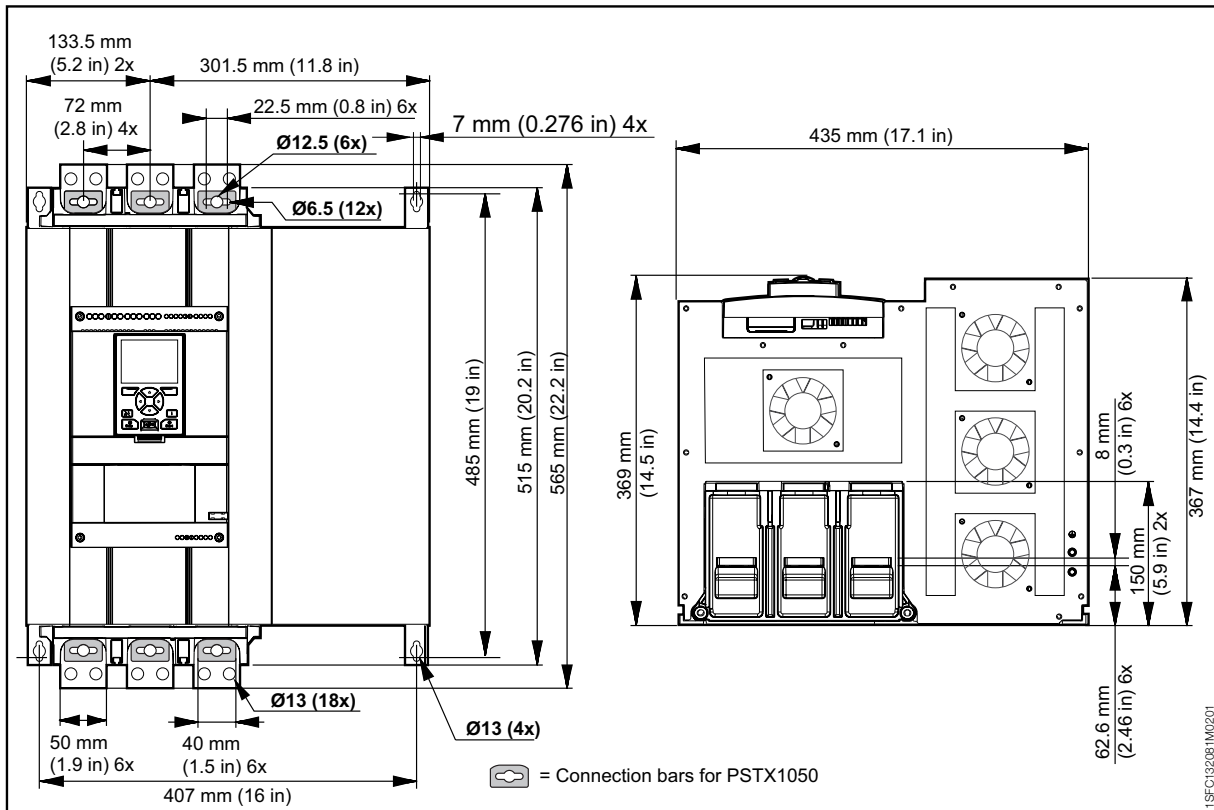


Figure 3.8

Dimensions PSTX1050..1250





# 4 Installation

4.1 Receive, unpack and examine	30
<hr/>	
4.2 Install	31
<hr/>	
4.2.1 Lifting the softstarter	31
4.2.2 Minimum distance to wall/front	31
4.2.3 Minimum enclosure dimensions	32
4.2.4 Maximum installation angle	32
4.2.5 Dimensions and drilling plan	32
4.2.6 Movable keypad	32
4.2.6.1 Installation Movable HMI	33

This chapter contains instructions to receive and install the softstarter.



### WARNING

If you do not obey these instructions, it can cause the softstarter to overheat or not operate correctly.

## 4.1 Receive, unpack and examine



### WARNING

Do not lift the softstarter by the connection bars, as this can damage the softstarter.




### WARNING

Risk of damage to property. Make sure that no liquids, dust or conductive parts can go into the softstarter.

Make sure that the package is placed with the correct side up, see **Figure 4.1**.

- Remove the transport casing.
- Make sure that the order code agrees with the delivery documents.
- Make sure that all items are included, see the delivery note. See **Table 1 Delivery note**.
- Examine the softstarter and the packaging. In case of damages, speak to the transport company or the ABB reseller/Office immediately.
- Keep the softstarter in its packaging until installation.

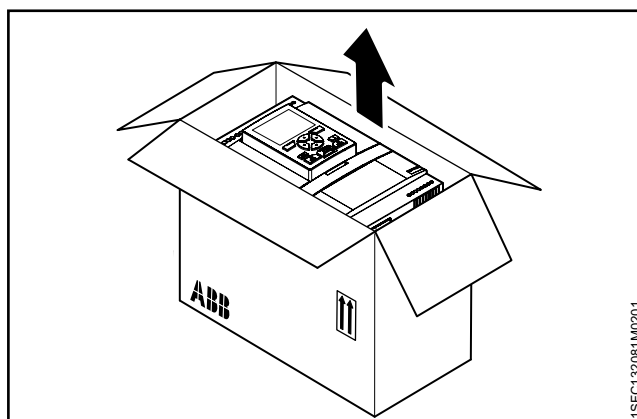

**Figure 4.1**

Receiving, unpacking and checking

**Table 1** Delivery note

Softstarter type	Items included with the softstarter
PSTX30...105	<ul style="list-style-type: none"> <li>• 1SFB262001D1000 – HMI Mounting Kit</li> <li>• 1SFC132082M9901 – PSTX Short Form Manual</li> </ul>
PSTX142...170	<ul style="list-style-type: none"> <li>• 1SFB262001D1000 – HMI Mounting Kit</li> <li>• 1SFC132082M9901 – PSTX Short Form Manual</li> <li>• 1SFA899221R1002 – Terminal Kit # PSLE-185</li> </ul>
PSTX210...370	<ul style="list-style-type: none"> <li>• 1SFB262001D1000 – HMI Mounting Kit</li> <li>• 1SFC132082M9901 – PSTX Short Form Manual</li> <li>• 1SFA899221R1003 – Terminal Kit # PSLE-300</li> </ul>
PSTX470...570	<ul style="list-style-type: none"> <li>• 1SFB262001D1000 – HMI Mounting Kit</li> <li>• 1SFC132082M9901 – PSTX Short Form Manual</li> <li>• 1SFA899221R1004 – Terminal Kit # PSLE-460</li> </ul>
PSTX720...840	<ul style="list-style-type: none"> <li>• 11SFB262001D1000 – HMI Mounting Kit</li> <li>• 1SFC132082M9901 – PSTX Short Form Manual</li> <li>• 1SFA899221R1005 - Terminal Kit#PSLE-750</li> <li>• 2191323-A - Mounting kit</li> </ul>
PSTX1050...1250	<ul style="list-style-type: none"> <li>• 11SFB262001D1000 – HMI Mounting Kit</li> <li>• 1SFC132082M9901 – PSTX Short Form Manual</li> <li>• 1SFA899221R1005 - Terminal Kit#PSLE-750</li> <li>• 2191323-A - Mounting kit</li> </ul>

## 4.2 Install

The softstarters are available in different physical sizes and all of them should be mounted with M6 bolts, or bolts with the same dimension and strength.

### 4.2.1 Lifting the softstarter

Use lifting equipment to install the models PSTX470...1250. See **chapter 3.2.4 Weights**, for weights. You can install the PSTX30...370 without lifting equipment

### 4.2.2 Minimum distance to wall/front



#### WARNING

Risk of damage to property. Make sure that no liquids, dust or conductive parts enter the softstarter.



#### WARNING

If you do not obey these instructions, this can cause the softstarter to overheat or not operate correctly.

For sufficient cooling, install the softstarter vertically. Prefect blockage of the airways, see **Figure 4.2**.



#### INFORMATION

Make sure that the distances to the surrounding walls are sufficient. For the minimum distance to front and wall, see **Figure 4.3** , **Figure 4.4** and **Table 2**.

**Table 2** Minimum distance to wall/front

Softstarter type	A (mm)	B (mm)	C (mm)	A (in)	B (in)	C (in)
PSTX30...105	100	10	35	3.94	0.39	1.38
PSTX142...170	100	10	35	3.94	0.39	1.38
PSTX210...370	100	10	35	3.94	0.39	1.38
PSTX470...570	150	15	35	5.905	0.590	1.38
PSTX720...840	150	15	35	5.905	0.590	1.38
PSTX1050...1250	150	15	35	5.905	0.590	1.38

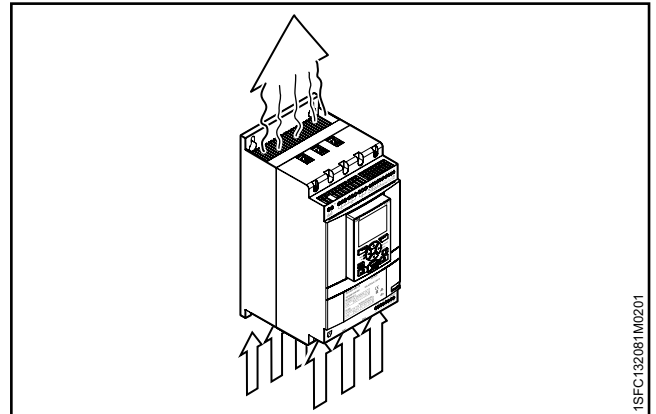


Figure 4.2

Flow of air for cooling purpose

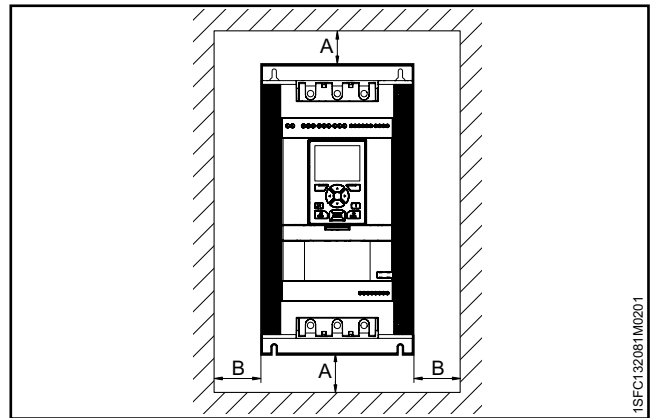


Figure 4.3

Minimum distances to wall

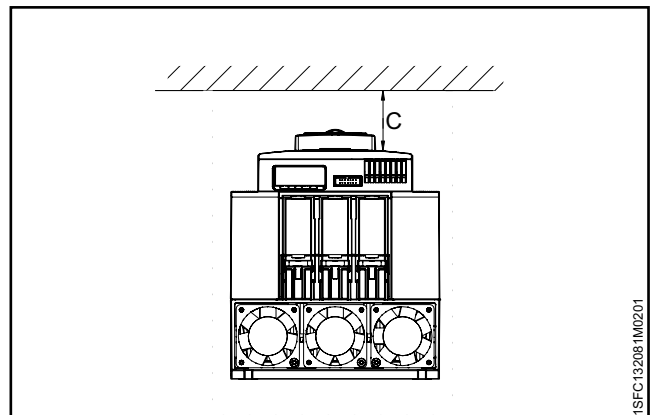


Figure 4.4

Minimum distances to front

4.2.3 Minimum enclosure dimensions

In applications where the softstarter is installed in an enclosure, use these minimum enclosure dimensions. See **Figure 4.5** and **Table 3** and **4**.

Table 3 Minimum enclosure dimensions (IEC)

IEC	Minimum enclosure dimensions		
Softstarter type	W (mm)	H (mm)	D (mm)
PSTX30...105	508	508	305
PSTX142...170	508	508	305
PSTX210...370	762	914	305
PSTX470...570	914	1219	405
PSTX720...840	914	1524	405
PSTX1050...1250*	914	1524	405

\*PSTX1250 Recommended fan capacity 230m3/h

Table 4 Minimum enclosure dimensions (UL)

cULus	Minimum enclosure dimensions			
Softstarter type	W (in)	H (in)	D (in)	Min number of latches
PSTX30...105	20	20	10	2
PSTX142...170	20	20	12	2
PSTX210...370	30	24	12	7
PSTX470...570	36	48	16	8
PSTX720...840	36	60	16	8
PSTX1050...1250*	36	60	16	8

\*PSTX1250 Recommended fan capacity 230m3/h

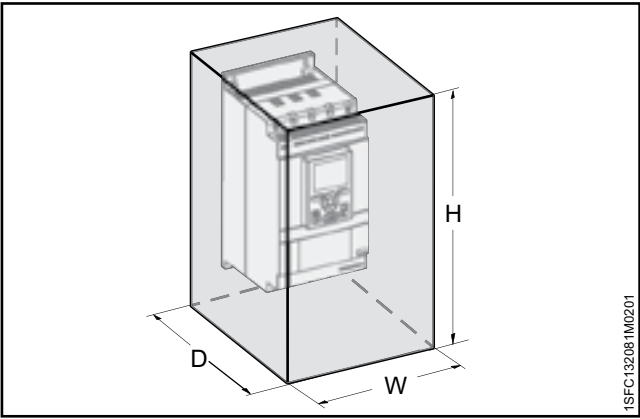


Figure 4.5  
Minimum enclosure size

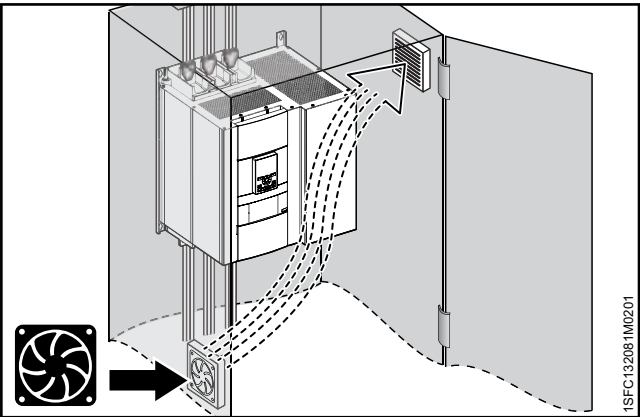


Figure 4.6  
Airflow

4.2.4 Maximum installation angle

**i** Make sure that the distances to the walls are sufficient. Use the installation angle given in **Figure**.

4.2.5 Dimensions and drilling plan

For dimensions and drilling plan see **chapter 3.2.6 Dimensions**. Drilling plan is also printed on the box.

**⚠ WARNING**  
Risk of damage to property. Ensure that no liquids, drilling particles, dust or conductive parts enter the softstarter.

**⚠ WARNING**  
When the enclosure is too small and/or you do not obey the instructions, the softstarter can overheat or not operate correct.

4.2.6 Movable keypad

If you remove the PSTX keypad, connect it with the included 3 meter cable for serial communication and power supply. Connect the cable to the network port on the front of the softstarter. To remove the keypad, push the lock with a screwdriver, see **1** and **2** in **Figure 4.8**.

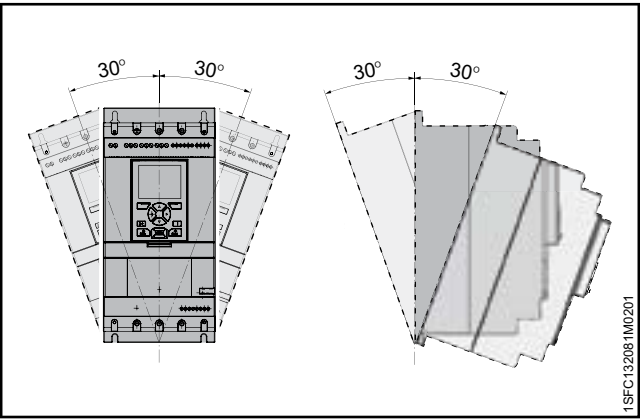


Figure 4.7  
Maximum mounting angle

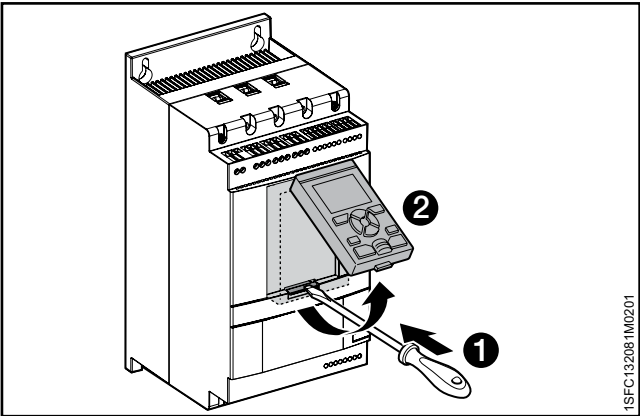


Figure 4.8  
Detach the keypad

#### 4.2.6.1 Installation Movable HMI



##### INFORMATION

Do not use shielded RJ45 cables. Use a cable length of maximum 3m to reduce distortion of the communication.



##### INFORMATION

The softstarter HMI is IP66 approved when installed on the enclosure door.

You can use the movable HMI to copy parameters from one softstarter to another during commissioning (temporarily handheld).

Included with the softstarter comes:

- Rubber gasket
- Plastic screw-nut
- RJ45 Network cable

1. To remove the movable HMI from the softstarter, loosen the plastic latch below the movable HMI, see ❶ and ❷ in **Figure 4.9**.
2. Drill a hole where to attach the movable HMI. Maximum dimension of the hole is  $\varnothing 26$  ( $\varnothing 1.02$ "), see ❶ in **Figure 4.9**. Put the rubber packing around the threaded network connector on the movable HMI, see ❷ in **Figure 4.9**. Push the threaded network connector through the drilled hole. See ❸ in **Figure 4.9**. Fasten the plastic screw-nut on the threaded network connector, with 2 Nm (17.7 lb/in).
3. Remove the RJ45 plug see ❹. Connect one end of the network cable to the network port on the front of the softstarter ❺ in **Figure 4.10**.
4. Connect the other end of the network cable to the network port on the back of the movable HMI, see ❻ in **Figure 4.11**.
5. Make sure that the network cable is properly inserted into the 2 ports. Prevent the rest of the cable to get caught between the door, see ❼ in **Figure 4.12**. Close the door of the enclosure and set the operation voltage switch to ON. Make sure that the external HMI works.

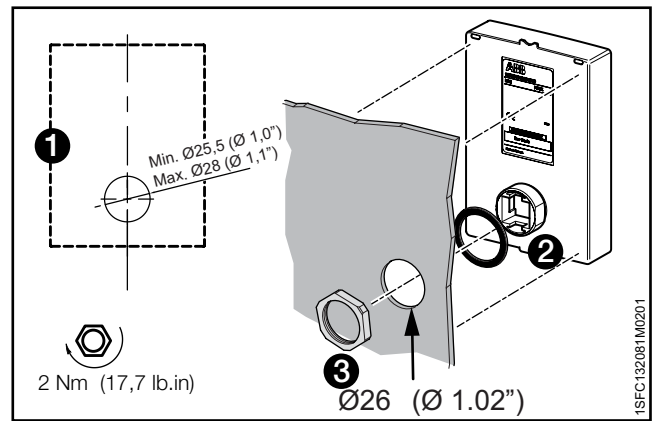


Figure 4.9

Drill a hole for the detachable keypad

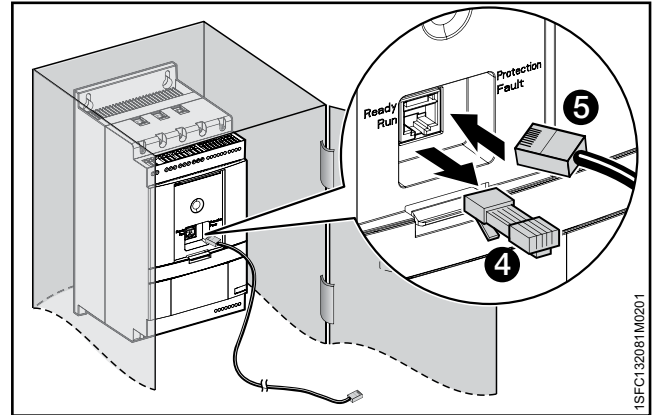


Figure 4.10

Connect one end of the network cable

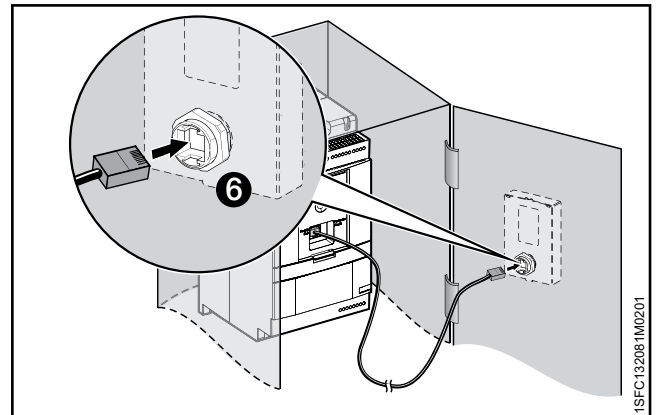


Figure 4.11

Connect the other end of the network cable

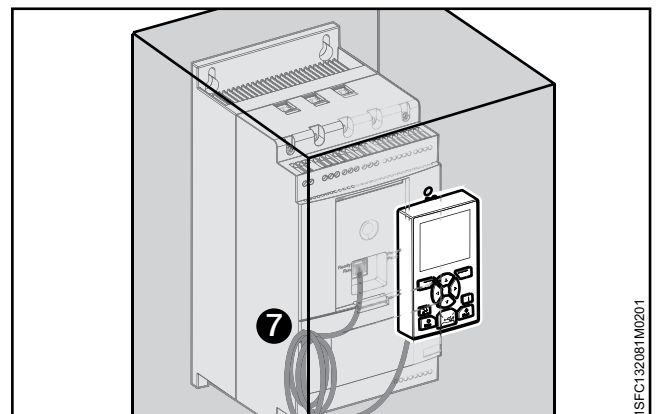


Figure 4.12

Roll the rest of the hanging cable



## 5 Connection

### 5.1 Electrical connection

	36
5.1.1 Main circuit	36
5.1.1.1 Tightening torques and cable dimensions	37
5.1.2 Control supply and control circuit	38
5.1.2.1 Control supply voltage - terminals 1 and 2	38
5.1.2.2 Functional ground - terminal 22	38
5.1.2.3 Start and Stop - terminals 13, 14, 18, 19, 20, 21	39
5.1.2.4 Programmable inputs - terminals 15, 16 and 17	41
5.1.2.5 Programmable inputs (Sequence start)	42
5.1.2.6 Programmable output relay - K4, terminals 4, 5 and 6	43
5.1.2.7 Programmable output relay - K5, terminals 7, 8 and 9	43
5.1.2.8 Programmable output relay - K6, terminals 10, 11 and 12	43
5.1.2.9 Modbus RTU	44
5.1.2.10 PTC/PT100 input	44
5.1.2.11 Analog output	46
5.1.3 Extension I/O	46

This chapter gives a description of the electrical connections and connections for communication devices.



## WARNING

Installation of electrical connections must be done by authorized personnel. Obey all laws and regulations.



## CAUTION

Dangerous voltage. Can cause death or serious injury. Always set the power switch to off and lock out all power to this device before you start to work on the equipment.



## WARNING!

Before you connect the softstarters PSTX30... PSTX170 to the operation voltage for the first time, apply control supply voltage to open the bypass relays. (see 2.1 Connection). This is necessary to avoid an accidental start of the equipment while it is connected to operation voltage.



## INFORMATION

ABB personnel must obey the instructions in **ABB CISE 15.4**.

For basic connection, see **chapter 2 Quick start**.  
For connection diagrams, see **chapter 11 Connection diagrams**.

## 5.1 Electrical connection



## WARNING

Capacitors for power factor compensation are not permitted in between the softstarter and the motor, because this can cause current peaks which can burn the thyristors in the softstarter. If you must use such capacitors, connect them on the line side of the softstarter.

### 5.1.1 Main circuit



## INFORMATION

The maximum voltage dip between softstarter and motor is 5%. The cable length does not matter.

Softstarters PSTX30...PSTX1250 can be connected In Line, see **1** **Figure 5.1**, and Inside Delta, see **2** **Figure 5.1**.

Use wire connection for PSTX30...105 see **Figure 5.2** and terminal connection for PSTX142...570 see **Figure 5.3**.

- Connect the line side to terminals 1L1, 3L2, 5L3, see **1** in **Figure 5.2** and **Figure 5.3**.
- Connect the motor to terminals 2T1, 4T2, 6T3 on the motor side, see **2** in **Figure 5.2** and **Figure 5.3**.

The terminal marking is printed on the front of the softstarter. For tightening torques and cable thickness, see **chapter 5.1.1.1 Tightening torques and cable dimensions**.

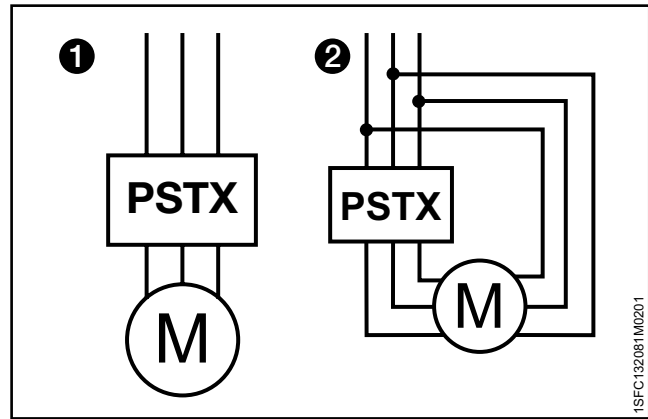


Figure 5.1

In line (1) and inside delta (2) connection

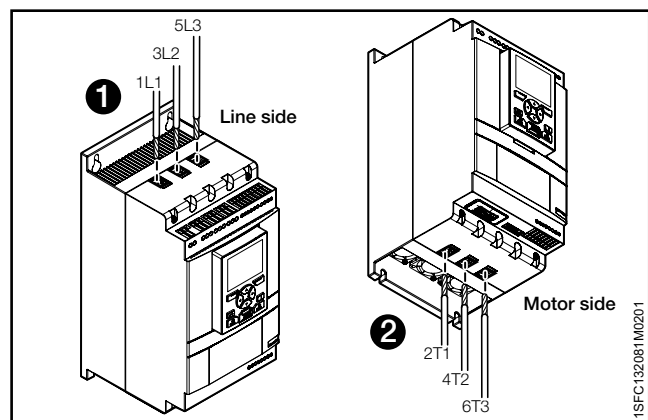


Figure 5.2

In line (1) and inside delta (2) connection




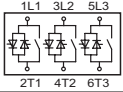



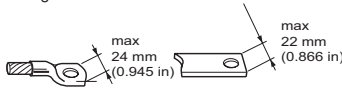
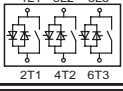



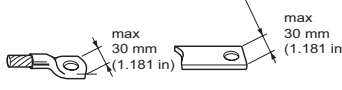
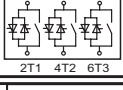








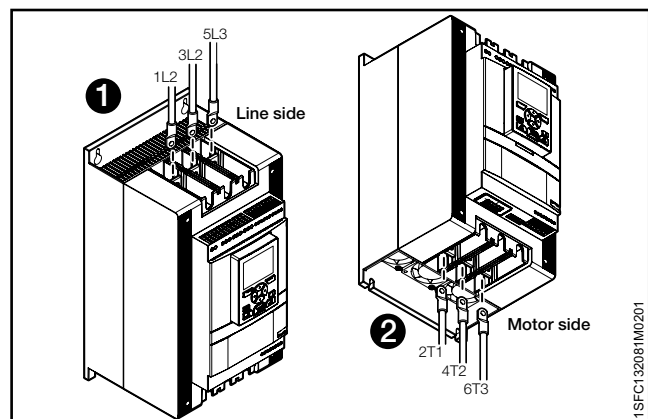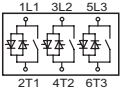




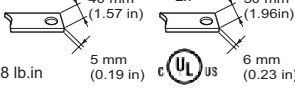





Figure 5.3

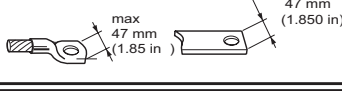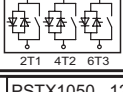Terminal connection bars

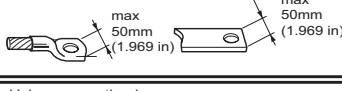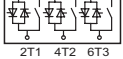

### 5.1.1.1 Tightening torques and cable dimensions
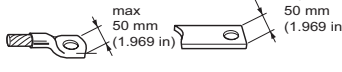
<b>PSTX30...105</b> 	 <b>8 Nm - 71 lb.in</b> AWG6 ... 2/0 Cu 75°C only Rigid: 10 ... 95 mm² Flexible: 10 ... 70 mm² Rigid/flexible: 2x6 ... 2x35 mm²	
<b>PSTX142...170</b> 	<b>11/6-16 UNF-2A</b>  <b>275 lb.in</b> Using connection module ATK185: AWG4 to 300kcmil Al Cu 75°C only 	<b>M8</b>  <b>18 Nm - 160 lb.in</b> Using connection bars 
<b>PSTX210...370</b> 	<b>3/4-16 UNF-2A</b>  <b>375 lb.in</b> Using connection module ATK300: AWG4 to 400kcmil ATK300/2: AWG4 to 500kcmil or 2xAWG4 to 2x500kcmil Al Cu 75°C only 	<b>M10</b>  <b>28 Nm - 240 lb.in</b> Using connection bars 
<b>PSTX470...570</b> 	<b>5/8-18 UNF-2A</b>  <b>275 lb.in</b> <b>3/4-16 UNF-2A</b>  <b>375 lb.in</b> Using connection module ATK580/2: 2xAWG2/0 to 2x500 kcmil ATK750/3: 3xAWG2/0 to 3x500 kcmil Al CU 75° only 	<b>M10</b>  <b>35 Nm - 310 lb.in</b> Using connection bar 
<b>PSTX720...840</b> 	<b>5/8-18 UNF-2A</b>  <b>275 lb.in</b> <b>3/4-16 UNF-2A</b>  <b>375 lb.in</b> Using connection module ATK580/2: 2xAWG2/0 to 2x500 kcmil ATK750/3: 3xAWG2/0 to 3x500 kcmil Al CU 75° only 	<b>M12</b>  <b>45 Nm - 398 lb.in</b> Using connection bars 
<b>PSTX1050...1250</b> 	<b>M12</b>  <b>45 Nm - 398 lb.in</b>  	<b>M12</b>  <b>45 Nm - 398 lb.in</b> Using connection bars 

1SFC132081M0201

## 5.1.2 Control supply and control circuit

Wires in industrial control applications are divided into 3 groups: main power supply, control supply and control circuit.

Main power supply (1L1, 3L2, 5L3, 2T1, 4T2, 6T3)

Control supply voltage (terminals 1 and 2)

Control circuit (terminals 13 - 21).

### 5.1.2.1 Control supply voltage - terminals 1 and 2

Connect neutral and phase to terminal 1 and 2.


See **Figure 5.4**.

#### **i** INFORMATION

Make sure that you have the correct supply voltage  $U_s$ . See **chapter 3.2.1 General**.

**The control supply voltage for all PSTX softstarters is  $U_s$  100-250V AC, 50/60Hz.**

**If using the operational voltage (Phase /N) as source for control voltage make sure to not exceed  $U_s$  250V –AC, 50/60Hz**

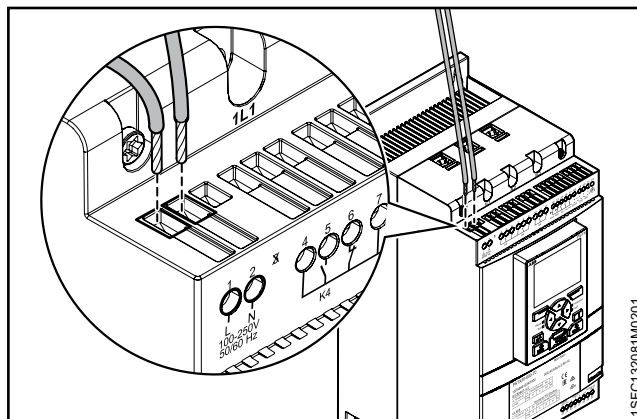

**Figure 5.4**

Supply voltage and control circuit

Tightening torques and cable dimensions.

	<p>M3.5 0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24 0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup> 0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p>
--	--------------------------------------	--	--

### 5.1.2.2 Functional ground - terminal 22


Ground the softstarters with the terminals as shown in **Figure 5.5** (one connection is sufficient). Connect the cable to a ground point close to the softstarter. A suitable ground point is next to the softstarter on the installation plate. Ground the installation plate.

#### **i** INFORMATION

This is not a protective ground, it is a function ground. The grounding cable must be as short as possible. Maximum length 0,5m.

#### **i** INFORMATION

Do not use functional ground in IT-networks, commonly found in for instance marine applications.

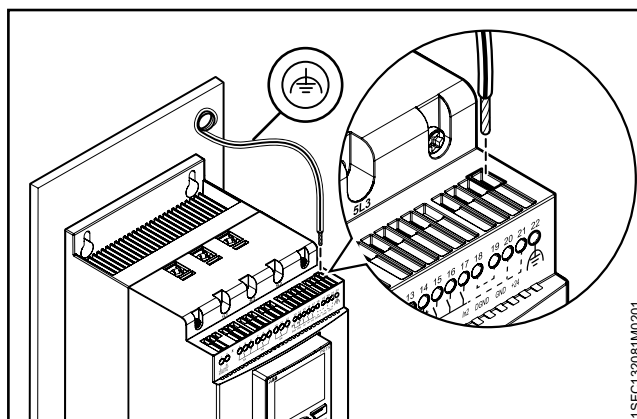

**Figure 5.5**

Functional ground, terminal 22

Tightening torques and cable dimensions.

	<p>M3 0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24 0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup> 0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p>
--	------------------------------------	--	--

### 5.1.2.3 Start and Stop - terminals 13, 14, 18, 19, 20, 21

#### Internal control voltage

The PSTX Softstarter has a built-in holding circuit and does not require sustained signals on start input. Use internal control supply voltage from terminals 20 or 21.

Connect start and stop terminals using conventional circuit with push buttons. See **Figure 5.6** and **Figure 5.7**.

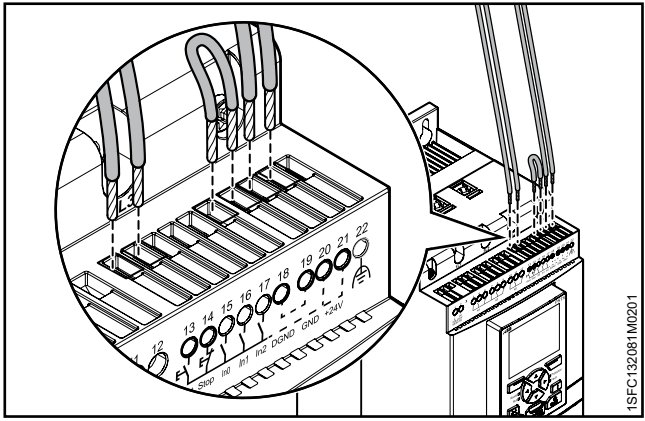


Figure 5.6  
Start and Stop, terminals 13, 14, 18, 19, 20, 21

Tightening torques and cable dimensions.

	 0,5 Nm 4,3 lb.in	3,5 x 0,6 mm (0.138 x 0.024 in) 	AWG 12 ... 24 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup> 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup>
--	-------------------------	--	---

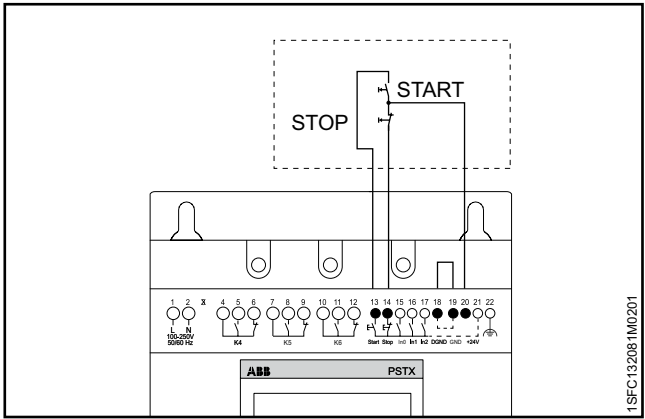


Figure 5.7  
Holding circuit (pulse for start is enough)

Tightening torques and cable dimensions.

	 0,5 Nm 4,3 lb.in	3,5 x 0,6 mm (0.138 x 0.024 in) 	AWG 12 ... 24 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup> 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup>
--	-------------------------	--	---

A conventional circuit with auxiliary relay is also possible. See **Figure 5.8**.

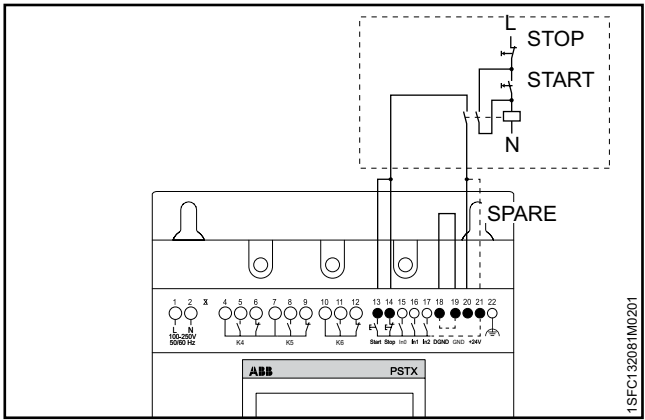


Figure 5.8  
Conventional circuit (maintained start signal required)

Tightening torques and cable dimensions.

	 0,5 Nm 4,3 lb.in	3,5 x 0,6 mm (0.138 x 0.024 in) 	AWG 12 ... 24 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup> 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup>
--	-------------------------	--	---

External control voltage

You can control the softstarter with an external 24 V DC source from a PLC or similar, if necessary.

Connect the cables. See **Figure 5.9** to use the internal holding circuit, or **Figure 5.10** to use an external holding circuit.



WARNING

Use only 24V DC to connect terminal 13, 14, 15, 16 and 17. Other voltages can damage the softstarter and the warranty can no longer be valid.

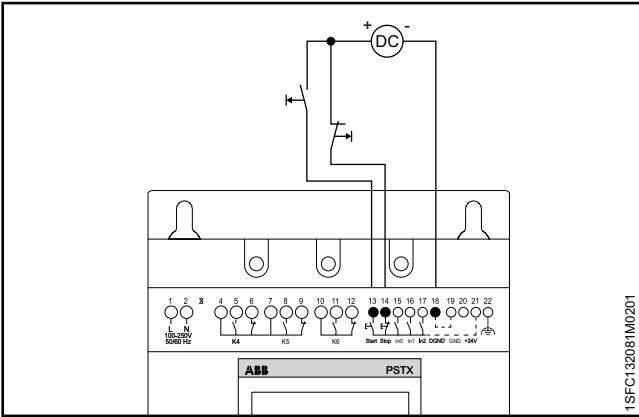


Figure 5.9  
Holding circuit with external control voltage  
(pulse for start is enough)

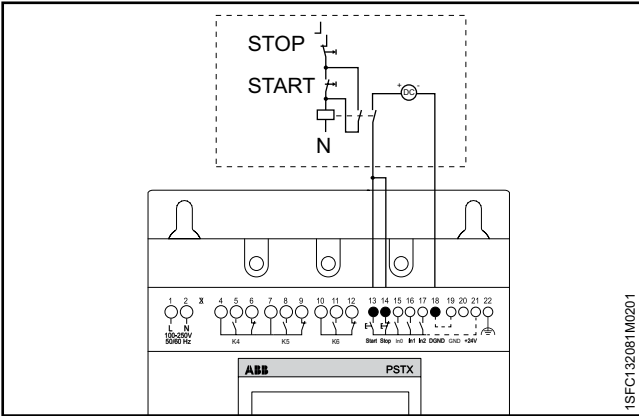


Figure 5.10  
Conventional circuit with external control voltage  
(maintained start signal is required)

Tightening torques and cable dimensions.

1 2 X 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 100-250V 50/60 Hz K4 K5 K6 Start Stop In0 In1 In2 DGND GND +24V	M3 0,5 Nm 4,3 lb.in	3,5 x 0,6 mm (0.138 x 0.024 in)	AWG 12 ... 24 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup> 0,2 .. 2,5 mm <sup>2</sup> 2x0,2 .. 1,5 mm <sup>2</sup>

1SFC132081M0201

### 5.1.2.4 Programmable inputs - terminals 15, 16 and 17



#### WARNING

Use only 24V DC to connect terminal 13, 14, 15, 16 and 17. Other voltages can damage the softstarter and the warranty can no longer be valid.

The softstarter has 3 programmable inputs.

- In0, default reset event.
- In1, default none
- In2, default none

For programming the softstarter inputs, see **Chapter 7.14 Inputs/outputs**.

Connect the cables, see **Figure 5.11**, and **Figure 5.12** to use the internal control supply voltage, or **Figure 5.11** and **Figure 5.13** to use an external source.



#### INFORMATION

Connections for sequence start, see **5.1.2.5 Programmable inputs (Sequence start)**

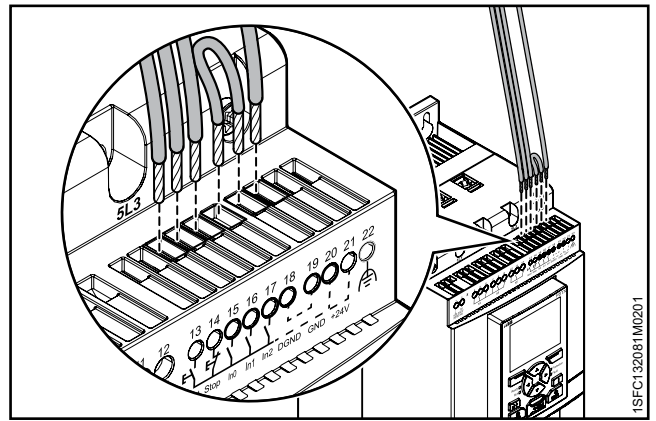


Figure 5.11  
Terminals 16 and 17

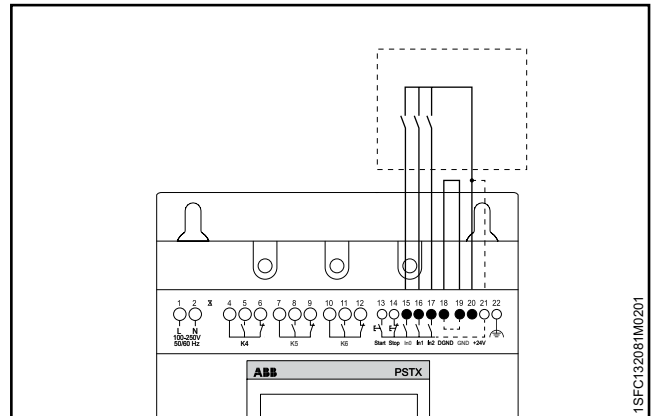


Figure 5.12  
Programmable inputs, terminals 15, 16 and 17

Tightening torques and cable dimensions.

	<p>M3</p> <p>0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24</p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p>
--	---------------------------------------	--	--

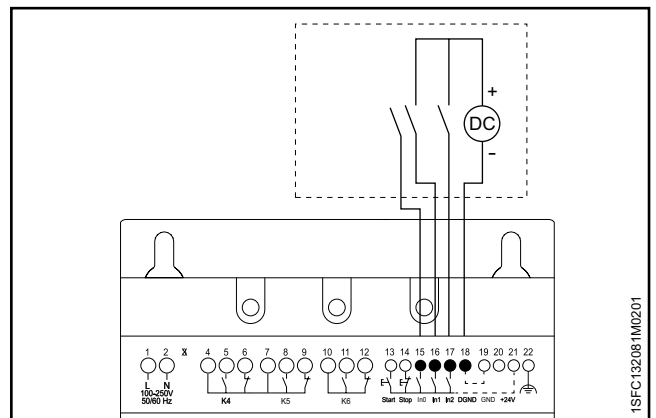


Figure 5.13  
External control voltage

Tightening torques and cable dimensions.

	<p>M3</p> <p>0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24</p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p>
--	---------------------------------------	--	--

### 5.1.2.5 Programmable inputs (Sequence start)

The softstarter can start up to 3 different motors used in different applications with different parameter sets. The parameter set is chosen through input signals to the softstarter.


See **Figure 5.14**, Sequential start of motors using a softstarter.

If the softstarter trips for any reason, and the trip must stop the motor, all motors are stopped.


When you use sequence start, see **Figure 5.15** or **Figure 5.16** for the connection.

The start command (terminal 13, 14, 16 and 17) must be maintained during operation, otherwise a direct stop is done.

Soft stop can only be done for the motor currently fed by the softstarter, by giving a stop command (terminal 14).

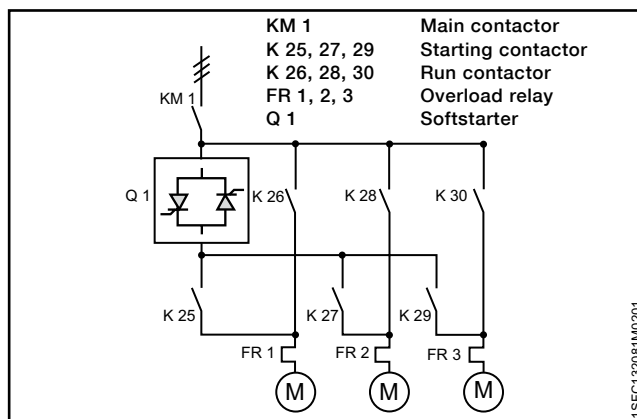


**Figure 5.14**  
Sequential start of motors using a softstarter

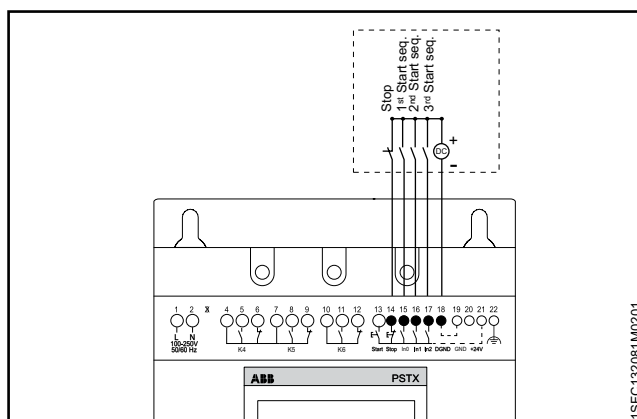

**Figure 5.15**  
External control voltage

Tightening torques and cable dimensions.

	<p>0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24</p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p>
--	-----------------------------	--	--

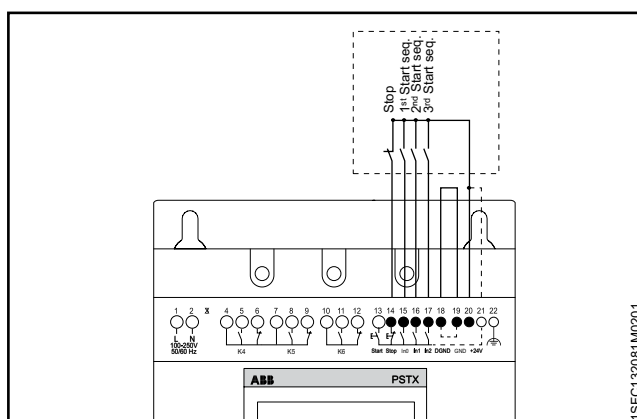

**Figure 5.16**  
Internal control voltage

Tightening torques and cable dimensions.

	<p>0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24</p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p> <p>0,2 .. 2,5 mm<sup>2</sup> 2x0,2 .. 1,5 mm<sup>2</sup></p>
--	-----------------------------	--	--

### 5.1.2.6 Programmable output relay - K4, terminals 4, 5 and 6

See **Chapter 7.14** Inputs/outputs to set the function of the output relay.

Default: Run

Connect the cables to terminal 4, 5 and 6.

See **Figure 5.17**.

Recommended to control line contactor.

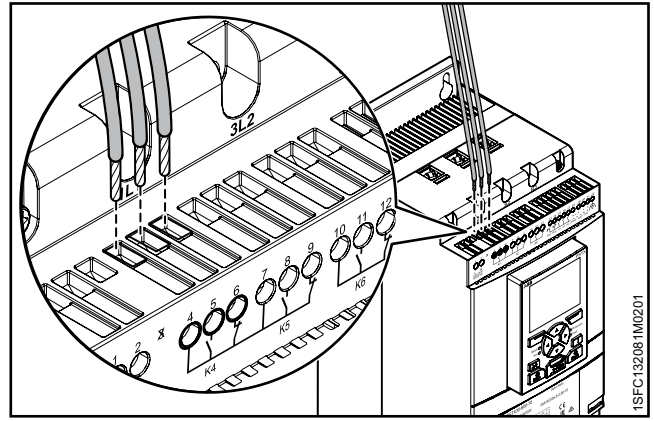


Figure 5.17

Programmable output relay K4, terminals 4, 5 and 6

	<p>M3,5</p> <p>0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24</p> <p>0.2 .. 2.5 mm²</p> <p>2x0.2 .. 1.5 mm²</p> <p>0.2 .. 2.5 mm²</p> <p>2x0.2 .. 1.5 mm²</p>
--	---	--	--

### 5.1.2.7 Programmable output relay - K5, terminals 7, 8 and 9

See **Chapter 7.14** Inputs/outputs to set the function of the output relay.

Default: Top of ramp

Connect the cables to terminal 7, 8 and 9.

See **Figure 5.18**.

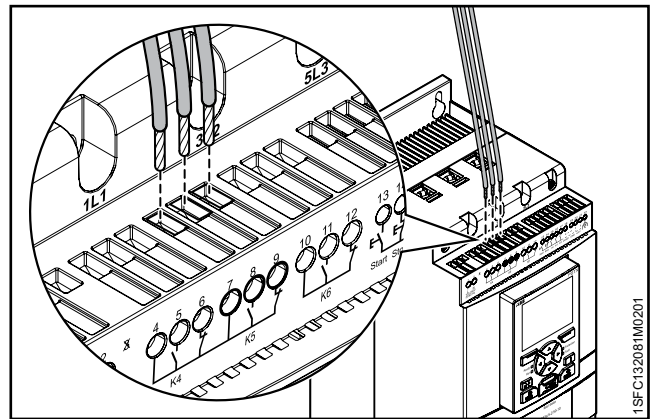


Figure 5.18

Programmable output relay K5, terminals 7, 8 and 9

	<p>M3,5</p> <p>0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24</p> <p>0.2 .. 2.5 mm²</p> <p>2x0.2 .. 1.5 mm²</p> <p>0.2 .. 2.5 mm²</p> <p>2x0.2 .. 1.5 mm²</p>
--	---	--	--

### 5.1.2.8 Programmable output relay - K6, terminals 10, 11 and 12

See **Chapter 7.14** Inputs/outputs to set the function of the output relay.

Default: Event

Connect the cables to terminal 10, 11 and 12.

See **Figure 5.19**.

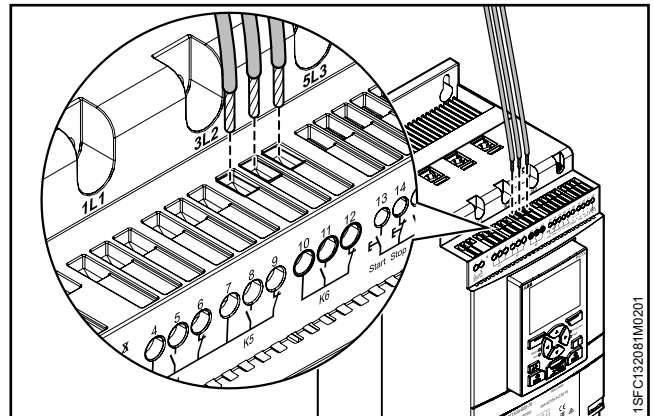


Figure 5.19

Programmable output relay K6, terminals 10, 11 and 12

	<p>M3</p> <p>0,5 Nm 4,3 lb.in</p>	<p>3,5 x 0,6 mm (0.138 x 0.024 in)</p>	<p>AWG 12 ... 24</p> <p>0.2 .. 2.5 mm²</p> <p>2x0.2 .. 1.5 mm²</p> <p>0.2 .. 2.5 mm²</p> <p>2x0.2 .. 1.5 mm²</p>
--	---------------------------------------	--	--

Tightening torques and cable dimensions.

5.1.2.9 Modbus RTU

Connect digital ground from PLC to the PSTX ground, terminal 19, 22 or 30.

Terminal 23 to 29 is non-isolated to GND. Terminal 30 is the same as terminal 19 and terminal 22. If voltage is applied to any terminal 23-29 it may break depending on the amplitude of the voltage.

Terminal 23 and 24 will break down if voltage are higher than  $\pm 5,5V$  (relative ground) and have a current more than 150mA. If using different grounds between master and PSTX make sure that they are totally isolated grounds and that the master has isolated power. The master must not have any offset to the PSTX ground.

**Figure 5.20.**

See **chapter 8 Communication** for communication components.

5.1.2.10 PTC/PT100 input

If the motor has PTC or PT100 elements, connect the cables to terminals 25, 26 and 27.

See **chapter 7.14 Inputs/outputs for programming**.

3-wire measurement for PT100

To reduce the influence of the wire resistance, you can use a 3-wire connection. This creates 2 measuring circuits. One circuit is used for reference. This way, the tripping device can calculate the wire resistance. See **Figure 5.21.**

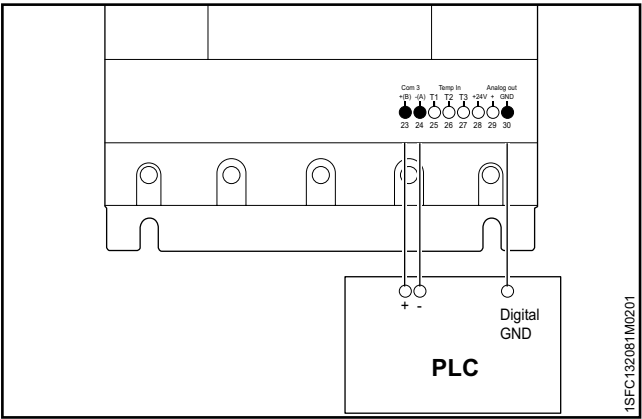


Figure 5.20  
Modbus RTU

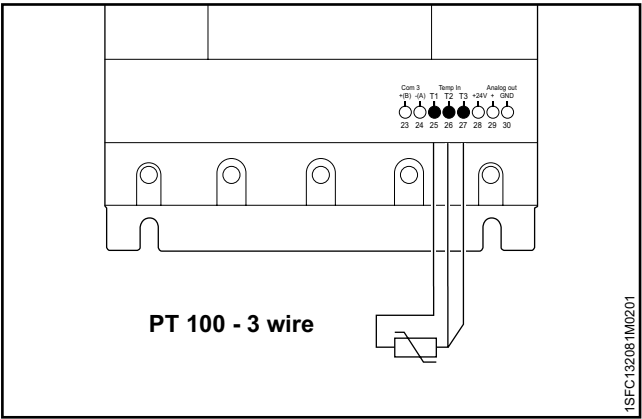


Figure 5.21  
PT100 - 3 wire

Tightening torques and cable dimensions.

		3,5 x 0,6 mm (0.138 x 0.024 in)	
--	--	------------------------------------	--

2-wire measurement for PT100

When you use 2-wire temperature sensors, the sensor resistance and the wire resistance are added. Correct for the resulting systematic errors when you change the tripping device. Connect a jumper between the terminals 26 and 27. Use **Table 1 Temperature errors in C°/K** to determine the temperature errors caused by the line length. See **Figure 5.22**

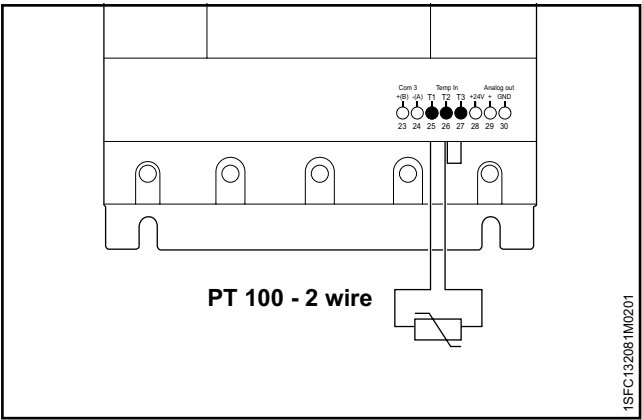


Figure 5.22  
PT100 - 2 wire

Tightening torques and cable dimensions.

		3,5 x 0,6 mm (0.138 x 0.024 in)	
--	--	------------------------------------	--



### 2-wire measurement for PTC

When you use 2-wire temperature sensors, the sensor resistance and the wire resistance are added. Correct for the resulting systematic errors when you change the tripping device. Connect a jumper between the terminals 26 and 27. Use **Table 1 Temperature errors in C°/K** to determine the temperature errors caused by the line length. See **Figure 5.23**.

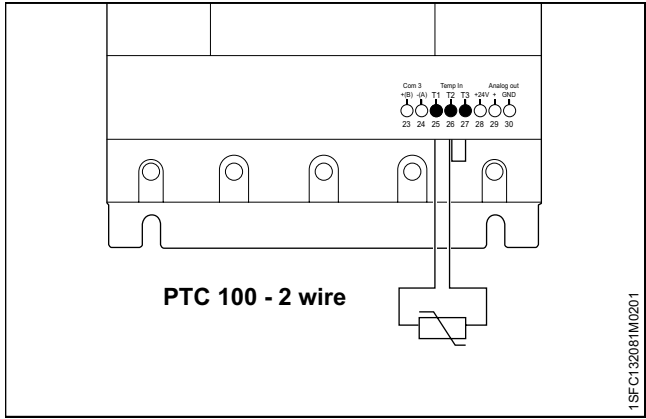


Figure 5.23  
PTC100 - 2 wire

Tightening torques and cable dimensions.

<div>Com 3 +(B) -(A)</div> <div>T1 T2 T3</div> <div>+24V + GND</div> <div>23 24 25 26 27 28 29 30</div>	<div>M3</div> <div></div> <div>0,5 Nm 4,3 lb.in</div>	<div>3,5 x 0,6 mm (0.138 x 0.024 in)</div> <div></div>	<div>AWG 12 ... 24</div> <div>0,2 .. 2,5 mm<sup>2</sup></div> <div>2x0,2 .. 1,5 mm<sup>2</sup></div> <div>0,2 .. 2,5 mm<sup>2</sup></div> <div>2x0,2 .. 1,5 mm<sup>2</sup></div>
---	---	--	--

### Error caused by the line

The error caused by the line resistance is to approximately 2.5 Kelvin/Ohm. If you don't know the resistance of the line and you cannot measure it, you can make an estimation of the error caused by the line with this table.

### Temperature errors in °C / K

The table below shows temperature errors, at an ambient temperature of 20° C, for different line lengths and conductor cross sections for PT100 sensors.

Table 1 Temperature errors in C°/K

Line length in m	Wire size mm <sup>2</sup>			
	0.50	0.75	1	1.5
10	1.8	1.2	0.9	0.6
25	4.5	3.0	2.3	1.5
50	9.0	6.0	4.5	3.0
75	13.6	9.0	6.8	4.5
100	18.1	12.1	9.0	6.0
200	39.3	24.2	18.1	12.1
500	91.6	60.8	45.5	30.2

5.1.2.11 Analog output

The softstarter has one output for a configurable analog output signal (terminals 29 and 30). The load resistance is maximum 500 ohm for current output, and minimum 500 ohm for voltage output.

The output signal ranges available are 0-10 V, 0 – 20mA or 4-20mA. The default setting is 4-20mA.

You can select the analog output to show:

I (A), U (V), P (kW), P (Hp), Q (kVAr), S (kVA),  
cos Phi, Motor temp, SCR temp and Energy (kWh).

If you use the analog output, connect the cables to terminals 29 and 30. See **Figure 5.24**.

See chapter 7.14 Inputs/outputs for programming.

Tightening torques and cable dimensions.

--	--	--	--

5.1.3 Extension I/O

If more inputs and outputs are necessary, you can connect components:

- ABB Stotz DX1xx-FBP extension module

This will give additional:

- 8 digital input
- 4 output relay
- 1 analog output

Connect the cables to terminals 23,24, 28 and 30. See **Figure 5.25**.

See **chapter 8 Communication** for communication components.

Tightening torques and cable dimensions.

--	--	--	--

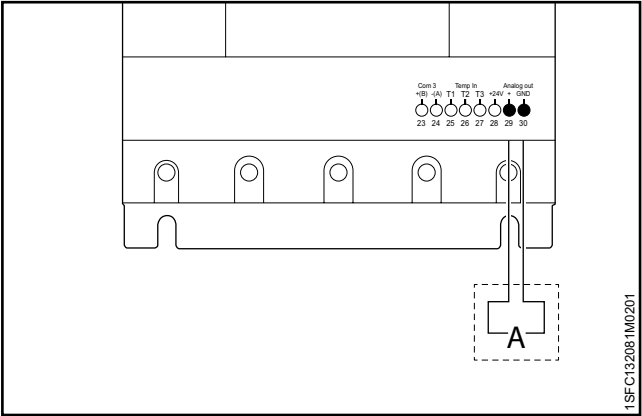


Figure 5.24  
Analog output

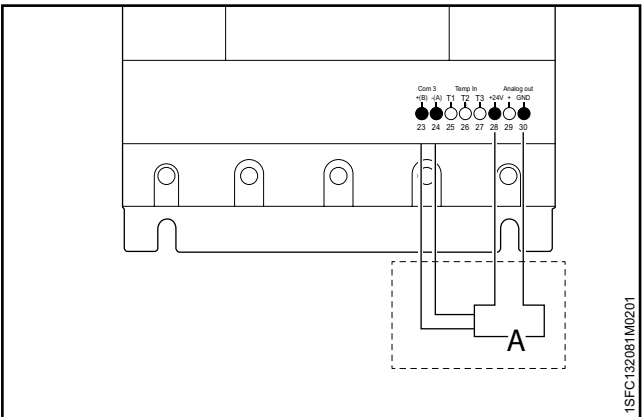


Figure 5.25  
Optional accessories





## 6 Human machine interface (HMI)

### 6.1 Navigation Overview

	50
6.1.1 LED indicators	50
6.1.2 Keypad	51
6.1.3 Navigation screen	52
6.1.3.1 Edit parameter values	52
6.1.4 How to set a parameter	53
6.1.4.1 Changing the Rated motor current (Setting le)	53

### 6.2 Local control from keypad

	54
6.2.1 Start key	54
6.2.2 Stop key	54
6.2.3 R/L-key	54
6.2.4 Motor jog	55

### 6.3 Options screen

	56
6.3.1 Overview	56
<b>6.3.2 Edit home view</b>	43
6.3.2.1 Add information screens to home view	56
6.3.2.2 Edit information screens in home view	56
6.3.2.3 Display slot	56
6.3.2.4 Scale value range	57
6.3.3 Active faults/protections and warnings	57

### 6.4 Menu screen

	58
6.4.1 Parameters	58
6.4.1.1 Complete list	58
6.4.1.2 Favorites	60
6.4.1.3 Modified	60
6.4.2 Assistants	61
6.4.3 Event log	62
6.4.4 Backup	63
6.4.4.1 Create backup	63
6.4.4.2 Uploading of parameters	63
6.4.5 System info	64
6.4.6 Settings	64
6.4.6.1 Language	65
6.4.6.2 Date and time	66
6.4.6.3 Display settings	66
6.4.6.4 Reset to defaults	67

This chapter gives a description of how the Human-machine interface (keypad and display) works. For detailed description of each function, see chapter 7 Functions.

## 6.1 Navigation Overview

You can use the Human-machine interface (HMI) to change the settings of the softstarter, such as inputs and outputs, protections, warnings, and communications. You can also use the HMI to monitor, control and read status information of the softstarter.

See **Figure 6.1**.

The HMI contains of:

- Display
- Selection and Navigation keys
- Mini USB port
- LED status indicators

### 6.1.1 LED indicators

The LED status indicators work as in **Table 1 LED status**:


**Table 1** LED status

LED	Color	Description
<b>Ready</b> ①	Green	<ul style="list-style-type: none"> <li>• <b>Off</b>: When control supply voltage <math>U_s</math> is off or unconnected.</li> <li>• <b>Flashing light</b>: When control supply voltage <math>U_s</math> is On and operation voltage <math>U_e</math> is Off.</li> <li>• <b>Steady light</b>: When control supply voltage <math>U_s</math> is On, and operation voltage <math>U_e</math> is On.</li> </ul>
<b>Run</b> ②	Green	<ul style="list-style-type: none"> <li>• <b>Off</b>: When the motor does not run.</li> <li>• <b>Flashing light</b>: When softstarter is controlling operation voltage <math>U_e</math> during start or stop ramp.</li> <li>• <b>Steady light</b>: When full operation voltage <math>U_e</math> is on at Top of Ramp.</li> </ul>
<b>Protection</b> ③	Yellow	<ul style="list-style-type: none"> <li>• <b>Off</b>: When the softstarter did not trip on protection</li> <li>• <b>Flashing light</b>: The protection tripped and reset is possible.</li> <li>• <b>Steady light</b>: The protection tripped and reset is not possible.</li> </ul>
<b>Fault</b> ④	Red	<ul style="list-style-type: none"> <li>• <b>Off</b>: When the softstarter did not trip on fault</li> <li>• <b>Flashing light</b>: Fault occurred and reset is possible.</li> <li>• <b>Steady light</b>: Fault occurred and reset is not possible.</li> </ul>


See **Figure 6.2**.

When fault or protection LED is on, the display shows the fault or protection as an event code and an indication text. Push information-key for further information.

See **chapter 10 Troubleshooting** for description of fault, protections and warnings.

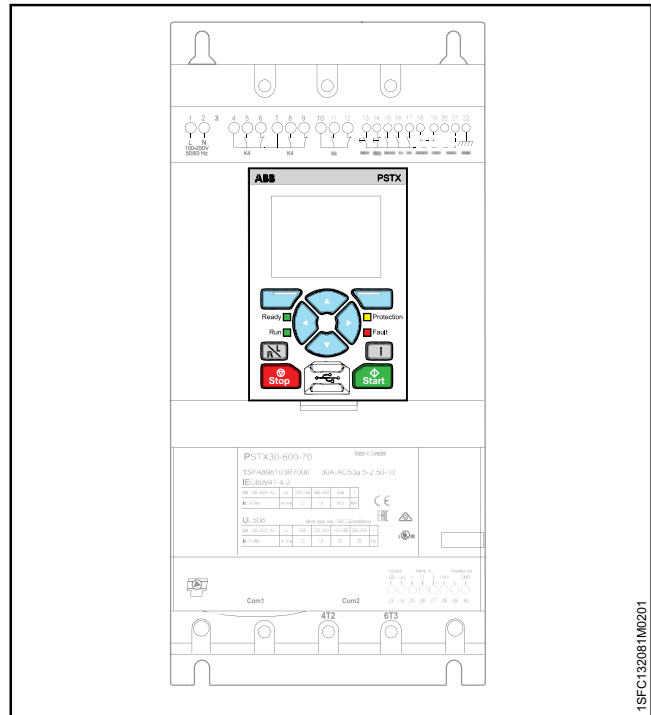

**Figure 6.1**  
HMI

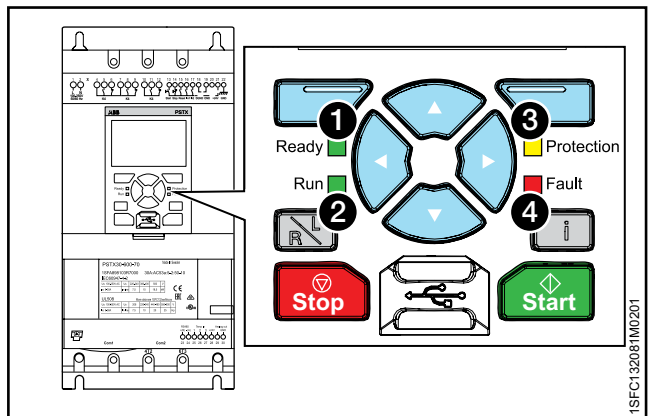

**Figure 6.2**  
LED Status

### 6.1.2 Keypad

The softstarter has 10 keys on the keypad, see **Figure 6.3**. This chapter gives a description of the function of each key.

#### Selection soft keys

The Selection soft keys have a specified function for each dialogue, such as to select, to exit, to change or to store. The display above the key shows the current function. See **1** in **Figure 6.3**.

#### Navigation keys

Use the Navigation keys for navigation in the menu and change the parameter values. A menu/value that is highlighted black in the display can be changed or scrolled. To select from a list, you can scroll in a closed loop. See **2** in **Figure 6.3**.

#### R\L-key

R\L-key stands for Remote or Local. Use this key to change the control of the softstarter between local control from the HMI and remote control from hardwire input or fieldbus. See **3** in **Figure 6.3**.

#### i-key

Use the i-key to get information about the HMI, and the softstarter status and settings. Push this key for help and general information about the current setting in the HMI. See **4** in **Figure 6.3**.

#### Stop key

The Stop key is the stop switch for the softstarter. When you push this key, the motor stops with the set parameters. You can push stop command during the start ramp if necessary. (Only active in local control mode). See **5** in **Figure 6.3**.

#### Start key

When you push this key, the motor starts and operates with the set parameters. (Only active in local control mode). See **6** in **Figure 6.3**.

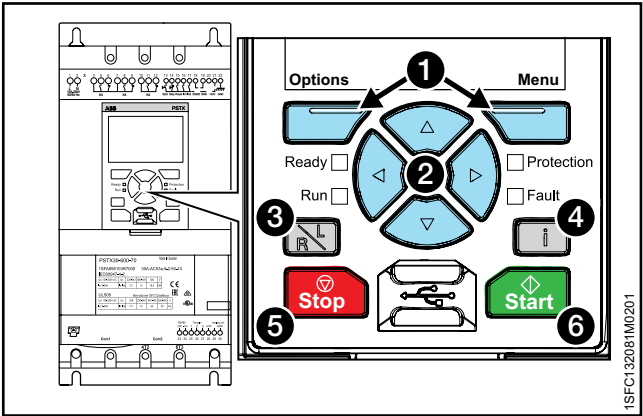


Figure 6.3  
Keypad

Table 2 Keypad, Figure 46

Position	Key
<b>1</b>	Selection soft keys
<b>2</b>	Navigation keys
<b>3</b>	R\L-key
<b>4</b>	i-key
<b>5</b>	Stop key
<b>6</b>	Start key







#### Lock/Unlock parameters

  Push and hold the Options -key, Menu-key and i-key simultaneous for 2 seconds in order to lock / unlock the keypad. This prevents accidental changes of parameters. Parameters are read-only. Still Start / Stop and R/L is active.

### 6.1.3 Navigation screen






With the keypad, you can change the settings for each item or as a selection of default parameters for different applications. The default set of parameters is stored in the unit for a possible reset to default values. When the fieldbus communication is selected, you can change parameters from this interface.

Push  "Menu" to go to the menu and then use  and  to navigate. Push the  "Select" to make your selection.

 See **Figure 6.4**.


 


#### 6.1.3.1 Edit parameter values

##### The numerical setting

Use the numerical setting to change a numerical value. Use  and  on the Navigation keys to select the number, the selected number is highlighted black. Then Push  or  to change the value of the selected number. Push  "Save" to save.

See **Figure 6.5**.


##### On/off switch

Use  or  to navigate  or  to change the value of the selected switch, (1=on, 0=off).

Push  "Save" to save.

See **Figure 6.6**.

##### Selection list

Use the Navigation keys to navigate up and down in the lists. The selected option is highlighted black. Push  "Save" to save.

See **Figure 6.7**.



Figure 6.4  
Navigation screen

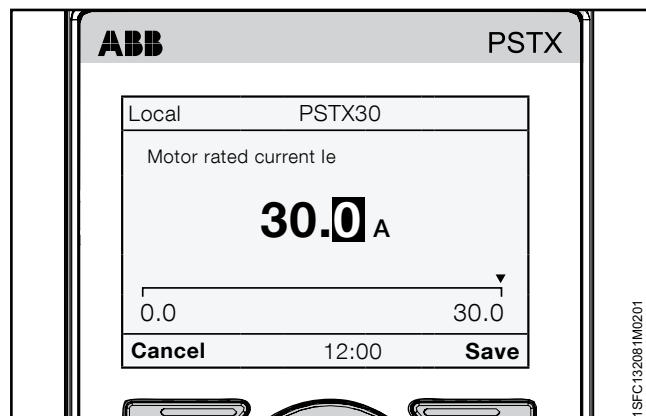


Figure 6.5  
Numerical setting

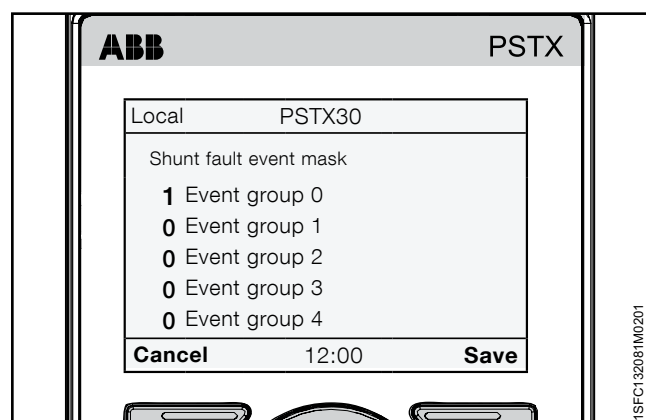


Figure 6.6  
Switch setting

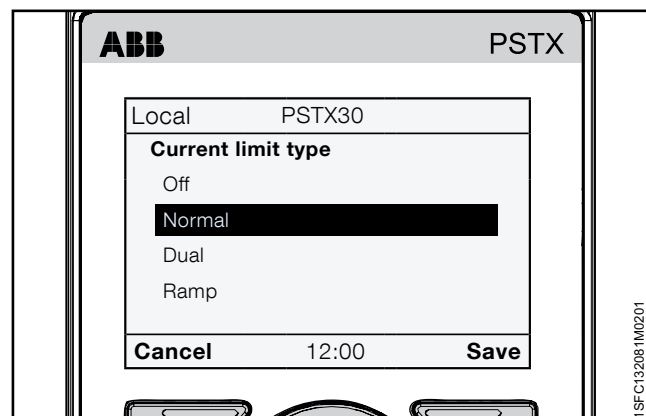


Figure 6.7  
Selection list



## 6.1.4 How to set a parameter




 







This chapter shows some examples of parameters that you can set on the PSTX softstarter.


### 6.1.4.1 Changing the Rated motor current (Setting $I_e$ )

**Path in menu:**

**Menu ▶ Parameters ▶ Complete list ▶ 01 Motor rated current  $I_e$**

For more information about Motor Current  $I_e$ , see **chapter 7 Functions**.

1. The Home view is the top level. Push  "Menu" to enter the menu. The display now appears as in **Figure 6.8**.
2. Push  "Select" to select Parameters menu.
3. Push  "Select" to select Complete list.
4. Push  "Select" to select 01 Motor rated current  $I_e$ .
5. Push  "Edit" to edit the rated current in Motor rated current  $I_e$ .
6. Use  and  to select number, the current selected number is highlighted black. Then push  or  to change the value of the selected number. Save the new setting by selecting  "Save".  
See **Figure 6.8**. If you want to quit, you select  "Cancel".

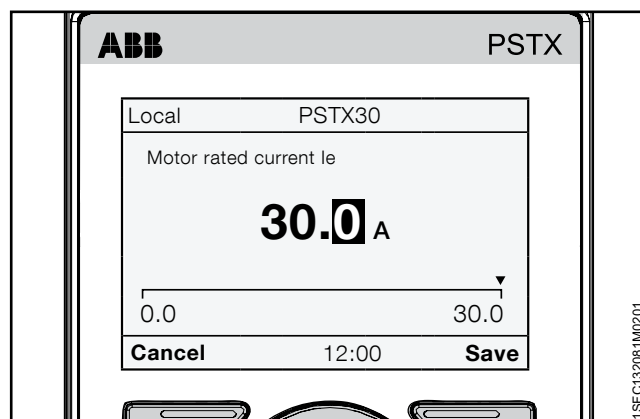

**Figure 6.8**  
Motor current  $I_e$

## 6.2 Local control from keypad



### CAUTION

When you change from local control to remote control, the setting applies immediately. If the remote setting has direct motor start it can start the motor automatically and can cause personal injury.



### CAUTION

After a power loss, software upgrade or cycling of the PSTX Control supply, the PSTX automatically is set in remote control. Remote control is the default control of the PSTX.



### INFORMATION

When you change from remote control to local control the softstarter stays in present state.

This chapter gives a description of how the local control interface works. Use the local control to start and stop the motor from the keypad. When local control is selected, you can only control the softstarter with the keypad.

**Table 3** Local control from keypad

Function	Description
Start/stop	Start and stop the motor with the keypad.
R\L	Change between local and remote control
Motor Jog *	Run the motor as long as Jog is pushed.

\* For information about Motor jog see **chapter 6.2.4 Motor jog**.  
To go to the Motor Jog, follow this path in menu:  
**Menu ► Motor jog**

### 6.2.1 Start key


The start key is the start switch for the softstarter. Push this key to start the motor and operate with the set parameters. See **1** in **Figure 6.9**.

### 6.2.2 Stop key

The stop key is the stop switch for the softstarter. Push this key to stop the motor with the set parameters. You can push stop command during the start ramp if necessary. See **2** in **Figure 6.9**.

### 6.2.3 R\L-key

R\L-key stands for Remote or local control. Use this key to control the softstarter remote from digital input, fieldbus or local from the HMI. See **3** in **Figure 6.9**.

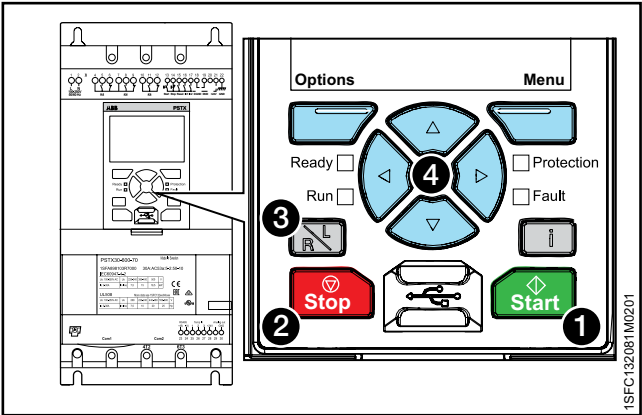

**Figure 6.9**  
Local control

## 6.2.4 Motor jog

Path in menu:

Menu ► Motor jog

For navigation see **Figure 6.10**.




For Motor jog parameter settings, see **chapter 7.9 Slow speed**.



Jog is a slow speed drive function to drive the motor with low voltage output. Use this feature for example to put a conveyor belt into position.

The jog has 3 default speeds:

- Fast Jog
- Jog
- Creep

You can change the speeds with separate parameters. For example: Fast jog backward and jog forward. You can use this function through the HMI, I/O or Fieldbus.

Push  "Menu" to enter the Motor jog menu and then select Motor Jog. Use  and  to jog forward or backwards. See **4** in **Maximum mounting angle**. The motor starts and accelerates to the rated speed with the set parameters as long as the Jog command is in operation.

The motor stops immediately when you release the push button,  and .

You can run the motor in the forward and reverse direction with 3 different speeds.



Figure 6.10

Motor jog navigation

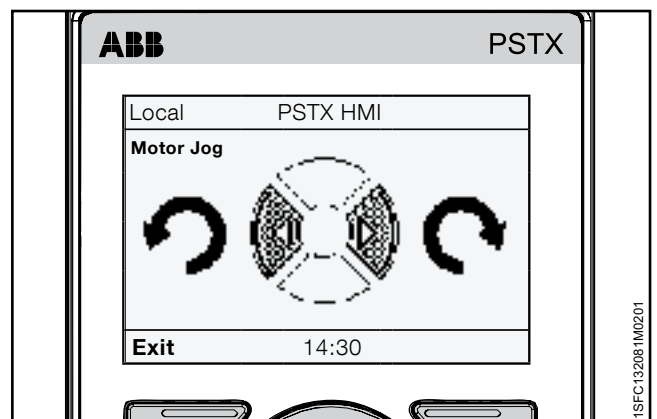


Figure 6.11

Keypad


## 6.3 Options screen

### 6.3.1 Overview

In Options screen, you can change the appearance of the Home view of the softstarter and read Active faults/ protections and Active warnings.

Option screen includes these menus:

- Edit home view
- Active faults/ protections
- Active warnings

Push  “Options” to enter the Options screen.

### 6.3.2 Edit home view

Path in menu:

Options ► Edit home view

For navigation, see **Figure 6.12**.

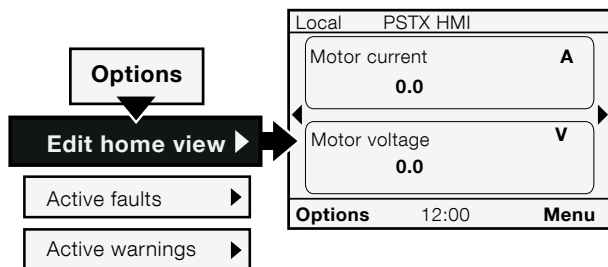




Figure 6.12



Edit home view navigation

Use Edit home view to change the view of the home view.

#### 6.3.2.1 Add information screens to home view

1. Push  “Options” to select Edit home view.
2. Use the Navigation keys to select where you want to add an information screen.
3. Push  “Add” to add the new information screen to the home view.

#### 6.3.2.2 Edit information screens in home view

1. Push  “Options” and then select Edit home view.
2. Use the Navigation keys to select the display slot you want to edit.
3. Push  “Edit” and enter the Display slot menu. See **chapter 6.3.2.3 Display slot** to set the new screen in the Display slot menu.

### 6.3.2.3 Display slot

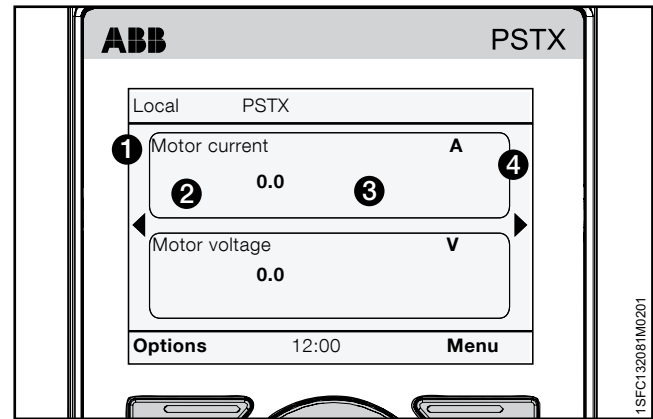




Figure 6.13

Display slot

In the Display slot menu, you can set the new screen with these options:

#### Signal

Push  “Edit” to see the list of signals available for the home view. Use the Navigation keys and then push  “Select” to select the signal. Selected signal is shown by

**1** in **Figure 60**.

Select 1 of these signals:


- Empty
- Motor voltage
- Motor current
- Active power
- Active power (hp)
- Power factor
- Reactive power
- Apparent power
- Mains voltage
- Mains frequency
- Motor connection
- Phase sequence
- Phase L1 current
- Phase L2 current
- Phase L3 current
- L1L2 phase-to-phase voltage
- L2L3 phase-to-phase voltage
- L3L1 phase-to-phase voltage
- Thyristor temperature
- Motor temperature
- EOL time to trip
- EOL time to cool
- Active energy
- Active energy (resettable)
- Reactive energy
- Reactive energy (resettable)
- Voltage imbalance
- Mains voltage THD
- PT100 temperature
- PTC resistance
- Remaining time to start
- Number of starts (resettable)
- Number of starts
- Motor run time (resettable)
- Motor run time
- Thyristor run time (resettable)
- Thyristor run time
- Fans run time
- Pre-start function
- Start mode
- Stop mode

### Display style

Select the display style for the home view. The selected display style is shown by ② in **Figure 6.14**.

Select numeric, gauge or graph data:

- Numeric
- Gauge/bar
- Graph 15 minutes
- Graph 30 minutes
- Graph 1 hour
- Graph 24 hours
- N/A

Use the Navigation keys to select display style, push  "Select" to set the parameter.

 
### Display decimals

Select the amount of decimal numbers in the home view. Use the Navigation keys to change the amount.

Push "Save" to save the value. Decimal numbers are shown in ③ in **Figure 6.14**.


### Display name

You can change the name of the selected signal. The new name can have maximum 20 characters. Use the Navigation keys to change the characters.

Push  "Save" to save the display name. Display name is shown by ① in **Figure 6.14**.


### Signal min

 Select the minimum value in the Home view. Use the Navigation keys to change the value.


Push  "Save" to save the value. Value is shown by ③ in **Figure 6.14**.

### Signal max


 
Select the maximum value in the Home view. Use the Navigation keys to change the value.


Push  "Save" to save the value. Value is shown by ③ in **Figure 6.14**.


#### 6.3.2.4 Scale value range

  Use Navigation keys to mark Scale value range and push  "Select" to enable Scale value range. 3 more options show in the display slot menu:

- Display signal min as
- Display signal max as
- Display unit

 **Display signal min as** - Push  "Edit" to select the scaled minimum value in the Home view. Use the Navigation keys to change the value, Push  "Save" to save the value. See ③ in **Figure 6.15**.

 **Display signal max as** - Select the scaled maximum value to show in the Home view. Use the Navigation keys to change the value, Push  "Save" to save the value. See ③ in **Figure 6.15**.

**Display unit** - Type in the unit to show in the Home view. You can type a unit with up to 10 characters. Use the Navigation keys to change the characters. Push  "Save" to save the Home view unit name. See ④ in **Figure 6.15**.

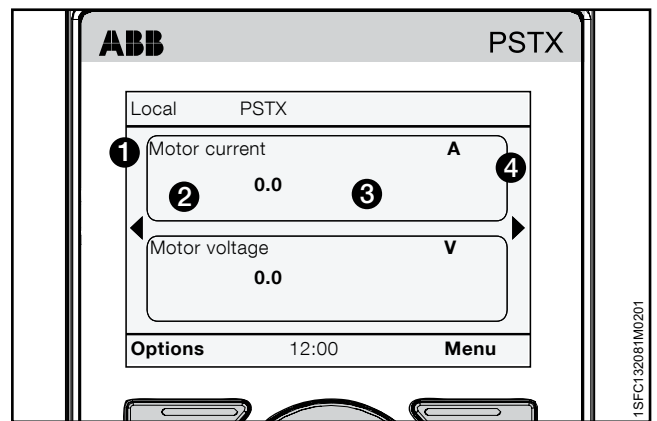


Figure 6.14

Display slot

### 6.3.3 Active faults/protections and warnings

Path in menu:

Options ► Active faults / protections

Options ► Active warnings

You can find **active faults/protections/warnings** in the Options menu. The menus contain information about faults and warnings that occurred during operation, and what protections are active.

Active faults/protections and warnings menus are highlighted black when a fault protection or warning occurred.

For navigation see **Figure 6.15**.

For more information about fault/warnings/protections, see **chapter 10 Troubleshooting**.

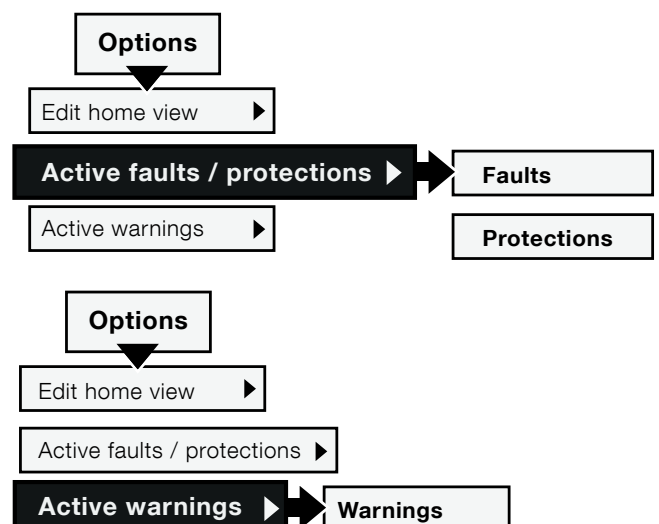


Figure 6.15


 


Active fault/warnings/protections navigation

## 6.4 Menu screen

The menu screen has 7 submenus, given in these chapters:

**Table 4** Menu screen

Chapter	Description
6.4.1 Parameters	Parameter settings for different types of softstarters.
6.4.2 Assistants	Default parameters for common applications.
6.2.4 Motor jog	See chapter 6.2.4 Motor jog
6.4.3 Event Log	Show the Event Log, Faults, Protections and Warnings.
6.4.4 Backup	Backup parameter settings.
6.4.5 System info	Show product name, type, Firmware version etc.
6.4.6 Settings	Softstarter settings such as Language, Date and Display.

Use Navigation keys to navigate in the submenus. Push  "Select" to enter a menu. Push  "Save" to save a new setting. Push  "Cancel" to exit a setting without saving. Push  "Back" to go back.

6

### 6.4.1 Parameters





Path in menu:

Menu ► Parameters

The parameter menu has 3 submenus, given in these chapters:

  **Table 5** Parameters screen

Chapter	Description
6.4.1.1 Complete list	Shows all parameters for advanced setup
6.4.1.2 Favorites	Select favorite parameter functions for quick selection.
6.4.1.3 Modified	Shows changed parameters.


 
 
 
Navigation keys to navigate in the submenus. Push  "Select" to enter a menu. Push  "Save" to save a new setting. Push  "Cancel" to exit a setting without saving. Push  "Back" to go back.


#### 6.4.1.1 Complete list

Path in menu:


Menu ► Parameters ► Complete list

Use the Complete list menu if a more advanced parameter setup is necessary. The complete list menu contains groups of parameters put in function order, such as Start and Stop, Communication etc. For navigation, see **Figure 6.16**.

Use the Navigation keys to navigate the submenus. Push  "Select" to enter a menu. Push  "Save" to save a new setting. Push  "Cancel" to exit a setting without saving. Push  "Back" to go back. For function settings and full parameter list, see **chapter 7 Functions**.

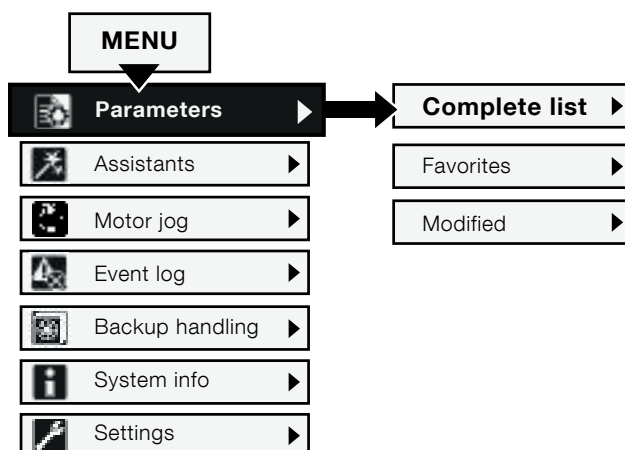

**Figure 6.16**  
Complete list navigation

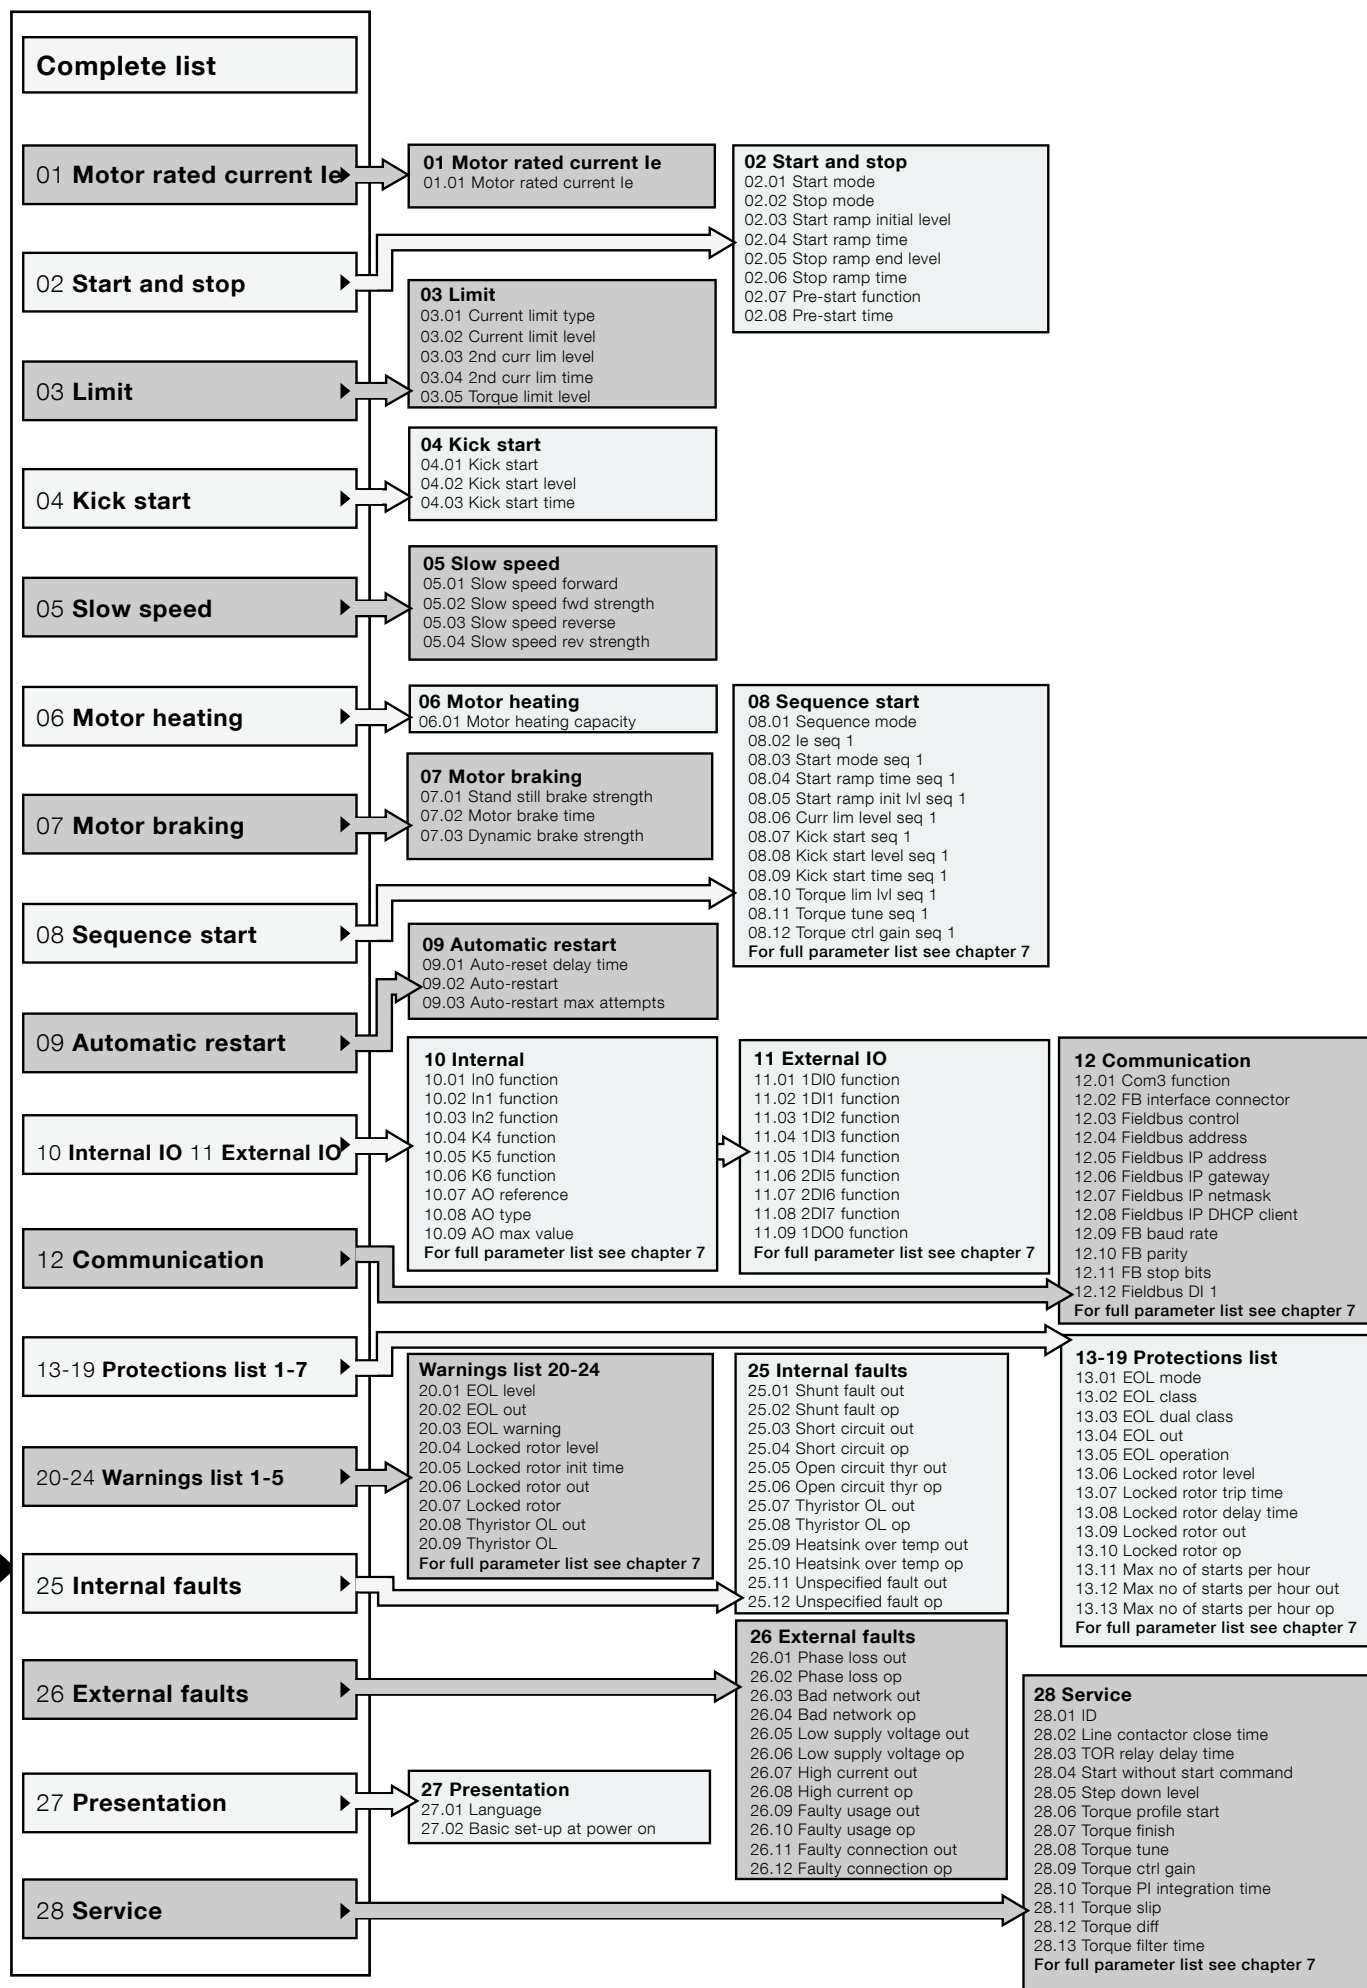


 





### 6.4.1.2 Favorites

Path in menu:

Menu ► Parameters ► Favorites

For navigation, see **Figure 6.17**.

In the Favorites menu you can add favorite parameters for quick selection. Select parameters such as Start and stop, Current limit, Kick start, Torque control, etc

1. Push  "Select" to enter the Favorites menu and then push  "Select" to edit the Favorites list.
2. Use the Navigation keys to select a parameter group. Push  "Open" to open the group.
3. Push  "Select" to select parameters. A check mark shows in front of the selected parameter. Push  "Unselect" to unselect the parameter. Push  "Done" to save and exit. See **Figure 6.18**.
4. The selected Favorites show directly in Favorites menu for quick selection. Push  "Back" to go back.

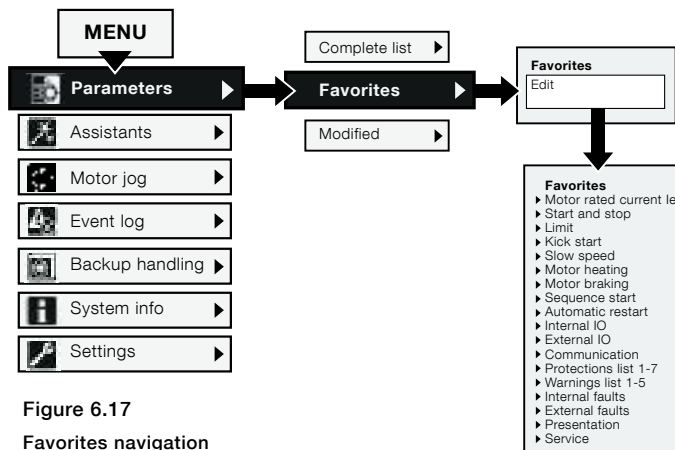


Figure 6.17

Favorites navigation



Figure 6.18

Favorites menu

 

 

### 6.4.1.3 Modified

Path in menu:

Menu ► Parameters ► Modified

For navigation, see **Figure 6.19**.

The Modified menu contains changed parameters that are different from defaults.

Push  "Select" and then  "Edit" to edit the different parameter. Push  "Save" to save and go back. Or push  "Cancel" to go back without saving.

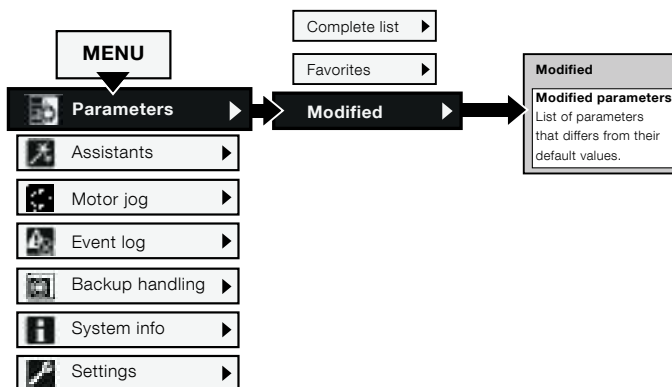


Figure 6.19

Modified navigation



## 6.4.2 Assistants

Path in menu:

Menu ► Assistants

For navigation, see **Figure 6.20**.

For more details on how to set Basic set-up and Application set-up, see **chapter 2 Quick start**.

For more information about Assistants and Application list, see **chapter 7.22 Assistants**.

The Assistants menu contains default settings and parameters. Use this menu to set only the necessary parameters before you can start the motor. All necessary input data shows up in an automatic loop. The Assistants menu is divided in:

- **Basic set-up**
- **Application set-up**



### INFORMATION

After you select an application and make your changes, do not select this application again because this resets the application to the default settings.

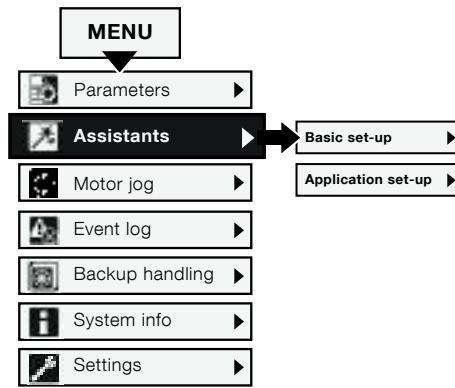


Figure 6.20

Assistants navigation

### Enter the Assistants menu

Push "Menu" and select Assistants with the Navigation keys.

Push "Select" to enter the Assistants menu.

### Basic set-up

Use the Navigation keys to select Basic set-up.

Push "Select" to enter the Basic set-up.

The Basic set-up menu is divided in 5 steps: Language, Date and time, Motor data, System configuration and Setup complete.

### Application set-up

The Application set-up are quick settings for Applications, Values and Tune settings.

Use the Navigation keys to select Application set-up.

Push "Select" to enter the Application set-up.

Select for what type of application you use the softstarter by pushing "Select".

See **Figure 6.21**.

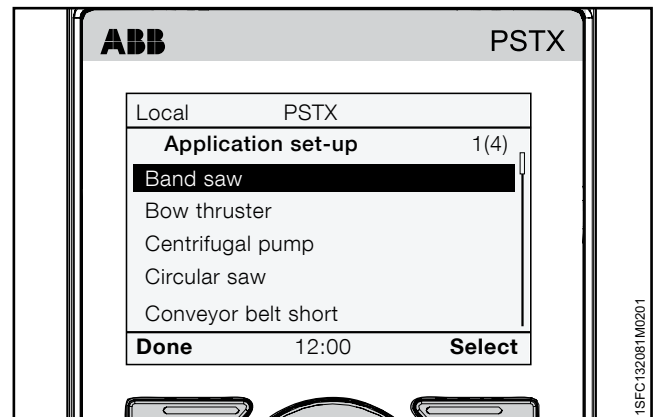


Figure 6.21

Application set-up

### 6.4.3 Event log

Path in menu:

Menu ► Event log



For navigation, see **Figure 6.22**.

The Event log menu shows the event log in the softstarter. The log shows the 100 latest events in chronological order, with “type of event” and date. For details about all events push details. Use navigation keys to view all entries in the event log. The types of event logs are:

 

- **Faults**
- **Protections**
- **Warnings**
- **Parameter changed**
- **Run**

See **Figure 6.23**.


 
#### Faults

Use the Navigation keys to select a Fault and push  “Details” to read details about the Fault (Name, On time and Event count). Then push the i-key to see information about the Fault. Push  “Back” to go back to Faults log menu.



#### Protections

 Use the Navigation keys to select a Protection and push  “Details” to read details about the Protection (Name, On time and Event count). Push the i-key to see information about the Protection. Push  “Back” to go back to Protections log menu.



#### Warnings

Use the Navigation keys to select a Warning and push  “Details” to read details about the Warning (Name, On time and Event count). Then push the i-key to see further information about the Warning. Push  “Back” to go back to Warning log menu.

#### Parameter changed

Use the Navigation keys to select a parameter and push  “Details” to read details about the changed parameter (Name, On time and Event count). Push  “Back” to go back to Warning log menu.

#### Run

  Use the Navigation keys to select a run event and push  “Details” to read details about the run event (Name, On time and Event count). Push  “Back” to go back to Warning log menu.

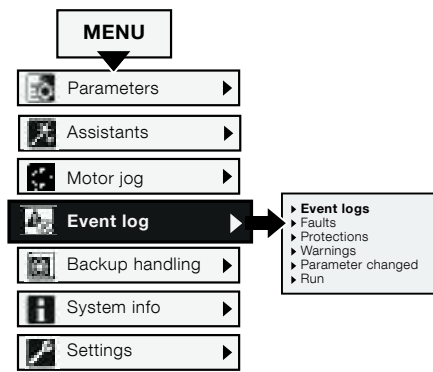


Figure 6.22

Event log navigation

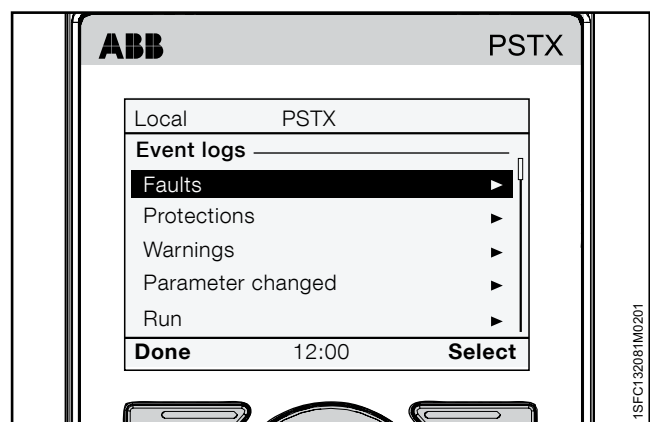


Figure 6.23

Event log

## 6.4.4 Backup

Path in menu:

Menu ► Backup handling

For navigation, see **Figure 6.24**.

You can use the movable keypad to transfer parameters from one softstarter to another during commissioning.

### Transfer of parameters

To transfer (or copy) parameters from one softstarter to another, connect the keypad to the selected softstarter and follow the instructions in **chapter 6.4.4.1** and **chapter 6.4.4.2** below:

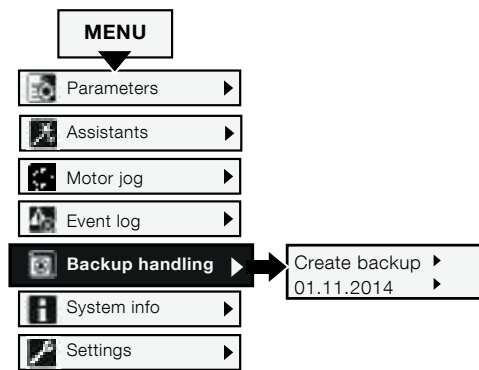


Figure 6.24  
Backups handling

### 6.4.4.1 Create backup

1. Push "Select" to enter the Backupmenu.
2. Push "Create backup" to create a backup.
3. The download of parameters shows as in **Figure 6.25**. The name of the backup file shows as the day, month and year it was created.

### Replace backup

The softstarter can store 2 backups. Use the Navigation keys to select an earlier backup and push "Replace", to replace a backup.

A backup does not change the ID and Motor rated current le.

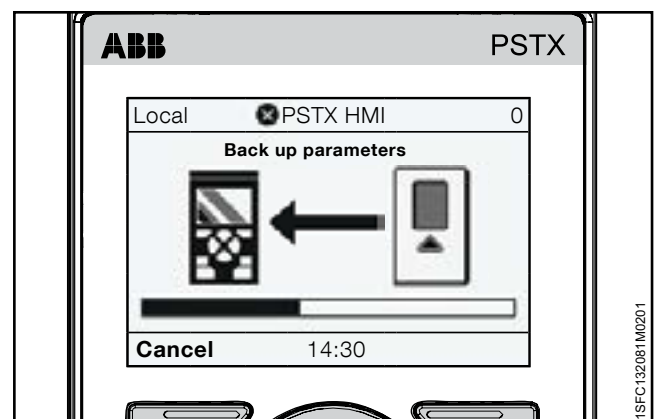


Figure 6.25  
Downloading parameters

### 6.4.4.2 Uploading of parameters

1. When you complete the download of parameters, remove the HMI from the softstarter.
2. Connect the HMI to the softstarter that must receive the backup.
3. Enter the Backup menu and use the Navigation keys to select the backup.
4. Push "Select" for the upload of the parameters. This shows as in **Figure 6.26**.

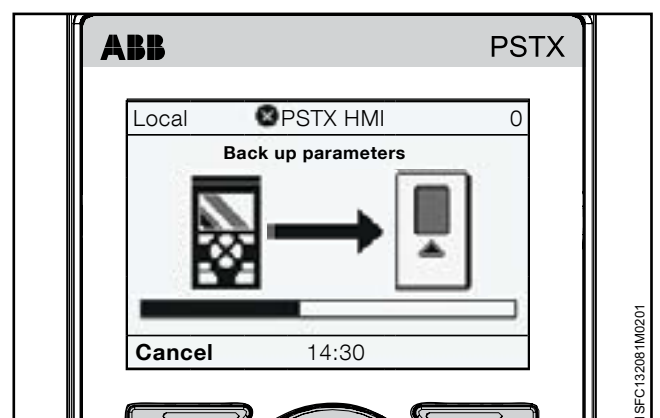



Figure 6.26  
Uploading parameters

## 6.4.5 System info

Path in menu:


Menu ► System info

For navigation, see **Figure 6.27**.

The System info menu contains system info such as Firmware version and Serial number. The System info menu shows system info of the Softstarter and HMI. Push  "Select" to enter the System info menu.

Use the Navigation keys to make your selection.

Push  "Back" to go back.

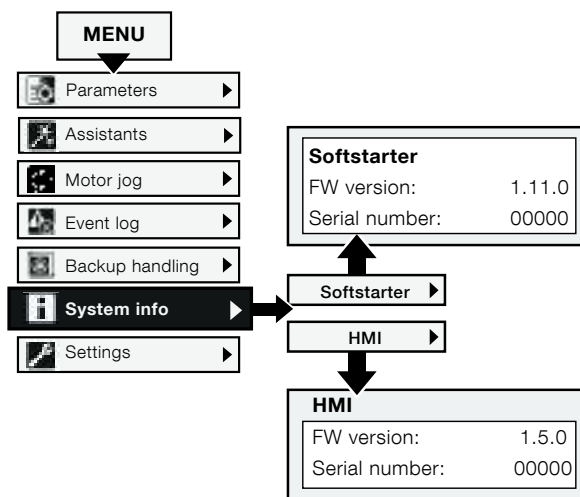

**Figure 6.27**  
System info navigation

## 6.4.6 Settings

Path in menu:

Menu ► Settings

For navigation, see **Figure 6.28**.


The settings menu contains softstarter set-up parameters.

The settings are given in these chapters:

**Table 6** Settings menus

Chapter	Description
6.4.6.1 Language	Change language of the HMI
6.4.6.2 Date and time	Set date and time for the softstarter
6.4.6.3 Display settings	Change Contrast, brightness etc.
6.4.6.4 Reset to defaults	Reset Home view layout Reset all parameters Reset operating data
6.4.6.5 Change HMI heading	The HMI heading is displayed in the status bar at the top of the HMI. Max 10 characters.

You can set the settings with Keypad and Fieldbus communication.

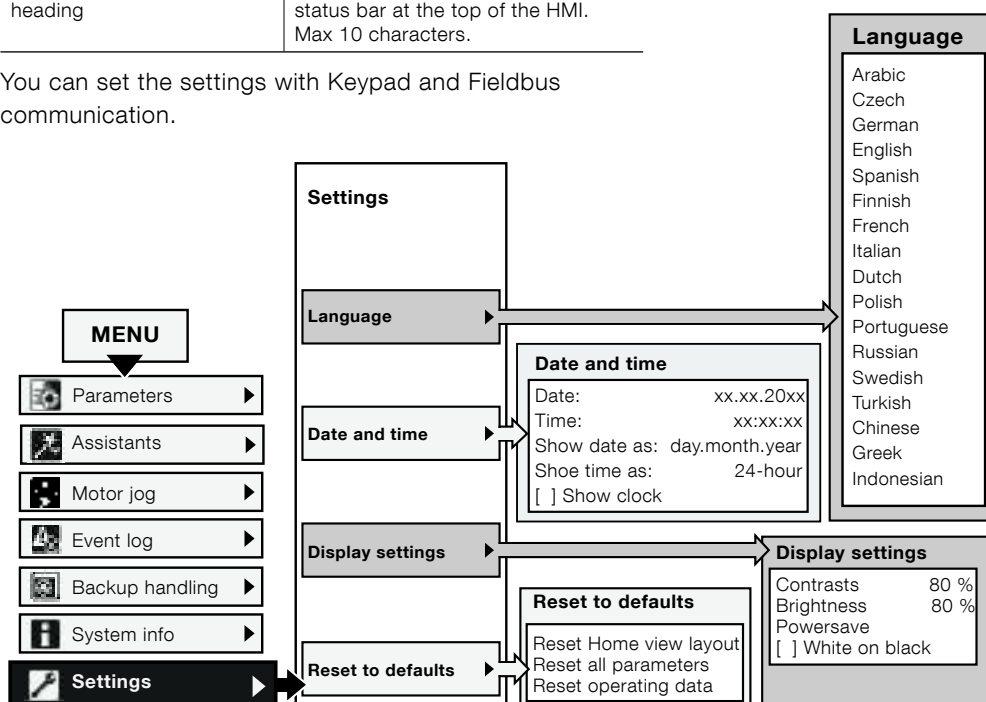

**Figure 6.28**  
Settings navigation

### 6.4.6.1 Language

Path in menu:


Menu ► Settings ► Language

For navigation, see **Figure 6.29**.

You can set the interface to these languages:

**Table 7** Language



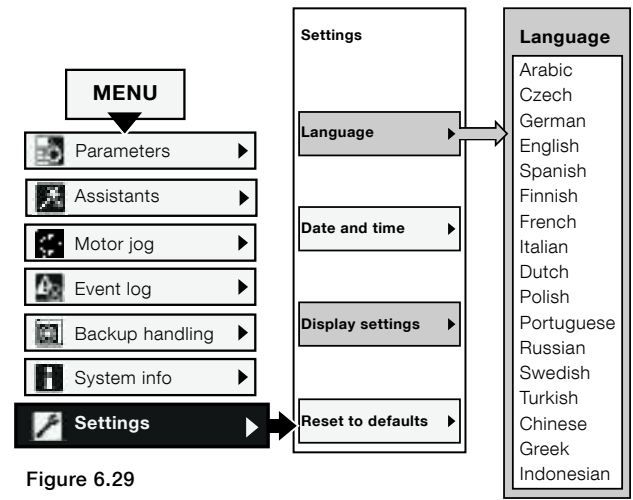



Language	Abbreviation on the display
Arabic	AR
Czech	CS
German	DE
English	US/UK
Spanish	ES
Finnish	FI
French	FR
Italian	IT
Dutch	NL
Polish	PL
Portuguese	PT
Russian	RU
Swedish	SV
Turkish	TR
Chinese (simplified Chinese)	ZH
Greek	
Indonesian	




**Figure 6.29**

Language navigation

Follow the instructions below for access to the language settings menu (start from Home view):

1. Push  "Select" to enter the menu.
2. Use Navigation keys to navigate to the Settings menu. (The icon symbol is a wrench).
3. Push  "Select" to enter the Settings menu. Use Navigation keys to navigate to the Settings menu. (The icon symbol is a wrench).
4. Highlight the first alternative and push  "Select" and then "Edit" to enter Language settings.
5. Use  and  to select language  
See **Figure 6.30**.
6. Push  "Save" to save the selected language.

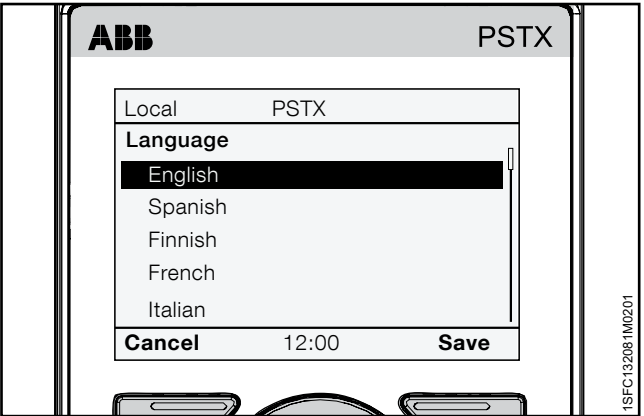

**Figure 6.30**

Language menu


### 6.4.6.2 Date and time

Path in menu:

Menu ► Settings ► Date and time

For navigation see **Figure 6.31**.

Date and Time settings include all date and time configurations for the softstarter.


To change the settings in the Date and Time menu, push  “Edit” to enter the setting. Push “Save” to save the set value. See **Figure 6.32**.

**Table 8** Date and time settings

Option	Function
Date	Set date: Day, month and year.
Time	Set time: Hour, minutes and seconds.
Show date as	Show the date at top level in this format:  CE      day . month . year US      month/day/Year SO      year-month-day
Show time as	Show the time in 12-hour or 24-hour
Show clock	Show clock On / Off

### Real time clock

The Real time clock is the local time in the softstarter. The clock runs 2 hours after control supply power is turned off. Set date and time again if a longer power failure occurs.



When the configuration of the time setting is completed, push  “Back” 3 times to go back to the Home view, top level.

### 6.4.6.3 Display settings

Path in menu:


Menu ► Settings ► Display settings

For navigation, see **Figure 6.33**.

The Display settings include all display configurations of the softstarter. To change the Display settings, Push  “Edit” to enter the setting level. Push  “Save” to save the set value.

**Table 9** Display settings


Option	Function
Contrast	Set the contrast intensity 0 ... 100%
Brightness	Set the brightness intensity 0 ... 100%
Power save	Turn off the display backlight after 30 minutes, 1, 2, or 5 hours or Never
White on black	White on black display On / Off

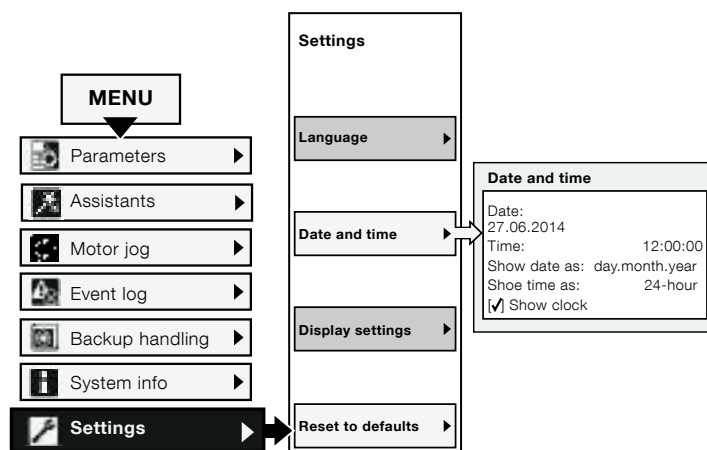

**Figure 6.31**  
Date and time



**Figure 6.32**  
Date and time menu

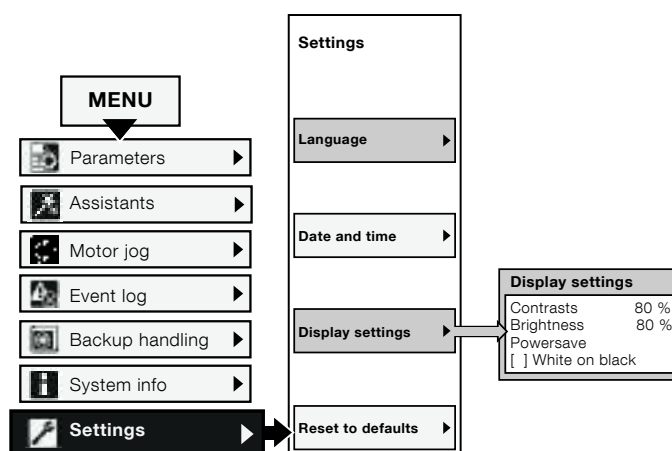

**Figure 6.33**  
Display settings

#### 6.4.6.4 Reset to defaults


 
 
Path in menu:


Menu ► Settings ► Reset to defaults

For navigation, see **Figure 6.34**.

Use the Reset to defaults menu to reset home view layout, parameters or operating data back to factory default settings.

The reset does not change the real time clock, the hour run meter, the number of starts and the presentation language.

1. Push  "Select" to enter the Reset to defaults menu.
2. Use the Navigation keys to select;  
Home view layout  
Parameters  
Operating data
3. Push  "Select" to select the data which must be reset.
4. Push  "Yes" to reset, or push "No" to cancel.
5. Confirmation of reset shows as "Done" on the display.

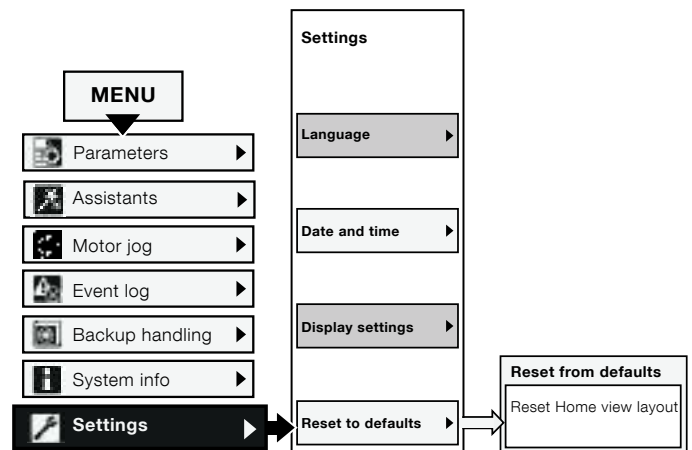



**Figure 6.34**  
Reset to defaults

#### Reset operating data

Reset operating data is divided in:

- Active energy
- Reactive energy
- Number of starts
- Motor run time
- Thyristor run time

Use the Navigation keys to select which data to reset. Push  "Reset" to reset, or push  "Back" to go back to Reset to defaults menu.

Confirmation of reset shows as "Done" on the display.





# 7 Functions

7.1 Introduction	70
7.1.1 Setting parameters	70
7.1.2 Softstarter states	70
7.1.3 Motor Current le	71
7.2 Voltage ramp	72
7.2.1 Voltage start ramp	72
7.2.2 Voltage stop ramp	73
7.1.1 Setting parameters	70
7.3 Torque ramp	74
7.3.1 Torque start ramp	75
7.3.2 Torque stop ramp	76
7.4 Full voltage start	77
7.5 Direct stop	77
7.6 Stand still brake	78
7.7 Current limit	79
7.8 Kick start	80
7.9 Slow speed	81
7.10 Motor heating	82
7.11 Motor braking	82
7.12 Sequence start	85
7.13 Automatic restart	86
7.14 Inputs/outputs	87
7.14.1 Digital inputs (DI)	88
7.14.2 Relay outputs	89
7.14.3 Analog output	90
7.14.4 Temperature sensor	91
7.16 Event groups	95
7.17 Protections	96
7.18 Warnings	95
7.19 Faults	112
7.20 Special feature	117
7.21 Settings	120
7.22 Assistants	120
7.23 Complete parameter list	120

This chapter contains descriptions of all the softstarter functions and the parameters for configuration.

## 7.1 Introduction

### 7.1.1 Setting parameters

#### Set the parameters via HMI

With the HMI Keypad, you can set parameters for each item, or as a selection of default parameters for different applications.

The HMI complete list shows all parameter groups:

---

01 Motor rated current  $I_e$

02 Start and stop

03 Limit

04 Kick start

05 Slow speed

06 Motor heating

07 Motor braking

08 Sequence start

09 Automatic restart

10 Internal IO

11 External IO

12 Communication

13 ... 19 Protections list 1-7

20 ... 24 Warnings list 1-5

25 Internal faults

26 External faults

27 Presentation

28 Service

---

For navigation sheets, see **chapter 6.4.1 Parameters**.



#### Lock/Unlock parameters

Push and hold the Options -key, Menu-key and i-key simultaneous for 2 seconds in order to lock / unlock the keypad.

This prevents accidental changes of parameters. Parameters are read-only. Still Start / Stop and R/L is active.

#### Set the parameters via Fieldbus/PLC

When Fieldbus is used, you can change parameters from the PLC.

A different document specification shows more details about parameter settings changed through Fieldbus/PLC, see **chapter 8 Communication**.

## 7.1.2 Softstarter states

The softstarter has multiple operation states, in which different functions are available.

Functions can operate in one or more softstarter states. If a function does not operate in all states, this is noted in the respective function description.

The softstarter has these states:

- Individual function
- Stand by
- Pre-start
- Start ramp
- TOR (Top of ramp)
- Stop ramp

#### Individual function

In Individual function state, the softstarter runs individual functions.

Individual functions are:

- Motor heating
- Stand-still brake
- Slow speed forward
- Slow speed reverse

#### Stand by

In Stand by state the softstarter runs no functions except diagnostics.

#### Pre-start

In Pre-start state the softstarter runs functions that are intended to run before the softstarter goes into Start ramp state. A pre start function runs during a pre-set time. Then the softstarter continues to Start ramp state:

Pre-start functions are:

- Motor heating
- Stand-still brake
- Slow speed forward
- Slow speed reverse

The pre-start functions can also be run as individual functions.

### Start ramp

In Start ramp state the softstarter runs one of the start functions to soft start a motor by controlling the output voltage or torque. The Start ramp ends and goes into Top of ramp state when the output voltage comes at 100% voltage.

Available start functions are:

- Voltage start ramp
- Torque start ramp
- Full voltage start ramp

### Top of ramp

When the motor comes at Top of ramp, (100% nominal speed) the softstarter closes the bypass and does not control the motor. In Top of ramp state the softstarter only runs diagnostics.

### Stop ramp

In Stop ramp state the softstarter runs stop functions to soft stop a motor by controlling the output voltage or torque. The stop ramp state ends and goes into stand by state when the output voltage comes at the pre-set Stop ramp end level.

Available stop functions are:

- **Voltage stop ramp**
- **Torque stop ramp**
- **No ramp**

## 7.1.3 Motor Current I<sub>e</sub>

Set the motor current when you install the softstarter.

This is the rated nominal current of the motor.



#### **WARNING**

All PSTX softstarters must be set to the rated current of the motor.

#### **Configuration of the Motor Current I<sub>e</sub> with these parameters:**

Parameter	Description	Setting range	Default value
01.01 Motor Current I <sub>e</sub>	Set the nominal current of the motor. For good performance it is important that it is set to the correct value. For Inside Delta connection, set this parameter to 58% of the nominal motor current.	Individual (type related)	30 A...570 A, divided into 15 overlapping ranges

## 7.2 Voltage ramp

When using the Voltage ramp, the voltage increases linearly from Initial start level to full voltage during start, and decreases linearly from the Step down level to Stop end voltage level during stop, see **Figure 7.1**.

The torque not always follows the voltage curve, because the torque is also subject to the current. This has the effect that the torque does not increase or decrease linearly.

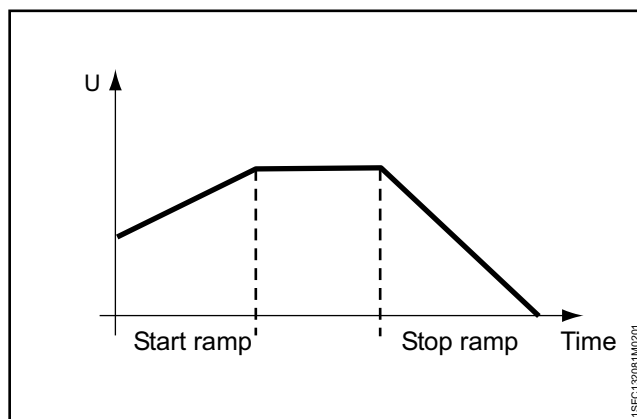


Figure 7.1  
Start and stop ramp

### 7.2.1 Voltage start ramp

When the softstarter receives a start signal, the softstarter quickly increases the voltage to the Start ramp initial level. The softstarter then controls the output voltage in a start ramp.

When the output voltage comes at Top of ramp, the softstarter closes the bypass, see **Figure**.

To come at Top of ramp these conditions are necessary:

- The Start ramp time passed, i.e. 100% output voltage.
- The current is below  $1.2 \times$  nominal motor current.

The Start ramp time is the time it takes to go from Start ramp initial level to full voltage. The time to come at Top of ramp can be longer than the set Voltage ramp time, because this is subject to the current.

If the motor starts with a very heavy load, the start ramp time can be longer than usual.

Example: If the Start ramp time is set to 2 seconds and the motor starts a heavy load, this can cause the output current to not go below the set 120% of nominal motor current when the pre-set start ramp time is reached.

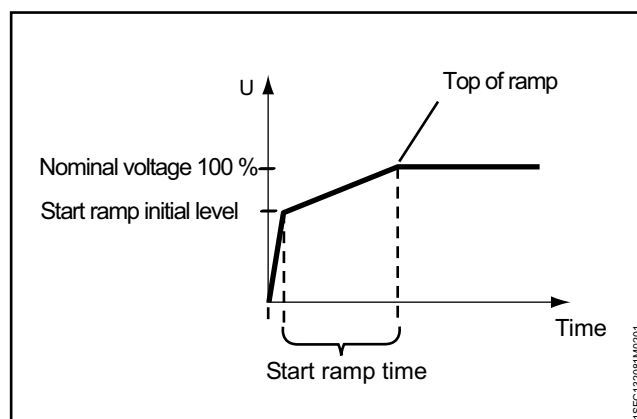


Figure 7.2  
Voltage start ramp

Configuration of the Voltage start ramp with these parameters:

Parameter	Description	Setting range	Default value
02.01 Start mode	Set the Start mode to Voltage ramp.	Voltage ramp, Torque ramp, Full voltage ramp	Voltage ramp
02.03 Start ramp Initial level	Set the voltage level from where the start ramp initiates	10 ... 99%	30%
02.04 Start ramp time	Set the effective time it takes for the voltage to reach 100%.	1 ... 120 s	10 s

### 7.2.2 Voltage stop ramp

When the softstarter receives a stop signal, the softstarter decreases the output voltage to the motor in a quick stop ramp, from full voltage down to set Step down voltage level. For best performance, set the step down level to 80%.

When step down level is reached, the softstarter controls the output voltage during preset Stop ramp time to End voltage level and cuts the output voltage to the motor, see **Figure 7.3**.

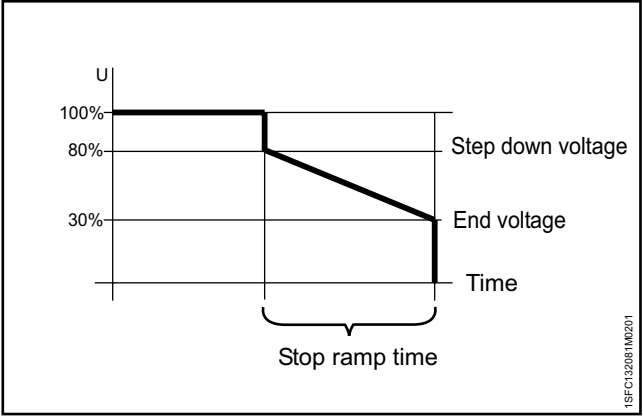


Figure 7.3  
Voltage stop ramp

#### Configuration of the Voltage stop ramp with these parameters:

Parameter	Description	Setting range	Default value
02.02 Stop mode	Set to voltage ramp.	No ramp, Voltage ramp, Torque ramp, Dynamic brake	No ramp
02.05 Stop ramp end level	Sets the level from where the stop ramp ends and the power to the motor is cut (voltage level for Voltage stop and torque level for Torque stop).	10 ... 99%	30%
02.06 Stop ramp time	Sets the effective time it takes for the voltage to come at end level	1 ... 120 s	10 s
28.05 Step down level	Sets the level from where the stop ramp initiates.	10 ... 100%	80%

## 7.3 Torque ramp

When using the Torque ramp, the softstarter controls the output voltage so that the output torque follows a specified optimal torque curve during start and stop ramp.

For Torque start ramp there are 4 different adjustable torque curves. See description of torque profile parameters for examples on when to use which curve.

The curves are:

- Constant
- Linear
- High inertia
- Progressive

When using the Torque start ramp, the acceleration is constant if the set torque curve is the same as the actual load curve. The output voltage does not increase linearly like when using the voltage start ramp, see **Figure 7.4**.

The Torque ramp makes the equipment that the motor drives stop much softer than the Voltage start ramp.

For Torque stop ramp there is one fixed torque curve. This fixed torque curve is optimized for pump applications.

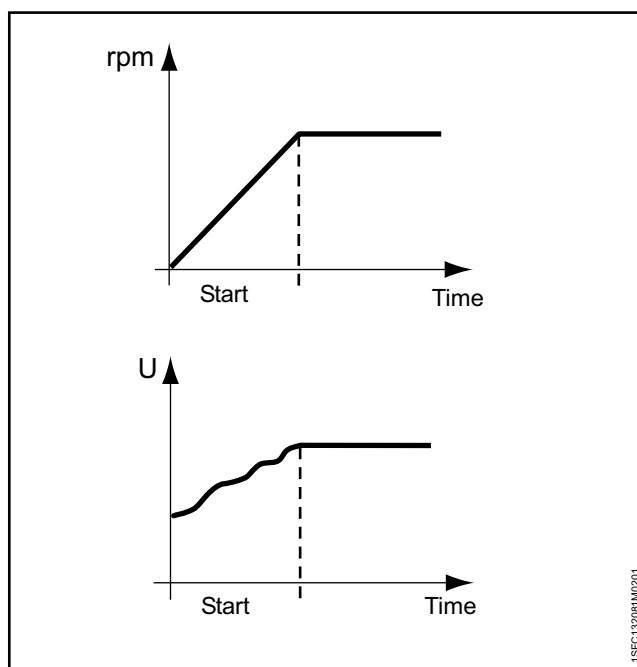


Figure 7.4

Torque start ramp

### 7.3.1 Torque start ramp

When the softstarter receives a start signal, the softstarter makes a quick ramp to set Start ramp initial level. Then the softstarter controls the output voltage so that the output torque follows a specified optimal torque curve during pre-set time to 100% nominal torque.

When the output voltage comes at 100% nominal voltage (Top of ramp), the softstarter closes the bypass.

To come at Top of ramp these conditions need to be met:

- The output voltage comes at 100% nominal voltage.
- The current is below  $1.2 \times$  nominal motor current.

The time between the start signal and when nominal torque is reached is the start ramp time.

The start ramp time can be longer if the motor starts with a very heavy load.

Example: If the Start ramp time is set to 2 seconds and the motor starts with a heavy load. This can cause that the output current does not go below set 120% of nominal motor current when the pre-set start ramp time is reached.

#### Configuration of the Torque start ramp with these parameters:

Parameter	Description	Setting range	Default value
02.01 Start mode	Set to Torque ramp.	Voltage ramp, Torque ramp, Full voltage start	Voltage ramp
02.03 Start ramp Initial level	Sets the torque level from where the start ramp initiates.	10 ... 99%	30%
02.04 Start ramp time	Sets the time it takes for the voltage to come at 100%.	1 ... 120 s	10 s
03.05 Torque limit level	Sets the limit for the torque during soft start with torque control	20 ... 200%	150%
28.06 Torque profile start	Sets the shape of the torque ramp during start. <ul style="list-style-type: none"><li>• Constant setpoint is for centrifuge</li><li>• Linear is for compressor</li><li>• High inertia pump is for long conveyor belts</li><li>• Progressive curve is for centrifugal pump</li></ul>	Constant setpoint, Linear ramp, Progressive curve, High inertia curve	Linear ramp
28.07 Torque finish	Sets the operation torque for Torque start ramp setting in percentage of base torque.	30 ... 500%	100%
28.08 Torque tune	Sets the integration time of PI controller.	0 ... 1000%	100%
28.09 Torque ctrl gain	Sets the speed of the voltage regulator during torque start and stop. It seldom needs to be changed, but if a dip occur in the torque curve during stop, increasing this value might solve it.	0.01 ... 10	0.02
28.10 Torque PI integration time	Sets the integration time of PI controller.	0.001 ... 10 s	0.004 s
28.11 Torque slip	Sets the slip difference from nominal to pull-out torque in percentage.	0.1 ... 100%	1.0%
28.12 Torque diff	Sets the maximum desired difference between reference and actual torque in percentage.	0.1 ... 100%	2.0%
28.13 Torque filter time	Sets the Torque control filter time in seconds.	0.01 ... 10 s	0.02 s

### 7.3.2 Torque stop ramp

When using the Torque stop ramp, the output voltage to the motor the torque follows a specified optimal curve from the Step down level to end voltage during stop. The Torque stop ramp makes the equipment that the motor drives stop much softer than when using voltage ramp. See **Figure 7.5**.

This can be especially useful in pump applications where a sudden stop can cause water hammering and pressure surges.

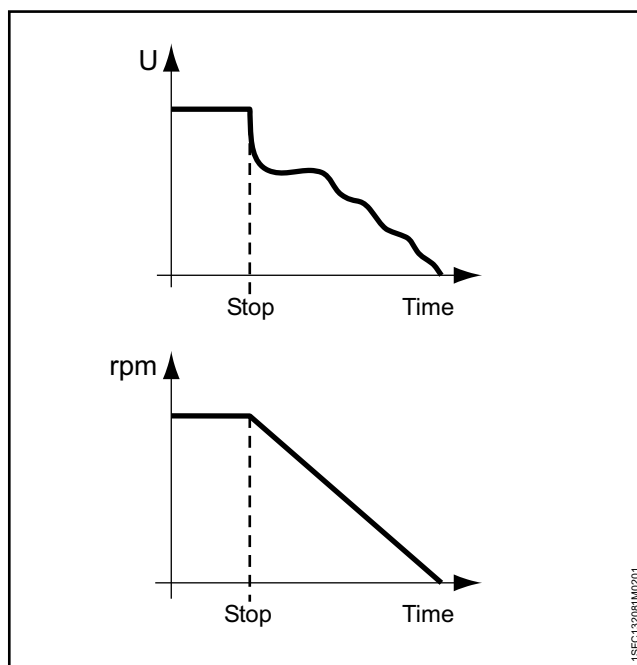


Figure 7.5

Torque stop ramp

7

#### Configuration of the Torque stop ramp with these parameters:

Parameter	Description	Setting range	Default value
02.02 Stop mode	Set to Torque ramp.	No ramp, Voltage ramp, Torque ramp	No ramp
02.05 Stop ramp end level	Sets the level from where the stop ramp ends and the power to the motor is cut(voltage level for Voltage stop and torque level for Torque stop.	10 ... 99%	30%
02.06 Stop ramp time	Sets the time it takes for the voltage to come at end level.	1 ... 120 s	10 s
28.05 Step down level	Sets the level from where the stop ramp initiates.	10 ... 100%	80%
28.08 Torque tune	Sets the adjustment of resistive losses.	0...1000%	100%
28.09 Torque ctrl gain	Sets the speed of the voltage regulator during torque start and stop. It seldom needs to be changed, but if a dip occur in the torque curve during stop, increasing this value might solve it.	0.01 ... 10	0.02
28.10 Torque PI integration time	Sets the integration time of PI controller.	0.001 ... 10 s	0.004 s
28.11 Torque slip	Sets the slip difference from nominal to pull-out torque in percentage.	0.1 ... 100%	1.0%
28.12 Torque diff	Sets the maximum desired difference between reference and actual torque in percentage.	0.1 ... 100%	2.0%
28.13 Torque filter time	Sets the Torque control filter time in seconds.	0.01 ... 10 s	0.02 s



## 7.4 Full voltage start

When using the full voltage start, the softstarter increases the motor speed as fast as possible. The motor voltage ramps up to full voltage in ½ seconds.



### INFORMATION

Full voltage start ignores the Current limit.

Configuration of the Full voltage start with these parameters:

Parameter	Description	Setting range	Default value
02.01 Start mode	Set to Full voltage start.	Voltage ramp, Torque ramp, Full voltage start	Voltage ramp

## 7.5 Direct stop

When using the Direct stop the output voltage to the motor is 0.

Configuration of the Direct stop with these parameters:

Parameter	Description	Setting range	Default value
02.02 Stop mode	Set to No ramp.	No ramp, Voltage stop ramp, Torque stop ramp	Voltage ramp

## 7.6 Stand still brake

The Stand-still brake function brakes the motor. Use this during pre-start to make sure that the motor does not run before you start the Start ramp. You can also control the Stand-still brake from a digital I/O or a Fieldbus.



### WARNING

If the softstarter is connected inside-delta, use of the Stand-still brake can cause damage to the equipment.



### WARNING

Because this function makes the motor warm, we recommend to use a PTC or PT100 element to monitor the temperature.

In some conditions, the built-in EOL is not accurate for this feature.



### INFORMATION

Stand-still brake only works when the softstarter is connected in-line.

### Configuration of the Stand-still brake with these parameters:

Parameter	Description	Setting range	Default value
02.07 Pre-start function	Set to Stand-still brake.	Off, Motor heating, Stand-still brake, Jog forward, Jog backward	Off
02.08 Pre-start time	Set the duration of the pre-start function.	0.0 ... 7200.0 s	10.0 s
07.01 Stand still brake strength	Set the Braking strength 10-100%. Select a suitable value for the application.	10 ... 100%	50%

## 7.7 Current limit

Current limit sets a maximum value of the starting current output to the motor. The time to come at full voltage can be longer than the set Start ramp Time when Current limit is enabled.

There are 3 different Current limit functions:

- Normal current limit
- Dual current limit
- Ramp current limit



### WARNING

If the load is very heavy, current limit can prevent the current to decrease below the set current level and cause overheating.

#### Normal current limit

When using Normal current limit and the set current limit is reached, the output voltage stays stable until the current level falls below the set current limit. Then the start ramp continues.

#### Dual current limit

Dual current level has 2 current limit levels. When the Current limit is reached, the output voltage stay constant until the set time expires or the current decreases. If the current decreases, the softstarter continues the voltage ramp. If the second current limit time expires and the current has not decreased, the softstarter increases the current to the Dual current limit. See **Figure 7.6**. When the current comes at the Dual current limit the softstarter behaves as for normal Current limit.

Dual current limit can be used as a back-up function to prevent overheating.

#### Ramp current limit

When the current comes at the first current limit level the output voltage restricts the current from increasing at a maximum linearly curve up to the second current limit. The set time determines the time it takes for the current limit to come at the second current level.

When the current comes at the second current limit, the softstarter behaves as for the normal current limit.

You can use Ramp current limit as a back-up function to prevent overheating.

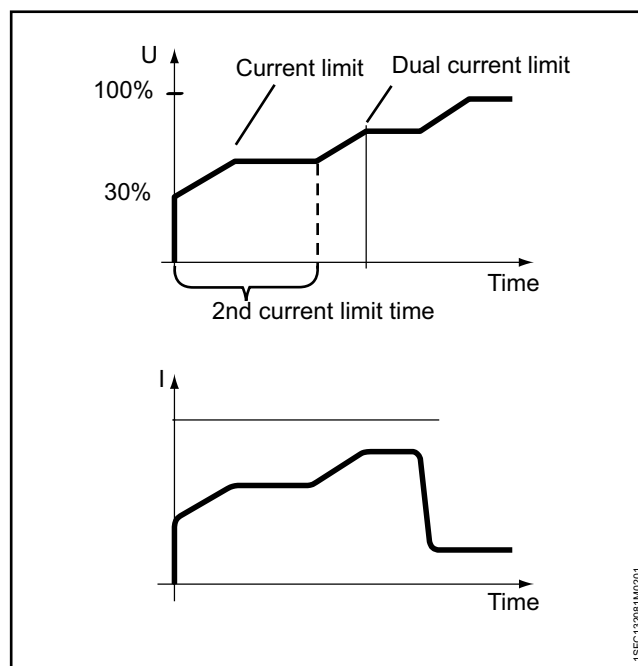


Figure 7.6

Dual current limit


### Current limit has these parameters:

Parameter	Description	Setting range	Default value
03.01 Current limit type	Set the Current limit type.	Off, Normal, Dual, Ramp	Normal
03.02 Current limit level	Sets the first level to which the current is limited during start.	1.5 ... 7.5 x I <sub>e</sub>	4.0 x I <sub>e</sub>
03.03 2nd curr lim level	Sets the level of the second current limit.	1.5 ... 7.5 x I <sub>e</sub>	7.0 x I <sub>e</sub>
03.04 2nd curr lim time	Sets the time limit from the start signal when the second current limitation comes in operation.	2 ... 120 s	8 s

7.8 Kick start

Kick start function is a function to kick loose the motor initial friction during a set time and level.  
If Kick start is enabled, the start ramp starts directly after Kick start.

See **Figure 7.7** .



**INFORMATION**

Current limit function does not work during kick start.

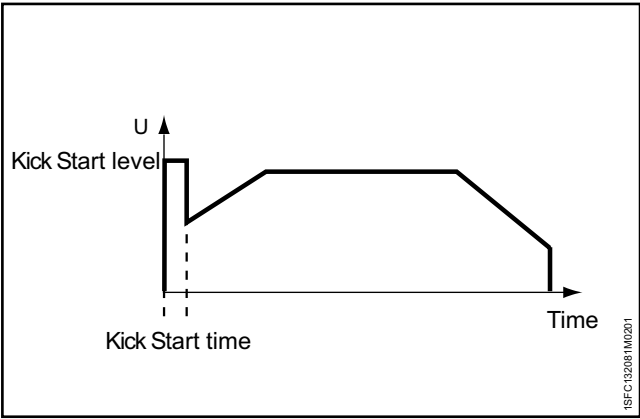


Figure 7.7  
Kick start

Kick start has these parameters:

Parameter	Description	Setting range	Default value
04.01 Kick start	Enables a voltage peak at the beginning of the start ramp.	On, Off	Off
04.02 Kick start level	Sets the level of the Kick start in percentage of rated voltage.	50 ... 100%	70%
04.03 Kick start time	Sets the duration of the Kick start in seconds.	0.20 ... 2.00 s	0.20 s

## 7.9 Slow speed

Slow speed is an individual function, or a pre-start function to run the motor with low voltage output. You can use this feature for example to position a traverse or mill band.

Operate this function through the HMI, IO or Fieldbus.

Slow speed has 3 pre-specified speeds:

- Fast jog
- Jog
- Creep

The motor strength can be adjusted with separate parameters. Select a suitable value for the application.



### WARNING

The torque when using Slow speed is maximum  $\frac{1}{3}$  of the full motor torque. This is achieved when using Fast jog and the strength parameter set to 100%. Too high value of the motor strength could cause oscillations and if set to too low value, the motor may not start.



### WARNING

Because Slow speed function warms up the motor we recommend to use a PTC or PT100 element for temperature monitoring.

In some conditions, the built-in EOL is not accurate for this feature.

You can run the motor in the forward and reverse direction, with different slow speed speeds in each direction. When the softstarter receives a Slow speed signal, the motor accelerates up to a constant speed that is slower than the nominal speed, for as long as the slow speed signal remains active. When the Slow speed signal is deactivated, the softstarter immediately cuts the voltage applied to the motor and the motor stops. For navigation, see **6.2.4 Motor jog**.

**Slow speed is configured with the following parameters:**

Parameter	Description	Setting range	Default value
02.07 Pre-start function	Set to Slow speed forward or Slow speed reverse.	Off, Motor heating, Stand-still brake, Jog forward, Jog backward	Off
02.08 Pre-start time	Sets the duration of the pre-start function.	0.0 ... 7200.0 s	10.0 s
05.01 Slow speed forward	Sets the Slow speed forward. Fast jog forward is 33%, Jog forward is 15% and Creep forward is 8% of the nominal motor speed.	Fast jog, Jog, Creep	Jog
05.02 Slow speed forward strength	Parameter related to the torque that is generated during Slow speed in the forward direction.	10 ... 100%	50%
05.03 Slow speed reverse	Sets the Slow speed reverse. Fast jog reverse is 33%, Jog reverse is 20% and Creep reverse is 9% of the nominal motor speed.	Fast jog, Jog, Creep	Jog
05.04 Slow speed rev strength	Parameter related to the torque that is generated during Slow speed in the reverse direction.	10 ... 100%	50%



### INFORMATION

Do not use slow speed for more than 2 minutes, as this will cause the motor to heat up excessively.



### INFORMATION

Slow speed is only working when the softstarter is connected in-line.

## 7.10 Motor heating

Use the Motor heating as a pre-start function to heat the motor before actual start without rotation to the motor. Or use it as an individual function operated from a digital input or Fieldbus.

The softstarter supplies a current to the motor, without coming at the torque level that starts the motor.



### WARNING

If the softstarter is connected inside-delta and using the Motor heating, this can cause damage to the equipment.



### WARNING

Because Motor heating function warms up the motor we recommend to use a PTC or PT100 element for temperature monitoring.

In some conditions the built-in EOL is not accurate for this feature.



### INFORMATION

Motor heating only works when the softstarter is connected in-line.

7

#### Motor heating has these parameters:

Parameter	Description	Setting range	Default value
02.07 Pre-start function	Set to Motor heating.	Off, Motor heating, Stand-still brake, Jog forward, Jog backward	Off
02.08 Pre-start time	Sets the duration of the pre-start function.	0.0 ... 7200.0 s	10.0 s
06.01 Motor heating capacity	Sets the heating power to the motor. Select a suitable value for the application.	10 ... 100000 W	10 W

## 7.11 Motor braking

### Stand still brake

Stand still brake prevents a motor from spinning when in standstill condition. It can be activated through IO, fieldbus or as a pre-start function.

### Dynamic brake

Dynamic brake is an intelligent variant of DC brake starting with a period of dynamic braking followed by a switch to DC brake. During the dynamic brake the firing angle and thyristor firing sequence are continuously recalculated depending on operating conditions. During DC brake these are pre-determined. The reason for switching to DC brake is because it is effective at low speed but ineffective at high speed. During both dynamic- and DC-brake the kinetic energy of the motor is converted to heat that is dissipated in the rotor.

Motor braking with softstarter is not an exact science. Trial and error testing is required to find the optimal parameter values.



#### **WARNING**

Braking exerts a lot of stress on the thyristors so from a thermal perspective a brake shortly after a start can be counted as two consecutive starts.

If the brake strength is set to a too large value the internal thyristor overload fault or electronic overload protection can trip.



#### **INFORMATION**

Using a softstarter to brake the motor will cause noise and vibrations just like any other braking method. If a fast stop time is required the brake strength will have to be set to a large value which will result in increased noise and vibration.



#### **INFORMATION**

Parameter 07.03 (Dynamic brake strength) and 07.04 (DC brake strength) are the ones that affect the motor deceleration time. Parameter 07.02 (Motor brake time) only works as a timeout. The goal should be to choose the lowest possible braking strength and still fulfill the user's deceleration time requirements.



#### **INFORMATION**

To use Dynamic brake set parameter 02.02 (Stop mode) to Dynamic brake.



#### **INFORMATION**

An external PTC or PT100 sensor to monitor the motor temperature is recommended.

## Motor heating has these parameters:

Parameter	Description	Setting range	Default value
07.01 Stand still brake strength	Sets the braking strength, choose suitable value for application.	10 – 100%	50%
07.02 Motor brake time	Sets the motor brake time.	1.0 – 100.0 s	1.0 s
07.03 Dynamic brake strength	Sets the Dynamic braking strength.	10-100%	40%
07.04 DC brake strength	Sets the DC braking strength.	10-100%	40%
07.05 DC brake switch speed threshold	The approximate speed when the switch from dynamic brake to DC brake occurs.	10-100%	28%
07.06 DC brake switch delay time	Sets the time that the speed has be below the threshold before the switch to DC brake occurs. Configure this parameter only if the switch occurs too soon or too late.	0.1 – 100.0 s	3.0 s
02.02 Stop mode	Sets the desired stop mode: No ramp = Immediately cuts power to the motor, Voltage stop ramp = Decreases voltage linearly, Torque stop ramp = Decreases torque in a pre-defined pattern, Dynamic brake = Applies brake to the motor	No ramp/Voltage stop ramp/ Torque stop ramp/Dynamic brake	No ramp
28.51 Firing angle sweep	Enables dynamic optimization of dynamic brake	Off, On	On
28.52 Auxiliary condition	Enables additional thyristor trig occasions of dynamic brake	Off, On	Off
28.53 Flux threshold gain 1	Flux threshold for thyristor trig of dynamic brake	0.0 – 1.0	0.022
28.54 Flux threshold gain 2	Flux threshold for speed estimation of dynamic brake	0.0 – 1.0	0.147



## 7.12 Sequence start

The softstarter can start up to 3 different motors sequentially, sequence 1, 2 and 3. This is suitable when setting up the softstarter with different applications. Select the parameter set through input signal to the softstarter.

Parameter settings and physical connections for programmable inputs must agree.



### WARNING

EOL does not work during Sequence start.  
Recommended to add separate overload protections for each motor.

For connections, see **chapter 5.1.2.5 Programmable inputs (Sequence start)**.

Parameters set for sequence start 1, 2 and 3 are equal.

If the softstarter trips, and the trip must stop the motor, all motors stop.

Sequence start has these parameters:

*Example: Start 1, (Start mode seq 1) is set to Run 1 relay, (K4, K5 or K6) the relay closes when the start signal is given, which leads to a power transfer. This can change between softstarters and their specific parameter settings.*

Parameter	Description	Setting range	Default value
08.01 Sequence mode	Enable sequence start of motors.	Off, Start multiple motors	Off
08.02 I <sub>e</sub> seq 1 08.30 seq 2 08.60 seq 3	Sets the nominal current for the motor. For good performance, it is important that the nominal current is set to the correct value. For Inside Delta connection, set this parameter to 58% of the nominal motor current.	Individual (different for each type)	9.0 A...570.0 A, divided into 15 overlapping ranges
08.03 Start mode seq 1 08.31 seq 2 08.61 seq 3	Sets the desired start mode.	Voltage start ramp, Torque start ramp, Full voltage ramp	Voltage start ramp
08.04 Start ramp time seq 1 08.32 seq 2 08.62 seq 3	Sets the time it takes for the voltage to come at 100%.	1 ... 120 s	10 s
08.05 Start ramp init lev seq 1 08.33 seq 2 08.63 seq 3	Sets the level from where the start ramp initiates (voltage level for Voltage start and torque level for Torque start).	10 ... 99%	30%
08.06 Curr lim lev seq 1 08.34 seq 2 08.64 seq 3	Sets the level to which the current is limited during start.	0.5 ... 7.5 × I <sub>e</sub>	7.0 × I <sub>e</sub>
08.07 Kick start seq 1 08.35 seq 2 08.65 seq 3	Enables a voltage peak at the beginning of the start ramp.  Information: The function Current Limit is not in operation during Kick start.	Off, On	Off
08.08 kick start level seq 1 08.36 seq 2 08.66 seq 3	Sets the level of the Kick start in percentage of rated voltage.	50 ... 100%	70%
08.09 Kick start lvl seq 1 08.37 seq 2 08.67 seq 3	Sets the duration of the Kick start in seconds.	0.2 ... 2.0 s	0.2 s
08.06 Torque lim lvl seq 1 08.38 seq 2 08.68 seq 3	Sets the level to which the torque is limited during the start with torque control.	20 ... 200%	150%
08.10 Torque tune seq 1 08.39 seq 2 08.69 seq 3	Adjustment of resistive losses.	0 ... 1000%	100%
08.11 Torque ctrl gain seq 1 08.40 seq 2 08.70 seq 3	Sets the speed of the voltage regulator during torque start and stop. It seldom needs to be changed, but if a dip occur in the torque curve during stop, increasing this value might solve it.	0.01 ... 10.0	0.24

## 7.13 Automatic restart

The softstarter automatically starts the motor again after a fault occurred.



### INFORMATION

Automatic restart only works for phase loss, bad network and low supply voltage..

The primary requirement is that if a fault or protection was asserted, the softstarter automatically starts the motor again in order to ensure an uninterrupted process.

The event only resets after the Auto-reset delay time passed. If Auto-restart is enabled, the softstarter does not start the fault relay directly, because the fault relay can sometimes be connected to a breaker upstream.

The softstarter makes multiple attempts to start again, with a fixed time interval between each, and ignores the start digital input signal during this time.

If the fault still remains after a restart, this is a failed attempt to start again.

The fault relay is only on after the number of failed restarts is higher than the given number.

Upon a stop signal the auto-restart sequence is aborted and the fault relay is off.

The programmable options are:

- None - No function on the digital input.
- Reset - Fault/protection reset.
- Enable - When In0=0, the softstarter stops immediately. When In0=1, the softstarter is in normal operation. Overrides all other inputs, except LOCAL CONTROL.
- Slow speed forward - While the digital input is high, the motor will slowly move forward.
- Slow speed reverse - While the digital input is high, the motor will slowly move in the reverse direction.
- Motor heating - While the digital input is high, the motor heating is active.
- Stand still brake - While the digital input is high, the stand still brake is active.
- Start reverse - While the digital input is high, the softstarter will start in the reverse direction, using external reversing contactors.
- User defined protection - When activated (the protection can be programmed to be active low or high) the User defined protection will be activated.
- Emergency mode - Active high, Emergency mode is activated when digital input is high. - Active low, Emergency mode is activated when digital input is low.
- Fieldbus disable control - When the digital input is set high, the motor cannot be controlled from the fieldbus. Instead the start/stop digital input must be used, or the HMI.
- Start 1 - Start motor 1. See **chapter 7.12 Sequence start**.
- Start 2 - Start motor 2. See **chapter 7.12 Sequence start**.
- Start 3 - Start motor 3. See **chapter 7.12 Sequence start**.
- Switch to remote control - A positive flank from low to high on digital input takes the control from the HMI, i.e. local control is changed to remote control.

**Automatic restart has these parameters:**

Parameter	Description	Setting range	Default value
09.01 Auto-reset delay time	Delay time after which the event is reset.	0 ... 3600 s	10 s
09.02 Auto-restart	Enable auto-restart function.	Off,On	Off
09.03 Auto-restart max attempts	Max number of auto-restart attempts.	1 ... 10	5

## 7.14 Inputs/outputs

This chapter gives a description of input and output signals (I/O) such as digital inputs, relay outputs, analog outputs, temperature inputs, and external digital inputs.

Chapter	Function
7.12.1	Digital inputs
7.12.2	Relay outputs
7.12.3	Analog outputs
7.12.4	Temperature sensor

### Internal I/O

Internal I/O are the integrated signals to the softstarter.

The internal I/O provides these:

- 5 Digital inputs
- 3 Relay output
- 1 Analog output

### Extension I/O (Option)

The softstarter can be extended with more inputs and outputs by using the I/O Extension module. The I/O Extension module provides these:

- 8 Digital input
- 4 Relay output
- 1 Analog output

To use an extension I/O provides the same possibilities to use all the softstarters functions as for the programmable internal I/O.

Available I/O Extensions. See **chapter 5.1.3 Extension I/O**.

For example, an extension I/O is useful when a sequence start is necessary.

### Connect the I/O Extension

- Set parameter Com3 function (12.01) to the I/O Extension.
- Connect the DX111 or the DX122 1Ca and 1Cb to Com3 terminals.
- Use parameter group 11 to program the function of each DX111/DX122 input and output.

External digital inputs (extension I/O) have these parameters:

Parameter	Description	Setting range	Default value
12.01 Com3 function	Set the function of the Com3 port to Extension IO	None, Test, modbus RTU slave, Extension IO.	Test

## 7.14.1 Digital inputs (DI)

The softstarter has 5 digital inputs for basic control of the unit.

The 5 digital inputs are terminal 13, 14, 15, 16 and 17.

The inputs are named

- Start
- Stop
- In0
- In1
- In2

Start and Stop inputs are fixed to start and stop function and cannot be changed.

In0, In1 and In2 are programmable inputs. Functions can be related to the physical signal through a drop down menu on the HMI.

Use the inputs with 24 V and current sinking type, 10 mA. The digital input is isolated and can withstand up to 100 V in potential difference between the softstarter functional ground and the ground of the interconnected system. You can use the input with internal 24 V or external 24 V supply.

The digital input values for respective input voltage:

“0” = 0 – 5 V

“1” = 15 – 33 V

Maximum voltage input is 33 V and minimum is -0.5 V. Outside these voltage ranges the digital value is undefined and can be either “0” or “1”.

**Internal digital Inputs (Internal I/O) have these parameters:**

Parameter	Description	Setting range	Default value
10.01 In0 function	Function of programmable digital input.	None, Reset, Enable, Slow speed forward, Slow speed reverse, Motor heating, Stand-still brake, Start reverse, User defined protection, Emergency mode, Fieldbus disable control, Start 1, Start 2, Start 3	Reset
10.02 In1 function		Same as In0	None
10.03 In2 function		Same as In0	None

**External digital Inputs (extension I/O) have these parameters:**

Parameter	Description	Setting range	Default value
11.01 1DI0 function	Function of programmable digital input.	None, Reset, Enable, Slow speed forward, Slow speed reverse, Motor heating, Stand-still brake, Start reverse, User defined protection, Emergency mode, Fieldbus disable control, Start 1, Start 2, Start 3	Reset
11.02 1DI1 function	Same as 1DI0	Same as 1DI0	None
11.03 1DI2 function	Same as 1DI0	Same as 1DI0	None
11.04 1DI3 function	Same as 1DI0	Same as 1DI0	None
11.05 1DI4 function	Same as 1DI0	Same as 1DI0	None
11.06 2DI5 function	Same as 1DI0	Same as 1DI0	None
11.07 2DI6 function	Same as 1DI0	Same as 1DI0	None
11.08 2DI7 function	Same as 1DI0	Same as 1DI0	None

## 7.14.2 Relay outputs

The softstarter has 3 relay outputs. The relay outputs are K4, K5 and K6. The relays outputs are: 30VDC/250VAC  
I<sub>th</sub> = 5A , I<sub>e</sub> = 1,5Amp (AC-15).

You can set the function of these relay output signals  
Functions or an event group can be related to the physical signal through a drop down menu on the HMI.

The programmable options for each relays are:

- None – No function on the relay output.
- Run – Indicates when the softstarter gives voltage to the motor.
- Top of ramp (TOR) – Indicates that motor runs on full voltage.
- Event group (0-6) – Faults, protections, warning are all selectable by customer.
- Sequence 1-3 Run – Used to control the line contactors during sequence start.
- Sequence 1-3 TOR – Used to control the bypass contactors during sequence start.
- Run reverse – Used to close the reversing contactor.

As default K4 is set to function Run, K5 to Top of ramp and K6 to Eventgroup 0.

Description of the relay terminals

Each relay has 3 terminals: 1 common terminal (COM), 1 normally open terminal (NO) and 1 normally closed terminal (NC). . See **Figure 7.8** .

Normally open – Circuit is open in normal mode (circuit is not shorted to common).

Normally closed – Circuit is closed in normal mode (the circuit is continuously shorted to common).

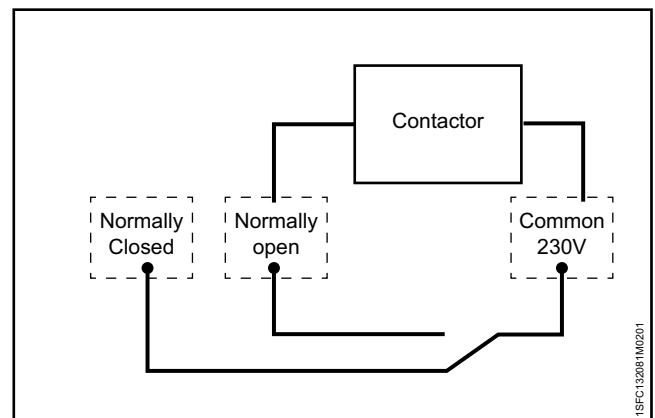


Figure 7.8

A contactor may for example be connected (230 volts)

Internal relay outputs (internal I/O) have these parameters:

Parameter	Description	Setting range	Default value
10.04 K4 function	Function of programmable output relay K4, K5, K6.	None, Run, Top of ramp, Eventgroup 0 -6, Sequence 1-3 Run, Sequence 1-3 TOR, Run reverse	Run
10.05 K5 function	Same as K4 function	Same as K4 function	Top of ramp
10.06 K6 function	Same as K4 function	Same as K4 function	Event group 0

**External relay outputs (extension I/O) have these parameters:**

Parameter	Description	Setting range	Default value
11.09 1DO0 function	Function of programmable output relay 1DO0 (extension IO).	None, Run, Top of ramp, Eventgroup 0 -6, Sequence 1-3 Run, Sequence 1-3 TOR, Run reverse	Run
11.10 1DO1 function	Same as 1DO0	Same as 1DO0	Top of ramp
11.11 2DO2 function	Same as 1DO0	Same as 1DO0	Event group 0
11.12 2DO3 function	Same as 1DO0	Same as 1DO0	Motor Current, A

### 7.14.3 Analog output

The softstarter has 1 analog output for an analog meter, or the PLC.

Configuration of the parameter analog output type, AO type, to show:

- Motor current, A
- Mains voltage, V
- Active power, kW
- Active power, HP
- Reactive power, kVar
- Apparent power, kVA
- Active energy, kWh
- Reactive energy, kVarh
- cos phi
- Motor temperature, %
- Thyristor temperature, %
- Motor voltage, %
- Mains frequency, Hz
- PT100 temperature, centigrade
- PTC resistance, Ohm

The voltage or current output can be set by a configuration parameter, AO reference in the softstarter. The selection of voltage or current must be set to adapt to the analog meter or the PLC.

The settings are:

- 0-10 voltage output, V
- 0-10 current output, mA
- 0-20 current output, mA
- 4-20 current output, mA

AO is the reference to the output voltage in 0-100% of the set parameter AO max and AO min.

**Internal Analog output has these parameters:**

Parameter	Description	Setting range	Default value
10.07 AO reference	Sets the Analog output reference	0-10 mA, 0-20 mA, 4-20 mA, 0-10 V	4-20 mA
10.08 AO type	Sets the Analog output type.	Motor current, Mains voltage, Active power, Active power, Reactive power, Apparent power, Active energy, Reactive energy, cos fi, Motor temperature, Thyristor temperature, Motor voltage, Mains frequency, PT100 temperature, PTC resistance	Motor current, A
10.09 AO max value	Sets the max analog output value.	0,0 ... 1000000	500
10.10 AO min value	Sets the min analog output value.	0,0 ... 1000000	0

**External Analog output (Extension I/O) has these parameters:**

Description	Description	Setting range	Default value
11.13 1AO0 reference	Sets the Analog output reference.	0-10 mA, 0-20 mA, 4-20 mA, 0-10 V	4-20 mA
11.14 1AO0 type	Sets the Analog output type.	Motor current, Mains voltage, Active power, Active power, Reactive power, Apparent power, Active energy, Reactive energy, cos fi, Motor temperature, Thyristor temperature, Motor voltage, Mains frequency, PT100 temperature, PTC resistance	Motor current, A
11.15 1AO0 max value	Sets the max Analog output value.	0,0 ... 1000000	500
11.16 1AO0 min value	Sets the min Analog output value.	0,0 ... 1000000	0

*Example:*

- *AO type is set to Motor current.*
- *AO reference is set to 0-10 V*
- *AO min to 0, and AO max to 3000.*

*This means that when the motor current is:*

- *3000 A, the output voltage is 10 V.*
- *0 A, the output voltage is 0 V.*
- *1500 A, the output voltage is 5 V.*

## 7.14.4 Temperature sensor

### Temperature inputs

There is 1 temperature input. The user can set 3 different types of temperature sensors: See **chapter** Temperature sensors 7.17.14

- PTC
- PT100
- Bi-metal switch

These can be connected to different protections.  
A protection can come on if a particular temperature occurs.

### PTC

The PTC temperature input can measure a motor temperature in the range of  $-25^{\circ}$  to  $250^{\circ}$ . The PTC measurement obeys the standard for a Mark-A detector. Refer to IEC60947-8.

The unit can sense if a sensor is connected to the softstarter. You can also enable the temperature measurement and manually reset, automatic reset or get indication only.

### PT100

The softstarter has a 3-wire PT100 input that can be combined and share terminals with the PTC input. The trip temperature is set by the user. The maximum trip temperature is  $250^{\circ}$  and lowest is  $-25^{\circ}$ .

The PT100 measurement must have an accuracy of  $\pm 3^{\circ}$  with 3 wires measuring if the 3 connecting cables have the same resistance.

If a short circuit is detected then the error is reported to the user. The softstarter can sense if a sensor is connected to the softstarter.

You can enable the temperature measurement. You can do a manual reset, automatic reset or to indications only.

### Bi-metal switch

This function will be implemented in next release.

You can combine temperature input with bi-metal switches for detecting overtemperature. These temperature sensors behave like a switch that opens or close at the trip temperature. Each type (NO – normally open or NC – normally closed) is supported. The maximum current through the bi-metal switches is 100 mA.

## 7.15 Fieldbus

PSTX has 1 Anybus port, 1 Fieldbus plug adaptor port (FBPA), and 1 modbus RTU port. You can use only 1 bus at a time: the user cannot connect the softstarter to multiple Fieldbuses.

The port used for modbus RTU is a multifunction port that you can use to connect an Extension IO module. If an Extension IO module is necessary you cannot use the port for modbus RTU. Use an Anybus modbus RTU module instead.

In the IP-based Fieldbuses, such as modbus TCP, the user must set IP address, gateway, subnet mask and DHCP client.

### Fieldbus type

When you use Fieldbus communication, select the present type of Fieldbus:

- Modbus-TCP
- Modbus-RTU
- DeviceNet
- Profibus
- EtherNet/IP
- Profinet

### Fieldbus control

If you use the softstarter with Fieldbus communication, set the Fieldbus interface to ON before it can take action.

### Fieldbus address

If you use the softstarter with Fieldbus communication, set a Fieldbus address for the softstarter. Select a suitable and unoccupied number as the address.



#### CAUTION

The motor can start unexpectedly if there is a start signal present during 1 of the actions below.

- Changing from 1 type of control to another (Fieldbus control / hardwire control).
- Remember that when Fieldbus auto disable is active, this change can occur automatically.
- Re-programming of the programmable inputs.
- Reset all Settings (sets programmable input to Enable).

### Fieldbus failure operation

See **chapter 7.17.21 Fieldbus failure protection**.



## Fieldbus Inputs/Outputs

Functions set in the softstarter as Fieldbus digital inputs (DI) are in fact the digital inputs to the PLC i.e. the data flow from the softstarter through the network to the PLC.

Fieldbus digital outputs (DO) are not configurable. The output (DO) gives a description of data flow from the network to the softstarter i.e. appears as an input, from the softstarter point of view.

**Fieldbus communication has these parameters:**

Parameter	Description	Setting range	Default value
12.01 Com3 function	Sets the function of the Com3 port.	None, Test, Modbus RTU slave, Extension IO	Test
12.02 FB interface connector	Sets the Fieldbus interface selection.	FbPlug, Modbus RTU, Anybus, None	None
12.03 Fieldbus control	Enables control from fieldbus.	Off, On	Off
12.04 Fieldbus address	Sets the Bus address.	0 ... 65535	0
12.05 Fieldbus ip address	Fieldbus IP: Sets the IP-address.	0.0.0.0 ... 255.255.255.255	0.0.0.0
12.06 Fieldbus ip gateway	Fieldbus IP: Sets the default gateway.	0.0.0.0 ... 255.255.255.255	0.0.0.0
12.07 Fieldbus ip netmask	Fieldbus IP: Sets the netmask.	0.0.0.0 ... 255.255.255.255	255.255.255.0
12.08 Fieldbus ip dhcp client	Fieldbus IP: Enables dhcp.	Off, On	Off
12.09 FB baud rate*	Sets the baud rate of internal modbus-RTU interface, Anybus DeviceNet and Anybus modbus-RTU.	1200, 2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200, 125000, 250000, 500000, Auto	* There are restrictions on which baud rates you can use for different protocols. See separate Table below.
12.10 FB parity	Sets parity for Anybus modbus-RTU.	No parity, Odd parity, Even parity	Even parity
12.11 FB stop bits	Select stop bits for Anybus modbus-RTU.	1 Stop bit, 2 Stop bits	1 Stop bit
12.12 Fieldbus DI 1	Sets the DI 1 programmable digital input signal.	Emergency mode feedback, Event group 0 ... 6 status, Fault reset feedback, Line, Motor heating feedback, None, Phase sequence, Run reverse status, Run status, Sequence 1 ... 3 Run status, Sequence 1 ... 3 TOR status, Slow speed rev feedback, Slow speed forw feedback, Stand-still brake feedback, Start 1 ... 3 feedback, Start feedback, Start reverse feedback, Stop feedback, TOR status, User defined feedback	Line
12.13 Fieldbus DI 2	Sets the DI 2 programmable digital input signal.		Phase sequence
12.14 Fieldbus DI 3	Sets the DI 3 programmable digital input signal.		Event group 0 status
12.15 Fieldbus DI 4	Sets the DI 4 programmable digital input signal.		Event group 1 status
12.16 Fieldbus DI 5	Sets the DI 5 programmable digital input signal.		Start feedback
12.17 Fieldbus DI 6	Sets the DI 6 programmable digital input signal.		Stop feedback
12.18 Fieldbus DI 7	Sets the DI 7 programmable digital input signal.		Eventgroup 2 status
12.19 Fieldbus DI 8	Sets the DI 8 programmable digital input signal.		Eventgroup 3 status
12.20 Fieldbus DI 9	Sets the DI 9 programmable digital input signal.		Eventgroup 4 status
12.21 Fieldbus DI 10	Sets the DI 9 programmable digital input signal.		Eventgroup 5 status

Parameter	Description	Setting range	Default value
12.22 Fieldbus AI 1	Sets the AI 1 programmable analog input signal.	Phase L1, L2, L3 current, Active energy (resettable),	Phase L1 current
12.23 Fieldbus AI 2	Sets the AI 2 programmable analog input signal.	Active power, Active power (HP),	Phase L2 current
12.24 Fieldbus AI 3	Sets the AI 3 programmable analog input signal.	Apparent power, EOL time to cool, EOL time to trip,	Phase L3 current
12.25 Fieldbus AI 4	Sets the AI 4 programmable analog input signal.	Mains voltage, Power factor, Motor voltage,	Max phase current
12.26 Fieldbus AI 5	Sets the AI 5 programmable analog input signal.	Mains frequency, Motor connection	Mains frequency
12.27 Fieldbus AI 6	Sets the AI 6 programmable analog input signal.	Max phase current, Motor current,	Motor voltage
12.28 Fieldbus AI 7	Sets the AI 7 programmable analog input signal.	Motor current percent, Motor run time (resettable),	Motor temperature percent
12.29 Fieldbus AI 8	Sets the AI 8 programmable analog input signal.	Motor temperature, Motor temperature percent, None,	Number of starts (resettable)
12.30 Fieldbus AI 9	Sets the AI 9 programmable analog input signal.	Number of starts (resettable), Phase sequence,	Motor run time (resettable)
12.31 Fieldbus AI 10	Sets the AI 10 programmable analog input signal.	PT100 temperature, PTC resistance, Reactive energy (resettable),	Top event code
		Reactive power, Thyristor run time (resettable), Remaining time to start, Thyristor temperature, Thyristor temperature percent, Top event code	

7

\* Restrictions on which baud rates you can use for different protocols.

Baudrate	Modbus RTU on Com 3	Modbus RTU Anybus	Devicenet on Anybus
1200		x	
2400		x	
4800		x	
9600	x	x	
19200	x	x	
38400		x	
57600		x	
76800		x	
115200		x	
125000			x
250000			x
500000			x
Auto baud			x

## 7.16 Event groups

Event groups consists of supervision functions divided in separate lists in the HMI.

Supervision functions are functions to indicate when an event occurs to the motor.

There are 3 different types of supervision functions:

- Faults, default Eventgroup 0 (0000001)
- Warnings, default Eventgroup 2 ( 0000010)
- Protections, default Eventgroup 1 (0000001)

The supervision functions generate events based on different conditions in the motor and in the softstarter itself. Each different event can be assigned to 1 or more Event groups. An Event group can be mapped to a relay output or/and a Fieldbus signal.

For each supervision function there is a parameter for assigning the related event to 1 or more Event groups.

In PSTX there are 7 Event groups, numbered from 0 to 6. All event functions are set as default to 1 Event group.

There are 7 event groups that you can use in any way. Event groups 4-6 are completely unassigned by default and are convenient to use for custom applications. The other groups have (or may have in the future) events assigned to them by default.

### Example:

In this example the user collects all internal faults in the event group 6 and connects the event group to relay output K6. The faults are connected to event group 0 by default (indicated with value 0000001). The new value (1000001) assigns the fault to both event group 0 and event group 6.

### Parameter Default value New value :

Parameter	Default value	New value
25.01 Shunt fault out	0000001	1000001
25.03 Short circuit out	0000001	1000001
25.05 Open circuit thyr out	0000001	1000001
25.07 Thyristor OL out	0000001	1000001
25.09 Heat sink over temp out	0000001	1000001
25.11 Unspecified fault out	0000001	1000001
10.06 K6 function	Event group 0	Event group 6

## 7.17 Protections

The softstarter has a number of protection functions to protect the softstarter, motor and other equipment.

In addition to the type of operations mentioned below, which are available for all protections, some protections have more options.

Protections can be enabled or disabled by the user.

The protection parameters can only be changed if the protection is in operation.

When a protection function senses a risk of damage, the unit does these actions:

- Protection LED comes ON
- The unit shows the type of event
- The unit stores the type of event in the event list

Protections can be set to have automatic reset or manual reset. For every protection, there is a parameter called Operation, which can be set to:

- Stop-Automatic – The engine stops, and resets automatic when the fault condition is inactive \*.
- Stop-Manual – The engine stops, and must be reset manually when the fault condition is inactive \*.
- Off
- Indication

\* You cannot reset a fault when the fault condition is still active. Example: If you set EOL Operation (engine is too warm) to stop-manual, you can only reset the softstarter when the engine to decrease to the correct temperature.

Protections can be set to an Event group by the Out parameter. The Event group can be set for relay output to control other devices in an application

By default all parameters are set to the same Eventgroup.

## 7.17.1 EOL Protection

The motor is overloaded because of too high current during a certain time. The EOL protection resets when the motor temperature decreases to 60% of EOL trip level.

### EOL protection has these parameters:

Parameter	Description	Setting range	Default value
13.01 EOL mode	Set the EOL mode to Normal or Dual.	Normal/ Dual	Normal
13.02 EOL class	Sets the EOL trip class.	10 A, 10, 20, 30	10
13.03 EOL dual class	Sets the protection class used when in top of ramp. This parameter is only applicable when EOL protection mode is set to dual.	10 A, 10, 20, 30	10 A
13.04 EOL out	Identifies the Event groups this protection is part of.	Eventgroup 0 ...6	0000010
13.05 EOL operation	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication	Stop-Manual

## 7.17.2 Locked rotor protection

The motor is running stiff.

This protection only operates in the Top of ramp state.

### Locked rotor protection has these parameters:

Parameter	Description	Setting range	Default value
13.06 Locked rotor level	Set the locked rotor trip level	0.5 ... 8.0 x $I_e$	4.0 x $I_e$
13.07 Locked rotor trip time	Sets the time that the current is above the trip level to trip.	0.2 ... 10.0 s	1.0 s
13.08 Locked rotor delay time	Sets the time after top of ramp that the protection is enabled.	1.0 ... 30.0 s	5.0 s
13.09 Locked rotor out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
13.10 Locked rotor op	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication	Off

### 7.17.3 Max number of starts per hour protection

Sets the minimum time between 2 consecutive starts.  
This protection is connected to the signal Remaining time to start, that you can add in the Home view through the Options menu

**Max number of starts protection has these parameters:**

Parameter	Description	Setting range	Default value
13.11 Max no of starts per hour	Sets the limitation in number of starts per hour. When you set this parameter to 6, the minimum time between starts is 10 minutes, allowing a maximum of 6 starts per hour.	1 ... 100	6
13.12 Max no of starts per hour out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
13.13 Max no of starts per hour op	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication	Off

### 7.17.4 Current underload protection

7

The motor current is below the specified value.  
This protection only operates in the Top of ramp state

**Current underload protection has these parameters:**

Parameter	Description	Setting range	Default value
14.01 Curr underload level	Sets the Current underload trip level.	$0.3 \dots 0.9 \times I_e$	$0.5 \times I_e$
14.02 Curr underload trip time	Sets the time that the current is below the trip level to trip..	0 ... 30 s	10 s
14.03 Curr underload delay time	Sets the time after Top of ramp that the protection is enabled.	0 ... 30 s	5 s
14.04 Curr underload out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
14.05 Curr underload op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication	Off

## 7.17.5 Power factor underload protection

The power factor is below the normal level.

Use the Power factor underload protection to supervise the load of the motor. If the load decreases the power factor also decreases.

This protection only operates in the Top of ramp state.

**Power factor underload protection has these parameters:**

Parameter	Description	Setting range	Default value
14.06 Pwr factor underload level	Sets the Power factor underload trip level.	0.0 ... 1.0	0.5
14.07 Pwr factor underload trip time	Sets the time that the Power factor is below the trip level to trip.	0 ... 30 s	10 s
14.08 Pwr factor underload delay time	Sets the time after Top of ramp that the protection is enabled.	0 ... 30 s	5 s
14.09 Pwr factor underload out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
14.10 Pwr factor underload op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

## 7.17.6 Current imbalance protection

This protection senses if there is imbalance in the currents. Correctly all 3 phases have the same current.

This protection only operates in the Top of ramp state.

**Current imbalance protection has these parameters:**

Parameter	Description	Setting range	Default value
14.11 Curr imb level	Sets the permitted Current imbalance level between the phase with the highest current and the phase with the lowest current.	10 ... 80%	80%
14.12 Curr imb trip time	Sets the time that the Current imbalance is below the trip level to trip.	1 ... 30 s	10 s
14.13 Curr imb delay time	Sets the time after Top of ramp that the protection is enabled.	1 ... 30 s	5 s
14.14 Curr imb out	Identifies the Event groups this protection is part of.	Eventgroup 0 ...6	0000010
14.15 Curr imb operation	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

### 7.17.7 Overvoltage protection

This protection senses if the main voltage is too high.  
This protection does not operate in the Standby state.

**Overvoltage protection has these parameters:**

Parameter	Description	Setting range	Default value
15.01 Overvoltage level	Sets the Overvoltage trip level.	165 ... 850 V	850 V
15.02 Overvoltage trip time	Sets the time that the voltage is above the trip level to trip.	0.1 ... 100.0 s	1.0 s
15.03 Overvoltage out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
15.04 Overvoltage op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

### 7.17.8 Under voltage protection

This protection senses if the main voltage is too low.  
This protection does not operate in the Standby state.

**Under voltage protection has these parameters:**

Parameter	Description	Setting range	Default value
15.05 Under voltage level	Sets the Under voltage trip level.	170 ... 850 V	165 V
15.06 Under voltage trip time	Sets the time that the voltage is below the trip level to trip.	0.1 ... 100.0 s	1.0 s
15.07 Under voltage op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off
15.08 Under voltage out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010

### 7.17.9 Voltage imbalance protection

This protection senses voltage imbalance. Normally there is the same voltage in all 3 phases. If the voltage is different in the phases, the engine can run bumpy.

**Voltage imbalance protection has these parameters:**

Parameter	Description	Setting range	Default value
15.09 Voltage imb level	Sets the permitted voltage imbalance level between the phase with the highest voltage and the phase with the lowest voltage.	1 ... 100%	10%
15.10 Voltage imb out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
15.11 Voltage imb op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off
15.11 Voltage imb trip time	Sets the time of voltage imbalance in order to trip.	1...100 s	10 s



### 7.17.10 Phase reversal protection

This protection senses if the phases are connected incorrectly.

The order in which the phases are connected to the in-stream power has no effect on the softstarter, but it may be relevant to the motor, which is connected to the softstarter. The motor can for example run in the wrong direction if the phases are connected incorrectly. This protection senses if the phases are connected in the wrong order and then prevents the engine from starting.

#### Phase reversal protection has these parameters

Parameter	Description	Setting range	Default value
16.01 Phase rev out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
16.02 Phase rev operation	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off
16.12 Phase rev expected sequence	Expected phase sequence	L1_L2_L3, L1_L3_L2, Unknown	L1_L2_L3

### 7.17.11 Frequency range protection

Sets the trip level for the frequency.

#### Frequency range protection has these parameters:

Parameter	Description	Setting range	Default value
16.03 Freq range lower trip lvl	Sets the lower trip level for the frequency.	40 ...72 Hz	45 Hz
16.04 Freq range upper trip lvl	Sets the upper trip level for the frequency.	40 ...72 Hz	66 Hz
16.05 Freq range trip time	Sets the time that the frequency is outside the trip range to trip.	0 ... 60 s	5 s
16.06 Freq range out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
16.07 Freq range operation	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

### 7.17.12 Bypass open protection

This protection senses if the Bypass contactor or relay did not close when Top of ramp is reached.

Speak to ABB Sales Offices for service.

#### Bypass open protection has these parameters:

Parameter	Description	Setting range	Default value
16.08 Bypass open out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
16.09 Bypass open operation	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Indication

### 7.17.13 Voltage outputs protection

This protection senses if the 24 V voltage outputs is overloaded or shorted.

**Voltage outputs protection has these parameters:**

Parameter	Description	Setting range	Default value
16.10 Voltage outputs out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
16.11 Voltage outputs op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Indication

### 7.17.14 Temperature sensors

#### 7.17.14.1 External thermal sensor - PTC protection

The external thermal sensor detected a temperature higher than the trip level. The softstarter has a temperature input where a PTC element can be connected.

This can be set to trip if it goes above a certain temperature.

**External thermal sensor - PTC protection has these parameters:**

Parameter	Description	Setting range	Default value
10.11 Ext therm sensor - ID	Sets the External thermal sensor modes.	No sensor, PTC, PT100-3Wire, PT100-2Wire, Bi-metal switch.	No sensor
17.01 PTC out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
17.02 PTC op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

#### 7.17.14.2 External thermal sensor - PT100 protection

The external thermal sensor detected a temperature higher than the trip level.

The softstarter has a temperature input where a PTC element can be connected. This can be set to trip if it goes above a certain temperature.

**External thermal sensor - PT100 protection has these parameters:**

Parameter	Description	Setting range	Default value
10.11 Ext therm sensor - ID	Sets the External thermal sensor modes.	No sensor, PTC, PT100-3Wire, PT100-2Wire, Bi-metal switch.	No sensor
17.03 PT100 2wire res	Sets the 2-wire resistance for PT100.	0 ... 100 Ohm	5 Ohm
17.04 PT100 trip temp	Sets the PT100 trip temperature level.	-50° ... 250°	60°
17.05 PT100 PT100 reset temp	Sets the PT100 reset temperature.	-50° ... 250°	40°
17.06 PT100 out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
17.07 PT100 op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

### 7.17.15 User defined protection

You can use a Programmable digital input in combination with an external device/sensor to use your own specified protection. An example is the CEM11-FBP ground fault sensor.

**User defined protection has these parameters:**

Parameter	Description	Setting range	Default value
18.01 User defined DI status	Sets if the signal is active high or active low.	0 ... 1	1
18.02 User defined trip time	Sets the time to trip.	0.0 ... 60.0 s	1.0 s
18.03 User defined out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
18.04 User defined op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

### 7.17.16 Ground fault protection

This protection senses if the absolute value of the sum of the 3 line currents is too high, which indicates that there is a ground fault.

Note that the currents measurement in the softstarter is not accurate or fast enough to protect people. The only purpose of this function is to protect equipment.

**Ground fault protection has these parameters:**

Parameter	Description	Setting range	Default value
18.05 Ground fault trip time	Sets the trip time for the ground fault protection.	0.1 ... 10.0 s	0.5 s
18.06 Ground fault out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
18.07 Ground fault op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

### 7.17.17 Too long current limit protection

This protection sense if the current limit is longer in operation than the set trip time. The starting condition is too heavy for the set current limit.

**Too long current limit protection has these parameters:**

Parameter	Description	Setting range	Default value
18.08 Too long curr lim trip time	Sets the trip time for the too long time at current limit protection.	1 ... 600 s	10 s
18.09 Too long curr lim out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
18.10 Too long curr lim op	Sets the operation of this protection.	Off, Stop manual, Stop auto, Indication.	Off

## 7.17.18 Too long start time protection

Too long start time protection

**Too long start time protection has these parameters:**

Parameter	Description	Setting range	Default value
18.11 Too long start trip time	Trip time in seconds.	1.0 ... 500.0 s	500.0 s
18.12 Too long start out	Specifies the Event groups this protection belongs to.	Eventgroup 0 ... 6	0000010
18.13 Too long start op	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication, Fast ramp	Off

## 7.17.19 Auto restart protection

Auto restart protection

**Auto restart protection has these parameters:**

Parameter	Description	Setting range	Default value
18.14 Auto restart max delay	Max restart time in seconds	2 ... 3600 s	3600 s
18.15 Auto restart time-out out	Specifies the Event groups this protection belongs to.	Eventgroup 0 ... 6	0000010
18.16 Auto restart time-out op	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication	Off

## 7.17.20 HMI failure protection

This protection senses errors in communication between the softstarter and the HMI, while the softstarter is in local control.

If the communication with the HMI is lost for more than approximately 600 ms this protection is on.

This protection has a special action in addition to the common types of operation:

Stop HMI control - stop the local control and change to remote control i.e digital input or Fieldbus.

**HMI failure protection has these parameters:**

Parameter	Description	Setting range	Default value
19.01 HMI failure out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
19.02 HMI failure op	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication, Stop HMI control	Stop-Manual

### 7.17.21 Fieldbus failure protection

This protection senses errors in Fieldbus communication between the softstarter and the PLC.

If the Fieldbus control is ON and the Fieldbus communication is lost approximately 600 ms this protection is on.

This protection has a special action in addition to the common types of operation:

Change to I/O control.

With the Change to I/O control set to enable, the control of the softstarter automatically changes from the Fieldbus to the hard wire inputs when the Fieldbus malfunctions. When the Fieldbus starts to work again, the control is automatically switched back to the Fieldbus.

**Fieldbus failure protection has these parameters:**

Parameter	Description	Setting range	Default value
19.03 Fieldbus failure out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
19.04 Fieldbus failure op	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication, Switch to I/O control	Stop-Manual

7

### 7.17.22 Extension I/O failure protection

This protection senses errors in communication between the softstarter and the Extension I/O module.

If Com3 function is set to Extension I/O and the communication to the Extension I/O is lost during the set trip time this protection is on.

**Extension I/O failure protection has these parameters:**

Parameter	Description	Setting range	Default value
19.05 Ext IO failure trip time	Sets the trip time for extension IO failure protection.	300 ... 30000 ms	1000 ms
19.06 Ext IO failure out	Identifies the Event groups this protection is part of.	Eventgroup 0 ... 6	0000010
19.07 Ext IO failure op	Sets the operation of this protection.	Off, Stop-Manual, Stop-Automatic, Indication	Stop-Manual

## 7.18 Warnings

The softstarter has a number of warning functions to signal malfunctioning or other potential risks, before asserting the protection or fault. The difference between a warning and a protection is that a warning cannot stop the softstarter and a reset of a warning is not necessary. The warning level and all other additional information to enable the warning can be set by the user.

A warning is stored in the event list. Warnings can be Enable or Disable. There is sometimes a percentage setting where the user can set at which percentage level the warning occurs.

Set warnings to an Event group by the Out parameter. The Event group can be set for relay output to control other devices in an application.

As default, all parameters are set to the same Eventgroup.

Warnings show on the HMI, but do not change the behavior of the softstarter.

### 7.18.1 Electronic overload warning

The motor temperature is higher than the set warning level, % of max temperature.

**Electronic overload warning has these parameters:**

Parameter	Description	Setting range	Default value
20.01 EOL level	Sets the EOL warning level.	40.0 ... 99.0%	90.0%
20.02 EOL out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
23.03 EOL warning	Enables EOL warning.	Off, On	Off

### 7.18.2 Locked rotor warning

A warning signal will be given if the current exceeds the settable warning level.

The motor is running stiff.

**Locked rotor warning is configured with the following parameters:**

Parameter	Description	Setting range	Default value
20.04 Locked rotor level	Sets the Locked rotor warning level.	0.2 ... 10.0 x $I_e$	1.2 x $I_e$
20.05 Locked rotor init time	Sets the time delay after top of ramp when the warning is enabled.	1.0 ... 30.0 s	5 s
20.06 Locked rotor out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
20.07 Locked rotor	Enables locked rotor warning.	Off, On	Off
20.10 Locked rotor trip time	Sets the time that the rotor is locked before trip.	0.1...100.0 s	0.1 s

### 7.18.3 Thyristor overload warning

The thyristor temperature is higher than 90 % of the trip level.

**Thyristor overload warning has these parameters:**

Parameter	Description	Setting range	Default value
20.08 Thyristor OL out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
20.09 Thyristor OL	Enables thyristor overload warning.	Off, On	Off

### 7.18.4 Current underload warning

The line current decreases below the specified value during continuous operation.

**Current underload warning has these parameters:**

Parameter	Description	Setting range	Default value
21.01 Curr underload level	Sets the Current underload warning level.	0.1 ... $1.0 \times I_e$	$0.8 \times I_e$
21.02 Curr underload trip time	Sets the time that the current is lower than the Warning level to trip.	0 ... 30 s	1 s
21.03 Curr underload delay time	Sets the time delay after Top of ramp when the warning is enabled.	0 ... 30 s	5 s
21.04 Curr underload out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
21.05 Curr underload	Enables Current underload warning.	Off, On	Off

### 7.18.5 Power factor underload warning

The power factor is below the warning level.

**Power factor underload warning has these parameters:**

Parameter	Description	Setting range	Default value
21.06 Pwr factor underload level	Sets the Power factor underload limit.	0.0 ... 1.0	0.7
21.07 Pwr factor underload trip time	The time it is below limit until trip.	0 ... 30 s	1 s
21.08 Pwr factor underload delay time	The time until diagnoser starts to work in Top of ramp.	0 ... 30 s	5 s
21.09 Pwr factor underload out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
21.10 Pwr factor underload	Enables Power factor underload warning.	Off, On	Off

## 7.18.6 Current imbalance warning

The phase imbalance between the currents (in %) is higher than the set value.

### Current imbalance warning has these parameters

Parameter	Description	Setting range	Default value
21.11 Current imb level	Sets the permitted Current imbalance warning level between the phase with the highest current and the phase with the lowest current.	10 ... 80%	70%
21.12 Current imb out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
21.13 Current imbalance	Enables the Current imbalance warning.	Off, On	Off
21.14 Current imbalance trip time	User set time until warning in seconds.	0.1...100.0 s	5.0 s

## 7.18.7 Overvoltage warning

The voltage is higher than the set value.

### Overvoltage warning has these parameters:

Parameter	Description	Setting range	Default value
22.01 Overvoltage level	User set warning level in Volts.	208 ... 760 V	650 V
22.02 Overvoltage trip time	User set time until warning in seconds.	0.1 ... 100.0 s	1.0 s
22.03 Overvoltage out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
22.04 Overvoltage	Parameter to enable Overvoltage warning.	Off, On	Off

## 7.18.8 Under voltage warning

The main voltage is lower than the set warning level.

### Under voltage warning has these parameters:

Parameter	Description	Setting range	Default value
22.05 Under voltage level	User set warning level in Volts.	208 ... 850 V	208 V
22.06 Under voltage trip time	User set time until warning in seconds.	0.1 ... 100.0 s	0.5 s
22.07 Under voltage out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
22.08 Under voltage	Parameter to enable Under voltage warning.	Off, on	Off



## 7.18.9 Voltage imbalance warning

The voltage imbalance between the phases is higher than the set warning level.

**Voltage imbalance warning has these parameters:**

Parameter	Description	Setting range	Default value
22.09 Voltage imb level	Sets the permitted Voltage imbalance level between the phase with the highest voltage and the phase with the lowest voltage.	1 ... 10 %	5 %
22.10 Voltage imb out	Identifies the Event groups this warning is part of.	Eventgroup 0 .. 6	0000100
22.11 Voltage imbalance	Enables Voltage imbalance warning.	Off, On	Off
22.12 Voltage imbalance trip time	User set time until warning in seconds.	0.1...100.0 s	5.0 s

## 7.18.10 Electronic overload time-to-trip warning

The predicted time before EOL trip is below the set warning level. The predicted time to trip assumes that the current stays on existing level.

**Electronic overload time-to-trip warning has these parameters:**

Parameter	Description	Setting range	Default value
23.01 EOL time-to-trip time	Sets how long time before the EOL protection trips the warning is on.	1 ... 1000 s	5 s
23.02 EOL time-to-trip out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
23.03 EOL time-to-trip	Enables EOL time to trip warning.	Off, On	Off

## 7.18.11 Total Harmonic Distortion (THD) warning

The actual power system voltage differs from the ideal sine wave. THD is higher than the warning level.

**Total Harmonic distortion (THD) warning has these parameters:**

Parameter	Description	Setting range	Default value
23.04 THD(U) level	Sets the warning level for Total Harmonic Distortion (U).	1 ... 10%	10%
23.05 THD(U) out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
23.06 THD(U)	Enables Total Harmonic Distortion warning.	Off, On	Off
23.09 THD(U) trip time	User set time until warning in seconds.		

### 7.18.12 Short circuit warning

There is an internal short circuit and limp mode is enabled. If limp mode is off, this is a short circuit fault instead.  
Speak to ABB Sales Offices for service.

**Short circuit warning has these parameters:**

Parameter	Description	Setting range	Default value
23.07 Short circuit out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
23.08 Short circuit	Enables Short circuit warning.	Off, On	On

### 7.18.13 Number of starts warning

Number of starts warning

**Number of starts warning has these parameters:**

Parameter	Description	Setting range	Default value
24.01 Number of starts limit	Max number of starts	1 ... 65535	65535
24.02 Number of starts out	Specifies the Event groups this warning belongs to.	Eventgroup 0 ... 6	0000100
24.03 Number of starts	Enables Number of starts warning	Off, On	Off

7

### 7.18.14 Fans fault warning

The fans do not work properly. There can be dust or other mechanical blocking in the softstarter fans. Risk of overheating. Speak to ABB Sales Offices for service.

**Fans fault warning has these parameters:**

Parameter	Description	Setting range	Default value
24.04 Faulty fan out	Identifies the Event groups this warning is part of.	Eventgroup 0 ... 6	0000100
24.05 Faulty fan	Enables Faulty fan warning.	Off, On	On

### 7.18.15 Modbus configuration warning

The built-in modbus RTU slave is enabled (parameter 12.02) but the Com3 function is not set to modbus RTU slave. To use modbus RTU, enable the RTU slave and set the modbus RTU slave to use the Com3 port.

Modbus configuration warning has these parameters:

Parameter	Description	Setting range	Default value
24.06 Modbus_RTU w/o auxport out	Identifies the Event groups this warning belong to.	Eventgroup 0 ... 6	0000100

### 7.18.16 Phase loss warning

Phase loss warning.

**Phase loss warning has these parameters:**

Parameter	Description	Setting range	Default value
24.07 Phase loss trip time	Trip time in seconds	0.5 ... 100.0 s	3.0 s
24.08 Phase loss out	Specifies the Event groups this warning belongs to.	Eventgroup 0 ... 6	0000100
24.09 Phase loss	Enables Phase loss warning	Off, On	Off

### 7.18.17 Motor runtime warning

Motor runtime warning

**Motor runtime warning has these parameters:**

Parameter	Description	Setting range	Default value
24.10 Motor runtime limit	Max runtime in hours	1 ... 100 000 h	10 000 h
24.11 Motor runtime out	Specifies the Event groups this warning belongs to.	Eventgroup 0 ... 6	0000100
24.12 Motor runtime	Enables Motor runtime warning	Off, On	Off

## 7.19 Faults

The softstarter has a number of fault detection functions to protect the softstarter. Faults detection always runs as default. The user cannot set the fault detection to off. If a signal malfunctions in the softstarter, the motor or in the power network level, a fault occurs. Supervised faults can be internal or external faults.

### Internal fault:

The softstarter has a fault. see **chapter 10 Troubleshooting**, and speak to ABB sales office if necessary.

### External fault:

There is a fault in the equipment that is connected to the softstarter. see **chapter 10 Troubleshooting**, and speak to ABB sales office if necessary.

When a fault occur, the type of fault will be described on the home screen and the red Fault LED light will illuminate.

When a fault occurs, the unit does these basic actions:

1. The fault LED illuminates
2. The home screen gives the type of fault
3. The type of event is stored on the event list
4. The power supply to the motor which is connected to the softstarter is set to off (Direct stop).

You can set faults to have automatic reset or manual reset. Every fault has a parameter option called **Operation**, that you can set as:

- **Stop-Automatic** – The engine stops and resets automatically after you correct the fault condition\*.
- **Stop-Manual** – The engine stops and must be reset manually after you correct the fault condition\*.
- **Indication** – Emergency mode only, see **chapter 7.20.1 Emergency mode**.

\* You cannot reset a fault before you correct the fault condition.

You can set faults to an Event group by a parameter option called Out. You can set the Event group for relay output to control other devices in an application.

As default all parameters are set to the same Eventgroup.

You can add further actions for each fault, or change the basic actions. If multiple faults occur they are all stored in a sequence. Do a reset for each fault if manual reset is selected.

## 7.19.1 Internal faults

### 7.19.1.1 Shunt fault

The softstarter has been shorted and cannot stop the power to the motor.

If softstarter is connected in-line, shunt fault is on if 2 or 3 phases are shorted.

If softstarter is connected inside-delta, shunt fault is on if 1 or more phases are shorted.

If the user puts shunt fault on 1 relay and connect it to a line contactor or a circuit breaker, the user can break off the motor.

Speak to ABB sales office for service.

**Shunt fault has these parameters:**

Parameter	Description	Setting range	Default value
25.01 Shunt fault out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
25.02 Shunt fault op	Sets the operation of this fault.	Stop manual, Stop auto.	Stop manual

### 7.19.1.2 Short circuit fault

The softstarter has a short circuit or bypass. The softstarter can run in Limp mode function, even if 1 phase become shorted.



#### INFORMATION

If Automatic restart is set to on, a short circuit fault will automatically start the motor again.

For more information about Automatic restart, see **chapter 7.13 Automatic restart**.

If 1 or multiple thyristors are shorted, speak to ABB sales office for service.

**Short circuit fault has these parameters:**

Parameter	Description	Setting range	Default value
25.03 Short circuit out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
25.04 Short circuit fault op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.1.3 Open circuit thyristor fault

The softstarter cannot close 1 or more thyristors.



#### INFORMATION

If Automatic restart is set to on, an open circuit thyristor fault will automatically start the motor again.

For more information about Automatic restart see **chapter 7.13 Automatic restart.**

**Open circuit thyristor fault has these parameters:**

Parameter	Description	Setting range	Default value
25.05 Open circuit thyr out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
25.06 Open circuit thyr op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.1.4 Thyristor overload fault

The thyristors in the softstarter are overloaded.  
If the estimated thyristor junction temperature is higher than the maximum permitted value, this fault is signaled, to protect thyristors from overheating.



#### INFORMATION

If Automatic restart is set to on, a thyristor overload fault will automatically start the motor again.

For more information about Automatic restart see **chapter 7.13 Automatic restart.**

**Thyristor overload fault has these parameters:**

Parameter	Description	Setting range	Default value
25.07 Thyristor OL out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
25.08 Thyristor OL op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.1.5 Heatsink overtemperature fault

The softstarter measures the heatsink temperature. If the temperature gets too high this fault is signaled. The purpose of the heatsink is to keep the thyristors cool.

**Heatsink overtemperature fault has these parameters:**

Parameter	Description	Setting range	Default value
25.09 Heatsink overtemp out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
25.10 Heatsink overtemp op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.1.6 Unspecified fault

**Unspecified fault has these parameters:**

Parameter	Description	Setting range	Default value
25.11 Unspecified fault out	Identifies the Event groups this fault is part of.	Eventgroup 0 .. 6	0000001
25.12 Unspecified fault op	Set the operation of this fault.	Stop manual, Stop auto	Stop manual

## 7.19.2 External faults

### 7.19.2.1 Phase loss fault

Voltage to 1 or more phases are missing.  
For example, this senses an open line contactor.

**Phase loss fault has these parameters:**

Parameter	Description	Setting range	Default value
26.01 Phase loss out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
26.02 Phase loss op	Set the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.2.2 Bad network fault

Bad network quality fault is signaled if there is too much frequency interference in the network. Then it is too difficult to control the triggering of the thyristors in a safe way.

**Bad network fault has these parameters:**

Parameter	Description	Setting range	Default value
26.03 Bad network out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
26.04 Bad network op	Set the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.2.3 Low supply voltage fault

Low supply voltage fault is signaled if the control supply voltage is too low. The softstarter will stop the motor.

**Low supply fault has these parameters:**

Parameter	Description	Setting range	Default value
26.05 Low supply voltage out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
26.06 Low supply voltage op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.2.4 High current fault

A fault signal will be given if the motor current exceeds the fixed set level which is  $8 \cdot I_r$  for the duration of the fixed set time which is 200 ms.

**High current fault is configured with the following parameters:**

Parameter	Description	Setting range	Default value
26.07 High current out	Specifies the Event groups this fault belongs to.	Eventgroup 0 ... 6	0000001
26.08 High current op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual

## 7

### 7.19.2.5 Faulty usage fault

Faulty usage fault is on if the user tries to use motor heating, stand-still brake and slow speed functions when the motor is connected inside delta.

**Faulty usage fault has these parameters:**

Parameter	Description	Setting range	Default value
26.09 Faulty usage out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
26.10 Faulty usage op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual

### 7.19.2.6 Connection fault

Connection fault signals a fault when a faulty connection is detected for each type of connection, in line and inside delta

**Connection fault has these parameters:**

Parameter	Description	Setting range	Default value
26.11 Faulty connection out	Identifies the Event groups this fault is part of.	Eventgroup 0 ... 6	0000001
26.12 Faulty connection op	Sets the operation of this fault.	Stop manual, Stop auto	Stop manual



## 7.20 Special feature

This chapter gives a description of features that are available to all users, but beyond the normal range of use for the softstarter.

The features are:

- Emergency mode
- Line contactor close time
- Limp mode
- Start without start command
- Step down level
- System mode
- TOR relay delay time

### 7.20.1 Emergency mode

This function will be implemented in later release.

The normal operation of the softstarter when a fault is detected is to do a direct stop.

You can set a digital input to set the softstarter in Emergency mode.

When the softstarter is in Emergency mode, and a fault or protection is detected, the softstarter will try to run the motor with the start and stop signals, ignore safety, and continue to run regardless of consequences.

The softstarter can manage for each fault to run the motor or not.



---

**CAUTION**

Emergency mode will disable all protections and fault detection functions.

---



---

**WARNING**

The motor will not be protected from overheating.

---

## 7.20.2 Line contactor close time

This feature allow time for the line contactor to close before the softstarter assumes that it has correct 3 phase supply.

This is useful to avoid timing problems that can lead to unnecessary trips on for example Phase loss protection.

**Line contactor close time has these parameters:**

Parameter	Description	Setting range	Default value
28.02 Line contactor close time	Allow time for line contactor to close. Sets the time between start signal and beginning of diagnostic measurements.	0 ... 65535 ms	245 ms

## 7.20.3 Limp mode

This feature allows the PSTX to operate with only 2 controlled phases in case of short circuit of 1 set of thyristors. Replace the thyristors when this warning is on (if the short circuit warning is enabled).

**Limp mode has these parameters:**

Parameter	Description	Setting range	Default value
28.42 Limp mode	If this parameter is enabled and if a thyristor is shorted, there is an automatic transition to limp mode.	Off, On	Off

## 7.20.4 Start without start command

This feature can be used for a customer that would like to use the softstarter in the same way as a contactor is used, i.e. as soon as the control supply to the softstarter is turned on the softstarter will automatically start the motor. No wiring of start and stop signals is necessary.

**Start without start command has these parameters:**

Parameter	Description	Setting range	Default value
28.04 Start without start command	Starts the motor without needing an external start command.	Off, On	Off

## 7.20.5 Step down level

When the softstarter receives a stop signal the softstarter first decreases the output voltage to the motor in a quick stop ramp, from full voltage down to set Step down voltage level. Then the softstarter controls the output voltage in a stop ramp.

You can adjust the step down level for torque control.

When using voltage ramp, set it to 80%. It can be necessary to adjust the step down level if the load is too high or too low.

### Step down level has these parameters:

Parameter	Description	Setting range	Default value
28.05 Step down level	Set the level from where the stop ramp initiates.	10% ... 100%	80%

## 7.20.6 System mode

Select between:

- Normal mode
- Demo mode
- Small motor mode

### Normal mode

Normal mode is the default setting and is used in all situations except the ones given below.

### Demo mode

Demo is used mainly for training purposes to simulate a load condition without having the softstarter connected to main power.



### CAUTION

When the softstarter is connected to a motor, do not select demo mode, a direct start will occur.

### Small motor mode

Small motor mode is used for basic testing purposes, when using a smaller motor than the PSTX is specified for. The softstarter is able to start the motor, but some functions and protections are disabled.

### System mode has these parameters:

Parameter	Description	Setting range	Default value
28.41 System mode	Sets the run mode.	Normal, Demo, small motor	Normal

## 7.20.7 TOR relay delay time

Set the delay time from Top Of Ramp until the Top Of Ramp relay is on

### TOR relay delay time has these parameters:

Parameter	Description	Setting range	Default value
28.03 TOR relay delay time	Set the delay time from Top Of Ramp until the Top Of Ramp relay is on	0.0 ... 300.0 s	0.0 s

## 7.21 Settings

The settings menu contains these softstarter set-up parameters:

- Language
- Date and time
- Display settings (for HMI)
- Reset from defaults

For settings and navigation, **see chapter 6.4.6 Settings.**

## 7.22 Assistants

The Assistants menu contains default settings and parameters. Use this menu to set only the necessary parameters before you can start the motor. All necessary input data shows up in an automatic loop. The Assistants menu is divided in:

- **Basic set-up**
- **Application set-up**



### INFORMATION

After you select an application and make your changes, do not select this application again because this resets the application to the default settings.

### Enter the Assistants menu

Push “Menu” and select Assistants with the Navigation keys.

Push “Select” to enter the Assistants menu.

### Basic set-up

The Basic set-up menu is divided in 5 steps: Language, Date and time, Motor data and System configuration.

### Application set-up

The Application set-up are quick settings for Applications, Values and Tune settings. Use the Navigation keys to select Application set-up. Push “Select” to enter the Application set-up.

Select for what type of application you use the softstarter by pushing “Select”.

For more details, see **chapter 2 Quick start.**

		Recommended basic settings						
		Start ramp time	Stop ramp time	Start ramp initial level	Stop ramp end level	Current limit level	Start mode	Stop mode
Normal start (class 10)	Band saw	10	-	30	30	4	Voltage ramp	No ramp
	Bow thruster	10	-	30	30	3	Voltage ramp	No ramp
	Centrifugal pump	10	10	30	30	4	Voltage ramp	Torque ramp
	Circular saw	10	-	30	30	4	Voltage ramp	No ramp
	Conveyor belt short	10	-	40	30	3,5	Voltage ramp	No ramp
	Cutter	10	-	30	30	4	Voltage ramp	No ramp
	Escalator	10	-	30	30	3,5	Voltage ramp	No ramp
	High pressure pump	10	10	40	30	4,5	Voltage ramp	Torque ramp
	Hydraulic pump	10	-	30	30	3	Voltage ramp	No ramp
	Lift/Elevator	10	-	30	30	3,5	Voltage ramp	No ramp
	Piston compressor	5	-	50	30	3	Voltage ramp	No ramp
	Scroll compressor	2	-	50	30	3	Voltage ramp	No ramp
Heavy duty start (class 30)	Axial fan	10	-	30	30	4	Voltage ramp	No ramp
	Conveyor belt long	10	-	40	30	3,5	Voltage ramp	No ramp
	Crusher	10	-	30	30	4	Voltage ramp	No ramp
	Centrifugal fan	10	-	30	30	4	Voltage ramp	No ramp
	Grinder	10	-	30	30	4	Voltage ramp	No ramp
	Mixer	10	-	30	30	3,5	Voltage ramp	No ramp

Note: These parameter are a rough indication. Often it is necessary to tune the unit because of variations in load conditions.

## 7.23 Complete parameter list

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
<b>01</b>	<b>Motor rated current I<sub>e</sub></b>					
01.01	Motor rated current I <sub>e</sub>	9.0 ... 1250.0 A	1	1	30 A	
<b>02</b>	<b>Start and stop</b>					
02.01	Start mode	Voltage ramp, Torque ramp, Full voltage start	0	2	Voltage ramp	
02.02	Stop mode	No ramp, Voltage ramp, Torque ramp	0	3	No ramp	
02.03	Start ramp initial level	10 ... 99%	0	4	30%	
02.04	Start ramp time	1 ... 120 s	0	5	10 s	
02.05	Stop ramp end level	10 ... 99%	0	6	30%	
02.06	Stop ramp time	1 ... 120 s	0	7	10 s	
02.07	Pre-start function	Pre start off, Motor heating, Stand still brake Slow speed forward, Slow speed reverse	0	93	Pre start off	
02.08	Pre-start time	0.0 ... 7200.0 s	1	128	10.0 s	
<b>03</b>	<b>Limit</b>					
03.01	Current limit type	Off, Normal, Dual, Ramp	0	18	Off	
03.02	Current limit level	1.5 ... 7.5 x I <sub>e</sub>	1	19	4.0 x I <sub>e</sub>	
03.03	2nd curr lim level	0.5 ... 7.5 x I <sub>e</sub>	1	20	7.0 x I <sub>e</sub>	
03.04	2nd curr lim time	2 ... 120 s	0	21	8 s	
03.05	Torque limit level	20 ... 200%	0	170	150%	
<b>04</b>	<b>Kick start</b>					
04.01	Kick start	On / Off	0	22	Off	
04.02	Kick start level	50 ... 100%	0	23	70%	
04.03	Kick start time	0.2 ... 2.0 s	2	24	0.20 s	
<b>05</b>	<b>Slow speed</b>					
05.01	Slow speed forward	Fast jog, Jog, Creep	0	184	Jog	
05.02	Slow speed fwd strength	10 ... 100%	0	187	50%	
05.03	Slow speed reverse	Fast jog, Jog, Creep	0	188	Jog	
05.04	Slow speed rev strength	10 ... 100%	0	189	50%	
<b>06</b>	<b>Motor heating</b>					
06.01	Motor heating capacity	10 ... 100000 W	0	304	10 W	
06.02	Motor heating temperature	10 ... 100000 W			10 W	
06.03	Motor heating type	Off, Manual	0		Off	
<b>07</b>	<b>Motor braking</b>					
07.01	Stand still brake strength	10 ... 100	0	305	50%	
07.02	Motor brake time	1.0 ... 100.0 s	1		1.0 s	
07.03	Dynamic brake strength	10 ... 100 %	0		40 %	
07.04	DC brake strength	10 ... 100 %	0		40 %	
07.05	DC brake switch speed threshold	10 ... 100 %	0		28 %	
07.06	DC brake switch delay time	0.1 ... 100.0 s	1		3.0 s	
<b>08</b>	<b>Sequence start</b>					
08.01	Sequence mode	On / Off	0	8	Off	
08.02	I <sub>e</sub> seq 1	9.0 ... 1250.0 A	1	190	30 A	
08.03	Start mode seq 1	Voltage ramp, Torque ramp, Full voltage start	0	191	Voltage ramp	
08.04	Start ramp time seq 1	1 ... 120 s	0	192	10 s	
08.05	Start ramp init lvl seq 1	10 ... 99%	0	193	30%	
08.06	Curr lim level seq 1	0.5 ... 7.5 x I <sub>e</sub>	1	194	7.0 x I <sub>e</sub>	
08.07	Kick start seq 1	On / Off	0	195	Off	
08.08	Kick start level seq 1	50 ... 100%	0	196	70%	
08.09	Kick start time seq 1	0.20 ... 2.0 s	2	197	0.20 s	
08.10	Torque lim lvl seq 1	20 ... 200%	0	198	150%	
08.11	Torque tune seq 1	0 ... 1000%	0	199	100%	
08.12	Torque ctrl gain seq 1	0.01 ... 10.0	2	200	0.02	
08.30	I <sub>e</sub> seq 2	9.0 ... 1250.0 A	1	201	30 A	
08.31	Start mode seq 2	Voltage ramp, Torque ramp, Full voltage start	0	202	Voltage ramp	

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
08.32	Start ramp time seq 2	1 ... 120 s	0	203	10 s	
08.33	Start ramp init lvl seq 2	10 ... 99%	0	204	30%	
08.34	Curr lim level seq 2	0.5 ... 7.5 x I <sub>e</sub>	1	205	7.0 x I <sub>e</sub>	
08.35	Kick start seq 2	On / Off	0	206	Off	
08.36	Kick start level seq 2	50 ... 100%	0	207	70%	
<b>08</b>	<b>Sequence start</b>					
08.37	Kick start time seq 2	0.20 ... 2.00 s	2	208	0.20 s	
08.38	Torque limit lvl seq 2	20 ... 200%	0	209	150%	
08.39	Torque tune seq 2	0 ... 1000%	0	210	100%	
08.40	Torque ctrl gain seq 2	0.01 ... 10.00	2	211	0.02	
08.60	I <sub>e</sub> seq 3	9.0 ... 1250 A	1	212	30 A	
08.61	Start mode seq 3	Voltage ramp, Torque ramp, Full voltage start	0	213	Voltage ramp	
08.62	Start ramp time seq 3	1 ... 120 s	0	214	10 s	
08.63	Start ramp init lvl seq 3	10 ... 99%	0	215	30%	
08.64	Curr lim level seq 3	0.5 ... 7.5 x I <sub>e</sub>	1	216	7.0 x I <sub>e</sub>	
08.65	Kick start seq 3	On / Off	0	217	Off	
08.66	Kick start level seq 3	50 ... 100%	0	218	70%	
08.67	Kick start time seq 3	0.2 ... 2.00 s	2	219	0.2 s	
08.68	Torque limit lvl seq 3	20 ... 200%	0	220	150%	
08.69	Torque tune seq 3	0 ... 1000%	0	221	100%	
08.70	Torque ctrl gain seq 3	0.01 ... 10.0	2	222	0.02	
<b>09</b>	<b>Automatic restart</b>					
09.01	Auto-reset delay time	0 ... 3600 s	0	223	10 s	
09.02	Auto-restart	On / Off	0	224	Off	
09.03	Auto-restart max attempts	1 ... 10	0	225	5	
<b>10</b>	<b>Internal IO</b>					
10.01	In0 function	None, Reset, Enable, Slow speed forward, Slow speed reverse, Motor heating, Stand-still brake, Start reverse, User defined protection, Emergency mode, Fieldbus disable control, Start 1, Start 2, Start 3. *	0	130	Reset	
10.02	In1 function	0 ... 15 *	0	131	None	
10.03	In2 function	0 ... 15 *	0	132	None	
10.04	K4 function	None, Run, Top of ramp, Event group 0, Event group 1, Event group 2, Event group 3, Event group 4, Event group 5, Event group 6, Sequence 1 RUN, Sequence 2 RUN, Sequence 3 RUN, Sequence 1 TOR, Sequence 2 TOR, Sequence 3 TOR, Run reverse **	0	133	Run	
10.05	K5 function	0 ... 17 **	0	134	Top of ramp	
10.06	K6 function	None, Run, Top of ramp, Event group 0, Event group 1, Event group 2, Event group 3, Event group 4, Event group 5, Event group 6, Sequence 1 Run, Sequence 2 Run, Sequence 3 Run	0	135	Event group 0	
10.07	AO reference	0-10 mA, 0-20 mA, 4-20 mA, 0-10 V	0	137	4-20 mA	
10.08	AO type	Motor current [A], Mains voltage [V], Active power [kW], Active power [HP], Reactive power [kVA], Apparent power [kVA], Active energy [kWh], Reactive energy [kVAh], COS [COS [Φ]], Motor temperature [%], Thyristor temperature [%], Motor voltage [%]	0	138	Motor current [A]	
10.09	AO max value	0.0 ... 1000000.0	0	139	500	
10.10	AO min value	0.0 ... 1000000.0	0	140	0	

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
10.11	Ext therm sensor - ID	No sensor, PTC element, 3-wire PT100, 2-wire PT100, Bi-metal switch	0	226	No sensor	
<b>11</b>	<b>External IO</b>					
11.01	1DI0 function	None, Reset, Enable, Slow speed forward, Slow speed reverse, Motor heating, Stand-still brake, Start reverse, User defined protection, Emergency mode, Fieldbus disable control, Start 1, Start 2, Start 3 ***	0	145	None	
11.02	1DI1 function	0 ... 15 ***	0	146	None	
11.03	1DI2 function	0 ... 15 ***	0	147	None	
11.04	1DI3 function	None, Reset, Enable, Slow speed forward, Slow speed reverse, Motor heating, Stand-still brake, Start reverse, User defined protection, Emergency mode, Fieldbus disable control, Start 1, Start 2, Start 3 ***	0	148	None	
11.05	1DI4 function	0 ... 15 ***	0	149	None	
11.06	2DI5 function	0 ... 15 ***	0	150	None	
11.07	2DI6 function	0 ... 15 ***	0	151	None	
11.08	2DI7 function	0 ... 15 ***	0	152	None	
11.09	1DO0 function	None, Run, Top of ramp, Event group 0, Event group 1, Event group 2, Event group 3, Event group 4, Event group 5, Event group 6, Sequence 1 Run, Sequence 2 Run, Sequence 3 Run, Sequence 1 TOR, Sequence 2 TOR, Sequence 3 TOR ****	0	153	None	
11.10	1DO1 function	0 ... 15 *** *	0	154	None	
11.11	2DO2 function	0 ... 15 *** *	0	155	None	
11.12	2DO3 function	0 ... 15 *** *	0	156	None	
11.13	1AO0 reference	0-10 mA, 0-20 mA, 4-20 mA, 0-10 V	0	157	4-20 mA	
11.14	1AO0 type	Motor current [A], Mains voltage [V], Active power [kW], Active power [HP], Reactive power [kVAR], Apparent power [kVA], Active energy [kWh], Reactive energy [kVAh], COS [☐], Motor temperature [%], Thyristor temperature [%], Motor voltage [%] Mains frequency [Hz], PT100 temperature [centigrade], PTC resistance [Ω]	0	158	Motor current [A]	
11.15	1AO0 max value	0 ... 1000000	0	159	500	
11.16	1AO0 min value	0 ... 1000000	0	160	0	
<b>12</b>	<b>Communication</b>					
12.01	Com3 function	None, Test, Modbus RTU slave. Extension I/O	0	26	Test	
12.02	FB interface connector	FbPlug, Modbus RTU, Anybus, None	0	32	None	
12.03	Fieldbus control	On / Off	0	45	Off	
12.04	Fieldbus address	0 ... 65535	0	51	0	
12.05	Fieldbus IP address	000.000.000.000	0	58	0	
12.06	Fieldbus IP gateway	000.000.000.000	0	59	0	
12.07	Fieldbus IP netmask	255.255.255.000	0	83	255.255.255.0	
12.08	Fieldbus IP DHCP client	On / Off	0	92	Off	
12.09	FB baud rate	1200, 2400, 4800, 9600, 19200, 38400, 57600, 76800, 115200, 125000, 250000, 500000, auto	0	185	19200	



Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
12.10	FB parity	No parity, Odd parity, Even parity	0	136	Even parity	
12.11	FB stop bits	1 Stop bit, 2 Stop bits	0	141	1 Stop bit	
<b>12</b>	<b>Communication</b>					
12.13	Fieldbus DI 1	None, Start feedback, Stop feedback, Fault reset feedback, Slow speed rev feedback, Slow speed forw feedback, Start 1 feedback, Start 2 feedback, Start 3 feedback, Motor heating feedback, User defined feedback, Stand-still brake feedback, Emergency mode feedback, Start reverse feedback, Run status, TOR status, Line, Phase sequence, Event group 0 status, Event group 1 status, Event group 2 status, Event group 3 status, Event group 4 status, Event group 5 status, Event group 6 status, Sequence 1 Run status, Sequence 2 Run status, Sequence 3 Run status, Sequence 1 TOR status, Sequence 2 TOR status, Sequence 3 TOR status, Run reverse status *** **	0	142	Run status	
12.13	Fieldbus DI 2	0 ... 32 *** **	0	143	TOR status	
12.14	Fieldbus DI 3	0 ... 32 *** **	0	144	Line	
12.15	Fieldbus DI 4	0 ... 32 *** **	0	161	Phase sequence	
12.16	Fieldbus DI 5	0 ... 32 *** **	0	162	Start feedback	
12.17	Fieldbus DI 6	0 ... 32 *** **	0	163	Stop feedback	
12.18	Fieldbus DI 7	0 ... 32 *** **	0	164	Event group 0 status	
12.19	Fieldbus DI 8	0 ... 32 *** **	0	165	Event group 1 status	
12.20	Fieldbus DI 9	0 ... 32 *** **	0	166	Event group 2 status	
12.21	Fieldbus DI 10	0 ... 32 *** **	0	167	Event group 3 status	
12.22	Fieldbus AI 1	None, Phase L1 current, Phase L2 current, Active power (HP), Active power, Apparent power, Mains voltage, Power factor, Motor voltage, Active energy (resettable), EOL time to trip, Mains frequency, Max phase current, Motor current, Motor run time (resettable), Motor temperature, Motor temperature percent, Number of starts (resettable), Phase sequence, PT100 temperature, PTC resistance, Reactive energy (resettable), Reactive power, Remaining time to start, Thyristor temperature, Thyristor temperature percent, EOL time to cool, Top event code, Motor current percent, Thyristor run time (resettable), Motor connection *** **	0	168	Phase L1 current	
12.23	Fieldbus AI 2	0 ... 32 *** **	0	169	Phase L2 current	
12.24	Fieldbus AI 3	0 ... 32 *** **	0	172	Phase L3 current	
12.25	Fieldbus AI 4	0 ... 32 *** **	0	174	Max phase current	
12.26	Fieldbus AI 5	0 ... 32 *** **	0	177	Mains frequency	
12.27	Fieldbus AI 6	0 ... 32 *** **	0	178	Motor voltage	
12.28	Fieldbus AI 7	0 ... 32 *** **	0	179	Motor temperature percent	
12.29	Fieldbus AI 8	0 ... 32 *** **	0	180	Number of starts (resettable)	
12.30	Fieldbus AI 9	0 ... 32 *** **	0	183	Motor run time (resettable)	

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
12.31	Fieldbus AI 10	0 ... 32 *** **	0	186	Top event code	
<b>13</b>	<b>Protections list 1</b>					
13.01	EOL mode	Normal, Dual	0	55	Normal	
13.02	EOL class	10A, 10, 20, 30	0	56	10	
13.03	EOL dual class	10A, 10, 20, 30	0	57	10A	
13.04	EOL out	0 ... 127	0	84	0000010	
13.05	EOL operation	Off, Stop-Manual, Stop-Automatic, Indication	0	227	Stop-Manual	
13.06	Locked rotor level	0.5 ... 8.0 x I <sub>e</sub>	1	54	4.0 x I <sub>e</sub>	
13.07	Locked rotor trip time	0.20 ... 10.00 s	2	53	1.00 s	
13.08	Locked rotor delay time	1.00 ... 30.00 s	2	52	5.00 s	
13.09	Locked rotor out	0 ... 127	0	85	0000010	
13.10	Locked rotor op	Off, Stop-Manual, Stop-Automatic, Indication	0	228	Off	
13.11	Max no of starts per hour	1 ... 100	0	229	6	
13.12	Max no of starts per hour out	0 ... 127	0	230	0000010	
13.13	Max no of starts per hour op	Off, Stop-Manual, Stop-Automatic, Indication	0	231	Off	
<b>14</b>	<b>Protections list 2</b>					
14.01	Curr underload level	0.3 ... 0.9 x I <sub>e</sub>	1	232	0.5 x I <sub>e</sub>	
14.02	Curr underload trip time	0 ... 10 s	0	233	10 s	
14.03	Curr underload delay time	0 ... 30 s	0	234	5 s	
14.04	Curr underload out	0 ... 127	0	87	0000010	
14.05	Curr underload op	Off, Stop-Manual, Stop-Automatic, Indication	0	235	Off	
14.06	Pwr factor underload level	0.00 ... 1.00	2	236	0.50	
14.07	Pwr factor underload trip time	0 ... 10 s	0	237	10 s	
14.08	Pwr factor underload delay time	0 ... 30 s	0	238	5 s	
14.09	Pwr factor underload out	0 ... 127	0	86	0000010	
14.10	Pwr factor underload op	Off, Stop-Manual, Stop-Automatic, Indication	0	239	Off	
14.11	Curr imb level	10 ... 80%	0	61	80%	
14.12	Curr imb trip time	1 ... 30 s	0	63	10 s	
14.13	Curr imb delay time	1 ... 30 s	0	62	5 s	
14.14	Curr imb out	Eventgroup 0 ... 6	0	64	0000010	
14.15	Curr imb operation	Off, Stop-Manual, Stop-Automatic, Indication	0	60	Off	
<b>15</b>	<b>Protections list 3</b>					
15.01	Over voltage level	170 ... 850 V	0	67	850 V	
15.02	Over voltage trip time	0.1 ... 100.0 s	1	65	1.0 s	
15.03	Over voltage out	0 ... 127	0	68	0000010	
15.04	Over voltage op	Off, Stop-Manual, Stop-Automatic, Indication	0	66	Off	
15.05	Under voltage level	165 ... 850 V	0	71	165 V	
15.06	Under voltage trip time	0.1 ... 100.0 s	1	69	1.0 s	
15.07	Under voltage op	Off, Stop-Manual, Stop-Automatic, Indication	0	70	Off	
15.08	Under voltage out	0 ... 127	0	72	0000010	
15.09	Voltage imb level	1 ... 100%	0	77	10%	
15.10	Voltage imb out	0 ... 127	0	78	0000010	
15.11	Voltage imb op	Off, Stop-Manual, Stop-Automatic, Indication	0	76	Off	
15.12	Voltage imb trip time	1 ... 100 s	0		10 s	
<b>16</b>	<b>Protections list 4</b>					
16.01	Phase rev out	0 ... 127	0	89	0000010	
16.02	Phase rev operation	Off, Stop-Manual, Stop-Automatic, Indication	0	240	Off	
16.03	Freq range lower trip lvl	40 ... 72 Hz	0	241	45 Hz	

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
16.04	Freq range upper trip lvl	40 ... 72 Hz	0	242	66 Hz	
16.05	Freq range trip time	0.0 ... 60.0 s	1	243	5.0 s	
16.06	Freq range out	0 ... 127	0	91	0000010	
16.07	Freq range operation	Off, Stop-Manual, Stop-Automatic, Indication	0	244	Off	
16.08	Bypass open out	0 ... 127	0	95	0000010	
16.09	Bypass open operation	Off, Stop-Manual, Stop-Automatic, Indication	0	245	Indication	
16.10	Voltage outputs out	0 ... 127	0	-	0000010	
16.11	Voltage outputs op	Off, Stop-Manual, Stop-Automatic, Indication	0	-	Indication	
<b>17</b>	<b>Protections list 5</b>					
17.01	PTC out	0 ... 127	0	88	0000010	
17.02	PTC op	Off, Stop-Manual, Stop-Automatic, Indication	0	246	Off	
17.03	PT100 2wire res	0 ... 100.0 Ω	1	247	5.0 Ω	
17.04	PT100 trip temp	-50 ... 250 °C	0	248	60 °C	
17.05	PT100 reset temp	-50 ... 250 °C	0	240	40 °C	
17.06	PT100 out	0 ... 127	0	98	0000010	
17.07	PT100 op	Off, Stop-Manual, Stop-Automatic, Indication	0	250	Off	
<b>18</b>	<b>Protections list 6</b>					
18.01	User defined DI status	Active low, Active high	0	251	Active high	
18.02	User defined trip time	0.0 ... 60.0 s	1	252	1.0 s	
18.03	User defined out	0 ... 127	0	90	0000010	
18.04	User defined op	Off, Stop-Manual, Stop-Automatic, Indication	0	253	Off	
18.05	Ground fault trip time	0.1 ... 1.0 s	1	73	0.5 s	
18.06	Ground fault out	0 ... 127	0	75	0000010	
18.07	Ground fault op	Off, Stop-Manual, Stop-Automatic, Indication	0	74	Off	
18.08	Too long curr lim trip time	1 ... 600 s	0	254	10 s	
18.09	Too long curr lim out	Eventgroup 0 ... 6	0	255	0000010	
18.10	Too long curr lim op	Off, Stop-Manual, Stop-Automatic, Indication. Fast ramp	0	256	Off	
18.11	Too long start trip time	1.0 ... 500.0 s	1		500.0 s	
18.12	Too long start out	0 ... 127	0		0000010	
18.13	Too long start op	Off, Stop-Manual, Stop-Automatic, Indication	0		Off	
18.14	Auto-restart max delay	2 ... 3600 s	0		3600	
18.15	Auto-restart time-out out	0 ... 127	0		0000010	
18.16	Auto-restart time-out op	Off, Stop-Manual, Stop-Automatic, Indication	0		Off	
<b>19</b>	<b>Protections list 7</b>					
19.01	HMI failure out	Eventgroup 0 ... 6	0	100	0000010	
19.02	HMI failure op	Off, Stop-Manual, Stop-Automatic, Indication, Switch of HMI control	0	257	Stop-Manual	
19.03	Fieldbus failure out	Eventgroup 0 ... 6	0	97	0000010	
19.04	Fieldbus failure op	Off, Stop-Manual, Stop-Automatic, Indication, Switch to I/O control	0	258	Stop-Manual	
19.05	Ext IO failure trip time	300 ... 30000 ms	0	259	1000 ms	
19.06	Ext IO failure out	Eventgroup 0 ... 6	0	99	0000010	
19.07	Ext IO failure op	Off, Stop-Manual, Stop-Automatic, Indication	0	260	Stop-Manual	
<b>20</b>	<b>Warnings list 1</b>					
20.01	EOL level	40.0 ... 99.0%	1	181	90.0%	
20.02	EOL out	Eventgroup 0 ... 6	0	123	0000100	
20.03	EOL warning	On / Off	0	182	Off	
20.04	Locked rotor level	0.2 ... 10.0 x I <sub>e</sub>	1	261	1.2 x I <sub>e</sub>	
20.05	Locked rotor init time	1.0 ... 30.0 s	1	262	5.0 s	
20.06	Locked rotor out	Eventgroup 0 ... 6	0	125	0000100	
20.07	Locked rotor	On / Off	0	263	Off	
20.08	Thyristor OL out	Eventgroup 0 ... 6	0	124	0000100	
20.09	Thyristor OL	On / Off	0	122	Off	

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
20.10	Locked rotor trip time	0.1 ... 100.0 s	1	-	0.1 s	
<b>21</b>	<b>Warnings list 2</b>					
21.01	Curr underload level	0.4 ... 1.0 x I <sub>e</sub>	1	264	0.8 x I <sub>e</sub>	
21.02	Curr underload trip time	0 ... 10 s	0	265	1 s	
21.03	Curr underload delay time	0 ... 30 s	0	266	5 s	
21.04	Curr underload out	0 ... 127	0	126	0000100	
21.05	Curr underload	On / Off	0	267	Off	
21.06	Pwr factor underload level	0.00 ... 1.00	2	268	0.70	
21.07	Pwr factor underload trip time	0 ... 10 s	0	269	1 s	
21.08	Pwr factor underload delay time	0 ... 30 s	0	270	5 s	
21.09	Pwr factor underload out	0 ... 127	0	127	0000100	
21.10	Pwr factor underload	On / Off	0	271	Off	
21.11	Current imb level	10 ... 80%	0	102	70%	
21.12	Current imb out	0 ... 127	0	103	0000100	
21.13	Current imbalance	On / Off	0	101	Off	
21.14	Current imbalance trip time	0.1 ... 100.0	1		5.0 s	
<b>22</b>	<b>Warnings list 3</b>					
22.01	Over voltage level	208 ... 850 V	0	104	650 V	
22.02	Over voltage trip time	0.1 ... 100.0 s	1	105	1.0 s	
22.03	Over voltage out	0 ... 127	0	107	0000100	
22.04	Over voltage	On / Off	0	106	Off	
22.05	Under voltage level	208 ... 850 V	0	108	208 V	
22.06	Under voltage trip time	0.1 ... 100.0 s	1	109	0.5 s	
22.07	Under voltage out	0 ... 127	0	111	0000100	
22.08	Under voltage	On / Off	0	110	Off	
22.09	Voltage imb level	1 ... 100	0	119	5	
22.10	Voltage imb out	0 ... 127	0	120	0000100	
22.11	Voltage imbalance	On / Off	0	118	Off	
22.12	Voltage imbalance trip time	0.1 ... 100.0 s	1		5.0 s	
<b>23</b>	<b>Warnings list 4</b>					
23.01	EOL time-to-trip time	1 ... 1000 s	0	114	5 s	
23.02	EOL time-to-trip out	0 ... 127	0	112	0000100	
23.03	EOL time-to-trip	On / Off	0	113	Off	
23.04	THD(U) level	1 ... 100%	0	116	10%	
23.05	THD(U) out	0 ... 127	0	117	0000100	
23.06	THD(U)	On / Off	0	115	Off	
23.07	Short circuit out	0 ... 127	0	129	0000100	
23.08	Short circuit	On / Off	0	121	Off	
23.09	THD(U) trip time	0.1 ... 100.0 s	1		10.0 s	
<b>24</b>	<b>Warnings list 5</b>					
24.01	Number of starts limit	1 ... 65535	0	-	65535	
24.02	Number of starts out	0 ... 127	0	-	0000100	
24.03	Number of starts	On / Off	0	-	Off	
24.04	Faulty fan out	0 ... 127	0	80	0000100	
24.05	Faulty fan	On / Off	0	79	On	
24.06	Modbus_RTU w/o auxport out	0 ... 127	0	176	0000100	
24.7	Phase loss trip time	0.5 ... 100.0	1		3.0	
24.8	Phase loss out	0 ... 127	0		0000100	
24.9	Phase loss	On / Off	0		Off	
24.10	Motor run time limit	0 ... 100000	0		10000	
24.11	Motor run time out	0 ... 127	0		0000100	
24.12	Motor run time	On / Off	0		Off	
<b>25</b>	<b>Internal faults</b>					
25.01	Shunt fault out	0 ... 127	0	42	0000001	
25.02	Shunt fault op	Stop-Manual, Stop-Automatic	0	272	Stop-Manual	
25.03	Short circuit out	0 ... 127	0	50	0000001	

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
25.04	Short circuit fault op	Stop-Manual, Stop-Automatic	0	273	Stop-Automatic	
25.05	Open circuit thyr out	0 ... 127	0	44	0000001	
25.06	Open circuit thyr op	Stop-Manual, Stop-Automatic	0	274	Stop-Manual	
25.07	Thyristor OL out	0 ... 127	0	47	0000001	
25.08	Thyristor OL op	Stop-Manual, Stop-Automatic	0	275	Stop-Manual	
25.09	Heatsink over temp out	0 ... 127	0	48	0000001	
25.10	Heatsink over temp op	Stop-Manual, Stop-Automatic	0	276	Stop-Manual	
25.11	Unspecified fault out	0 ... 127	0	43	0000001	
25.12	Unspecified fault op	Stop-Manual, Stop-Automatic	0	277	Stop-Manual	
<b>26</b>	<b>External faults</b>					
26.01	Phase loss out	0 ... 127	0	96	0000001	
26.02	Phase loss op	Stop-Manual, Stop-Automatic	0	278	Stop-Manual	
26.03	Bad network out	0 ... 127	0	36	0000001	
26.04	Bad network op	Stop-Manual, Stop-Automatic	0	279	Stop-Manual	
26.05	Low supply voltage out	0 ... 127	0	46	0000001	
26.06	Low supply voltage op	Stop-Manual, Stop-Automatic	0	280	Stop-Manual	
26.07	High current out	0 ... 127	0	49	0000001	
26.08	High current op	Stop-Manual, Stop-Automatic	0	281	Stop-Manual	
26.11	Faulty connection out	0 ... 127	0	282	0000001	
26.12	Faulty connection op	Stop-Manual, Stop-Automatic	0	283	Stop-Manual	
<b>27</b>	<b>Language</b>					
27.01	Language	English, Spanish, Finnish, French, Italian Dutch, Polish, Portuguese, Russian, Swedish Turkish, Chinese (simplified Chinese), Arabic Czech, German	0	173	English	
27.02	Basic set-up at power on	Yes, No	0	284	Yes	
<b>28</b>	<b>Service</b>					
28.01	ID	Invalid ID, 30, 37, 45, 60, 72, 85, 105, 142, 170, 210, 250, 300, 370, 470, 570, 720, 840, 1050, 1250	0	171	-	
28.02	Line contactor close time	0 ... 65535 ms	0	175	245 ms	
28.03	TOR relay delay time	0.0 ... 300.0 s	1	286	0.0 s	
28.04	Start without start command	On / Off	0	287	Off	
28.05	Step down level	10 ... 100%	0	9	80%	
28.06	Torque profile start	Constant setpoint, Linear ramp, Progressive curve, High inertia curve	0	10	Linear ramp	
28.07	Torque finish	30 ... 500%	0	17	100%	
28.08	Torque tune	0 ... 1000%	0	11	100%	
28.09	Torque ctrl gain	0.01 ... 10.00	2	12	0.02	
28.10	Torque PI integration time	0.001 ... 10 s	3	13	0.004 s	
28.11	Torque slip	0.1 ... 100%	1	14	1.0%	
28.12	Torque diff	0.1 ... 100%	1	15	2.0%	
28.13	Torque filter time	0.01 ... 100 s	2	16	0.02 s	
28.14	Mains lock setting	Automatic lock, 50 Hz manual lock 60 Hz manual lock	0	288	Automatic lock	
28.15	Minimum trig time	0.0 ... 1.0 ms	3	289	0.208 ms	
28.16	Accel adapt U start ramp	On / Off	0	290	Off	
28.17	U start ramp switch level	10 ... 100%	0	291	22%	
28.18	T start ramp switch level	10 ... 100%	0	292	30%	
28.19	Stop ramp switch level	10 ... 100%	0	293	52%	
28.20	In-Line gain	0.0 ... 30.0	1	294	0.0	
28.21	Inside delta gain	0.0 ... 30.0	1	295	3.0	
28.22	Phase loss	On / Off	0	33	On	
28.23	Phase loss during TOR	On / Off	0	296	On	
28.24	Phase loss trip time	20 ... 4000 ms	0	34	500 ms	
28.25	Phase loss trip angle 1	1 ... 240	0	297	12	
28.26	Phase loss trip angle 2	1 ... 240	0	298	70	
28.27	Bad network quality	On / Off	0	35	On	
28.28	Low supply voltage	On / Off	0	37	On	
28.29	High current fault	On / Off	0	38	On	

Parameter number	Description	Setting range	Number of decimals	Fieldbus ID	Default value	Actual setting
28.30	Shunt fault	On / Off	0	40	On	
28.31	Short circuit thyristor	On / Off	0	39	On	
28.32	Open circuit thyristor	On / Off	0	299	On	
28.33	Thyristor overload	On / Off	0	41	On	
28.34	Heatsink over temp	On / Off	0	300	On	
28.35	Faulty connection	On / Off	0	301	On	
28.36	Faulty usage	On / Off	0	302	On	
28.37	Close bypass curr lvl	0.5 ... 4.0 x I <sub>e</sub>	1	28	1.2 x I <sub>e</sub>	
28.38	Simulation motor	M3AA 100L 2 (I <sub>e</sub> = 5.2 A), M3BP 112M 4 (I <sub>e</sub> = 7.4 A), M2AA 180MLA 6G (I <sub>e</sub> = 29.3 A), M2AA 180MLB 4G (I <sub>e</sub> = 39.9 A), M3AA 250SMA 8 (I <sub>e</sub> = 62.3 A), M3AA 200MLB 2 (I <sub>e</sub> = 59.2 A), M2AA 225SMA 2G (I <sub>e</sub> = 74.7 A), M2BP 250SMA 4G (I <sub>e</sub> = 96.6 A), M2BA 280SMB 2L (I <sub>e</sub> = 144.9 A), M2BA 315SMB 4L (I <sub>e</sub> = 221.8 A), M2BA 315MLA 2L (I <sub>e</sub> = 319.6A), M4BP 200MLB 2G (I <sub>e</sub> = 59.3 A), M3BP 315LKB 4K (I <sub>e</sub> = 330.4 A), M3BP 315MLA 2M (I <sub>e</sub> = 255.4 A), M3BP 280MLA 4M (I <sub>e</sub> = 151.5 A), M3BP 355SMC 6K (I <sub>e</sub> = 325.6 A),	0	29	M3AA 250SMA 8 (I <sub>e</sub> = 62.3 A)	
28.39	Simulation load	No load, Linear Load, Progressive load, High inertia load	0	30	Progressive load	
28.40	Simulation connection	Auto, In line, Inside delta UI, Inside delta IU, Two phase (L1 shorted), Two phase (L2 shorted), Two phase (L2 shorted), Unknown	0	303	In line	
28.41	System mode	Normal, Demo, Small motor	0	31	Normal	
28.42	Limp mode	On / Off	0	25	Off	
28.43	Motor connection	Auto, In line, Inside delta UI, Inside delta IU, Two phase (L1 shorted), Two phase (L2 shorted), Two phase (L2 shorted), Unknown	0	27	Auto	
28.44	Advanced User security code		0		0	
28.45	Enable Advanced User login	Yes / No	0		No	
28.46	User security code		0		0	
28.47	Enable secure settings	Yes / No	0		No	
28.48	Disable Service login	Yes / No	0		No	
28.49	Shunt fault trip time	0.1 ... 120.0 s	1		5.0 s	
28.50	Shunt fault trip level	0.1 ... 100.0 %	1		3.0 %	
28.51	Firing angle sweep	On / Off	0		On	
28.52	Auxiliary condition	On / Off	0		Off	
28.53	Flux threshold gain 1	0.000 ... 1.000	3		0.022	
28.54	Flux threshold gain 2	0.000 ... 1.000	3		0.147	







# 8 Communication

8.1 Built in modbus RTU	134
<hr/>	
8.2 Anybus CompactCom (option)	134
<hr/>	
8.3.1 Instructions	134
8.2.2 Necessary components	134
<hr/>	
8.3 ABB Fieldbus plug interface (option)	134
<hr/>	
8.3.1 Instructions	134
8.3.2 Necessary components	135
<hr/>	
8.4 MINI USB interface	135
<hr/>	

## 8.1 Built in modbus RTU

The PSTX Softstarter has a non-isolated RS485 physical interface, com 3, for external devices with support for RS485 based communication.

You can use this interface to control the softstarter, get status information, and for the upload and download of parameters.

The softstarter uses the RS485 interface for a modbus RTU slave connection.

### 8.1.1 Instructions

Instructions for the set-up of input and output telegrams, parameter settings, instructions, etc. are available at:

**www.abb.com/lowvoltage:**

- Built-in Modbus RTU 1SFC132089M0201

## 8.2 Anybus CompactCom (option)

The PSTX Softstarter has an interface on the front, com 1, for connecting the Anybus CompactCom (CC) module, used for Fieldbus communication. You can use this interface to control the softstarter, get status information, and for the upload and download of parameters.



### INFORMATION

When fastening the module into the com1 port, make sure that the module is properly aligned into the com 1 and the socket prior to applying any force. Rough handling and/or excessive force in combination with misalignment may cause mechanical damage to the module and/or the com1 and socket.

### 8.2.1 Instructions

Instructions for the set-up of input and output telegrams, parameter settings, instructions, etc. are available at:

**www.abb.com/lowvoltage:**

- DeviceNet 1SFC132084M0201
- Profibus (DPV1) 1SFC132085M0201
- Modbus RTU 1SFC132086M0201
- Modbus TCP 1SFC132087M0201
- EtherNet/IP 1SFC132088M0201
- Profinet 1SFC132094M0201

## 8.2.2 Necessary components

These Anybus CC connection devices are available:

- DeviceNet
- Profibus (DPV1)
- Modbus RTU
- Modbus TCP
- EtherNet/IP
- Profinet

## 8.3 ABB Fieldbus plug interface (option)

The PSTX Softstarter has an interface, com 2, on the front for connecting the ABB Fieldbus Plug Adapter (FBPA) used for Fieldbus communication.

You can use this interface to control the softstarter, get status information, and for the upload and download of parameters.

The interface between the softstarter and the FieldBus Plug is independent of the Fieldbus protocol used. Independent of softstarter type or delivery date, you can connect 1 of the available Fieldbus protocols, because this is specified in the FieldBus Plug itself.

Connect the Fieldbus communication plug to the ABB Fieldbus Plug Adapter (FBPA).

Make sure that the plug is in the correct position and tighten the screw with 0,8 Nm (7,1 lb in) and additional 1/4 turn.

These Fieldbus protocols are available:

- DeviceNet
- Profibus (DPV0/DPV1)
- Modbus RTU

### 8.3.1 Instructions

Instructions for the set-up of input and output telegrams, parameter settings, instructions, etc. are available at:

**www.abb.com/lowvoltage:**

- DeviceNet 1SFC132090M0201
- Profibus (DPV0/DPV1) 1SFC132091M0201
- Modbus RTU 1SFC132092M0201

### 8.3.2 Necessary components

To connect the PSTX Softstarter to a Fieldbus system, these components are necessary:

- ABB Fieldbus Plug Adapter, for presenting Fieldbus protocol (make sure that the cable length is sufficient).
- Connectors for bus connection.
- End plug (some protocols).
- Software for PLC set-up.

## 8.4 MINI USB interface

The PSTX Softstarter has an USB interface for communication with PC. The USB interface is on the front of the movable HMI.

You can use this interface to get status information, and for the upload and download of parameters.



# 9 Maintenance

9.1 Regular maintenance	138
9.2 Service and repair	138

For repair of the PSTX Softstarter, speak to your ABB reseller/Office or speak to ABB through [www.abb.com/lowvoltage](http://www.abb.com/lowvoltage)



### CAUTION

Dangerous voltage: Can cause death or serious injury.

Make sure that the softstarter is de-energized before doing maintenance, service or repair.

Do not open the softstarter or touch live parts when the main and supply voltage is connected.



### INFORMATION

Service and repair must be done by authorized personnel only. Note that unauthorized repair has an effect on safety and warranty.



### INFORMATION

ABB personnel must obey the instructions in **ABB CISE 15.4**.



### CAUTION

A short circuit on the load side of the softstarter can cause large damage to the unit and cause danger to personnel.

By using a correctly rated short circuit protection device, e.g. a fuse or a circuit breaker, the damage is limited to 1 of the 2 categories, specified in IEC 60947-4-2 and EN 60947-4-2:

Type 1: The softstarter can have damage and it can be necessary to replace some or all parts.

Type 2: The device can operate after a short circuit.

Type 2: Use a semiconductor fuse to get coordination. A coordination table is found in the catalogue and online through:

[www.abb.com/lowvoltage](http://www.abb.com/lowvoltage)

For warranty for damage on the thyristors, the coordination type 2 is necessary.

## 9.1 Regular maintenance

- Make sure that all installation bolts/screws are fastened. Tighten if necessary.
- Tighten the terminal screws and bolts on the connection bars, if necessary.  
For tightening torques, see **chapter 5.1.1.1 Tightening torques and cable dimensions**.



### CAUTION

- Make sure that the softstarter is de-energized before tightening the bolts/screws.
- Make sure that all connections of control- and supply circuits are fastened.  
For tightening torques, see **chapter 5.1.1.1 Tightening torques and cable dimensions**.
- If the softstarter is installed inside a cabinet, do a check of the external filters. Clean them, if necessary.
- Make sure that the airways are free from dirt and dust.



### WARNING

Do not use pressurized air to clean the softstarter.

- Make sure that the fan works and rotates freely. The blades must rotate without resistance.
- Do a check of the time of the softstarter and adjust if necessary.
- In case of a fault, or if a fault cannot be reset, see **chapter 10 Troubleshooting**.







# 10 Troubleshooting

10.1 General	142
10.2 Troubleshooting	142
10.3 Overview of faults, protections and warnings	145
10.4 Protection indication shown on screen	147
10.5 Fault indication shown on screen	148
10.6 Warning indication shown on screen	150

## 10.1 General

Use this chapter when problems occur with the softstarter or the application.



### CAUTION

Dangerous voltage: Can cause death or serious injury. Always set the power switch to off and lock out all power to this device before you start to work on the equipment.



### CAUTION

Make sure that the softstarter is de-energized before you do maintenance.  
Do not open the softstarter or touch live parts when the main and supply voltage is connected.



### INFORMATION

ABB personnel must follow the **ABB CISE 15.4** instructions

The softstarter indicates a fault with LED Fault, and the display shows which type of fault occurred. When a protection is on, the LED Protection illuminates and the display shows which type of protection is active. When a warning occurs, the display shows the type of warning. In this chapter you can also find issues that the softstarter does not show, such as humming sounds.

## 10.2 Troubleshooting

**Table 1** Troubleshooting

Status	Possible cause	Solution
Motor humming / starts without given start signal.	Bypass relay closed, because of inaccurate handling. (PSTX30...170 only).	<ul style="list-style-type: none"><li>Disconnect the operation voltage and the control supply voltage. Remove USB cable from the computer if connected. Connect voltage in this sequence: 1. Control supply voltage on terminals 1 and 2. See <b>chapter 5.1.2 Control supply and control circuit</b>.</li><li>Wait 4 seconds, and then connect operation voltage on terminals L1, L2 and L3.</li><li>If the fault stays, speak to your ABB Sales Office.</li></ul>
	Bypass contactor/relay stuck in closed position.	<ul style="list-style-type: none"><li>Speak to your ABB Sales Office.</li></ul>
	Shorted thyristor.	<ul style="list-style-type: none"><li>Speak to your ABB Sales Office.</li></ul>
Bad motor sound during start.	The motor connection is not correct.	<ul style="list-style-type: none"><li>Examine and correct the wiring. Connect the control supply voltage. Refer to the circuit diagram. See <b>chapter 11 Wiring diagrams</b>.</li></ul>
	Incorrect ramp time for start.	<ul style="list-style-type: none"><li>Try different ramp times (some adjustments can be necessary for best result). See <b>chapter 7 Functions</b>.</li></ul>

Status	Possible cause	Solution
Bad motor sound during start.	Incorrect Initial/End level.	<ul style="list-style-type: none"> <li>Try different settings for the parameter Initial /End Voltage. See <b>chapter 7 Functions</b>, or speak to your ABB Sales Office..</li> </ul>
	Incorrect Current limit level or Torque limit level.	<ul style="list-style-type: none"> <li>Try different settings for the parameter Current limit level or Torque limit level. See <b>chapter 7 Functions</b>, or speak to your ABB Sales Office.</li> </ul>
	The motor is too small. (Current is out of measuring range.)	<ul style="list-style-type: none"> <li>Make sure that you have the correct softstarter for this motor size. For test purposes you can use small motor mod. See <b>chapter 7 Functions</b>.</li> </ul>
	Thyristor conductivity is bad.	<ul style="list-style-type: none"> <li>Contact your ABB Sales Office.</li> </ul>
	Incorrect ramp time for stop.	<ul style="list-style-type: none"> <li>Make sure that you have the correct softstarter for this motor size. For test purposes you can use small motor mode. See <b>chapter 7 Functions</b>.</li> </ul>
	Start and stop command given at the same time.	<ul style="list-style-type: none"> <li>Make sure that start and stop command is not given at the same time.</li> </ul>
	The operation voltage is below 175 V.	<ul style="list-style-type: none"> <li>Do a check of the operation voltage.</li> </ul>
Motor does not start when given start command by the hardwire inputs.	Control wiring is not correct. Start and stop command given at the same time. Keypad is in Local control mode.	<ul style="list-style-type: none"> <li>Do a check of the connections for start and stop.</li> <li>Make sure that start and stop command is not given at the same time.</li> <li>Make sure that the keypad is not in Local Control mode.</li> <li>Push the R\L-key to change to Remote Control mode.</li> <li>Make sure that parameter Fieldbus control is set to No.</li> <li>Do a reset on an active event.</li> <li>Reset tripping events.</li> </ul>
Motor does not start with Fieldbus.	Softstarter has tripped on fault or protection.	<ul style="list-style-type: none"> <li>Do a reset on an active event. Reset tripping events.</li> </ul>
	Softstarter is in Local mode.	<ul style="list-style-type: none"> <li>Make sure that the Stop bit of the binary output telegram setting is set to 1.</li> <li>Make sure that parameters match between the PLC and the softstarter Fieldbus documentation for the used Fieldbus protocol.</li> <li>Make sure that the Auto mode bit of the binary output telegram setting is set to 1.</li> <li>Do a check if the HMI is set to remote mode.</li> <li>Make sure that the Local Mode digital input on the ABB FieldBus Plug adapter is set to Remote.</li> <li>Make sure that Fieldbus disable control in DI is not connected.</li> <li>Make sure that the Fieldbus control parameter is set to On.</li> </ul>
	Fieldbus operation when fault parameter is set to Change to I/O control.	<ul style="list-style-type: none"> <li>If the parameter Fieldbus failure op is set to Change to I/O control when fault occurs, there is a 10 seconds delay before you can re-start after communication is connected.</li> </ul>

Status	Possible cause	Solution
Loading of parameters with Fieldbus does not work correctly.	Fieldbus settings.	<ul style="list-style-type: none"> <li>Make sure that parameters match between the PLC and the softstarter Fieldbus documentation for the used Fieldbus protocol.</li> <li>Make sure that the Auto mode bit of the binary output telegram setting is 1.</li> <li>Do a check if the HMI is set to remote control.</li> <li>Make sure that the Local Mode digital input on the ABB FieldBus Plug adapter is set to Remote.</li> <li>Make sure that Fieldbus disable control in DI is not connected.</li> <li>Make sure that the Fieldbus control parameter is set to On.</li> </ul>
Shown phase currents in screen do not agree with motor current.	Inside Delta connection.	<ul style="list-style-type: none"> <li>If the softstarter is connected Inside Delta, the phase currents shown are = 58% (<math>1/\sqrt{3}</math>) of the motor current.</li> </ul>
Shown current in screen is not stable.	<p>The motor is too small.</p> <p>The load on the motor is too small.</p> <p>(Current is out of measuring range.)</p>	<ul style="list-style-type: none"> <li>Make sure that you have the correct softstarter for this motor size..</li> </ul>
Dark screen and LED is active	Power save mode.	<ul style="list-style-type: none"> <li>Touch a key on the keypad.</li> </ul>
Blank screen and no LED is active	Supply voltage is not connected.	<ul style="list-style-type: none"> <li>Connect the Supply voltage. Refer to the circuit diagram.</li> <li>If problem stays, speak to your ABB Sales Office.</li> </ul>
	<ul style="list-style-type: none"> <li>The RJ45 plug is missing between the HMI and the softstarter.</li> <li>RJ45 Network cable is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Do a check of the RJ45 plug.</li> <li>Do a check of the RJ45 Network cable</li> </ul>

## 10.3 Overview of faults, protections and warnings

This table shows in which state the different indications for protections, faults and warnings can show.

		Event code*	Motor control states **									
		(Hexadecimal)	Stand by	Start prerequisites	Pre-start	Init start	Start Ramp	Close bypass	Top of ramp	Open bypass	Stop ramp	Separate func
Protections	Electronic overload	P0Fxx	X	X	X	X	X	X	X	X	X	X
	Locked rotor	P10xx							X			
	Phase reversal	P11xx			X	X	X	X	X	X	X	X
	Current imbalance	P12xx							X			
	Current underload	P13xx							X			
	User defined protection	P14xx	X	X	X	X	X	X	X	X	X	X
	Ground fault	P15xx			X	X	X	X	X	X	X	X
	Overvoltage	P16xx							X			
	Under voltage	P17xx							X			
	Voltage imbalance	P18xx			X	X	X	X	X	X	X	X
	PT100 protection	P19xx	X	X	X	X	X	X	X	X	X	X
	PTC protection	P1Axx	X	X	X	X	X	X	X	X	X	X
	Power factor underload	P1Bxx							X			
	Too long current limit	P1Cxx				X	X					
	Bypass open fault	P1Dxx							X			
	Fieldbus communication failure	P1Exx	X	X	X	X	X	X	X	X	X	X
	24V output	P1Fxx	X	X	X	X	X	X	X	X	X	X
	HMI failure	P20xx	X	X	X	X	X	X	X	X	X	X
	Extension IO failure	P21xx	X	X	X	X	X	X	X	X	X	X
	Max number of starts per hour	P22xx		X								
	Auto-restart time-out	P31xx	X	X	X	X	X	X	X	X	X	X
	Too long start time	P32xx				X	X					
	Frequency range	P33xx			X	X	X	X	X	X	X	X

\* Only the first 2 digits are important

\*\* For motor control states description, see chapter 7 Functions

		Event code*	Motor control states **									
		(Hexadecimal)	Stand by	Start prerequisites	Pre-start	Init start	Start Ramp	Close bypass	Top of ramp	Open bypass	Stop ramp	Separate func
Faults	High current	F02xx	X	X	X	X	X	X	X	X	X	X
	Phase loss	F03xx			X	X	X	X	X	X	X	X
	Heatsink overtemperature	F04xx	X	X	X	X	X	X	X	X	X	X
	Bad network quality	F05xx			X	X	X				X	
	Shunt fault	F06xx	X			X	X				X	
	Low supply voltage	F07xx	X	X	X	X	X	X	X	X	X	X
	Thyristor overload	F08xx	X	X	X	X	X	X	X	X	X	X
	Short circuit thyristor	F09xx			X	X	X				X	X
	Open circuit thyristor	F0Axx			X	X	X					X
	Unspecified fault	F0Bxx	X	X	X	X	X	X	X	X	X	X
	Invalid ID	F0Cxx	X	X	X	X	X	X	X	X	X	X
	Faulty connection	F0Dxx			X							
	Faulty usage	F0Exx			X						X	X
Warnings	Current imbalance	W23xx							X			
	Current underload	W24xx							X			
	Fan failure	W25xx	X	X	X	X	X	X	X	X	X	X
	EOL warning	W26xx	X	X	X	X	X	X	X	X	X	X
	Locked rotor	W27xx							X			
	Overvoltage	W28xx							X			
	Under voltage	W29xx							X			
	Power factor underload	W2Axx							X			
	THD(U)	W2Bxx							X			
	Thyristor overload	W2Cxx	X	X	X	X	X	X	X	X	X	X
	Voltage imbalance	W2Dxx			X	X	X	X	X	X	X	X
	Short circuit	W2Exx			X	X	X				X	X
	EOL time-to-trip	W2Fxx							X			
	Phase loss	W30xx	X									
	Number of starts limit	W34xx	X	X	X	X	X	X	X	X	X	X
	Motor run time limit	W35xx	X	X	X	X	X	X	X	X	X	X

\* Only the first 2 digits are important

\*\* For motor control states description, see chapter 7 Functions

## 10.4 Protection indication shown on screen

For a description of the protections, see **chapter 7.17 Protections group 0-6**.

**Table 2** Protection indication

Status	Possible cause	Solution
Electronic overload	The motor got an overload because the current is too high during some time. (The load on the motor shaft is too high)	<b>In Line / Inside Delta</b> <b>At start</b> <ul style="list-style-type: none"> <li>Examine start conditions and EOL settings.</li> <li>Examine and correct the reason for the overload.</li> <li>Make sure that Current limit level is not set too low.</li> <li>Make sure that the ramp time for start is not too long.</li> <li>Make sure that correct overload class is used.</li> <li>Make sure that parameter Setting le is correct.</li> </ul>
		<b>Continuous run</b> <ul style="list-style-type: none"> <li>Do a check of the rating of the plate for le.</li> <li>Do a check of the operation voltage.</li> <li>Use a motor with more power, and</li> <li>a softstarter rated for higher current.</li> <li>Examine and correct the reason for the</li> <li>overload.</li> <li>Make sure that correct EOL Class is used.</li> </ul>
Locked rotor	The motor does not run easily. A possible cause is a damaged bearing or a load stock.	<ul style="list-style-type: none"> <li>Examine the bearings of the motor and load.</li> <li>Make sure that the load runs easily.</li> </ul>
Phase reversal	The phase sequence is not correct. Current imbalance between the phases.	<ul style="list-style-type: none"> <li>Change the phase sequence on the line side to (L1-L2-L3).</li> <li>Start the motor again and do a check of the main currents and voltage.</li> </ul>
Current imbalance	Current imbalance between the phases.	<ul style="list-style-type: none"> <li>Start the motor again and do a check of the main currents and voltage.</li> </ul>
Current underload	The motor current is below the specified value.	<ul style="list-style-type: none"> <li>Examine and correct the reason for the underload.</li> <li>Make sure that the motor current parameter (le) is set correctly.</li> </ul>
User defined protection	With the programmable digital input and an external device/ sensor the user can use his own specified protection.	<ul style="list-style-type: none"> <li>Set the programmable input signal to inactive state before you reset the protection event.</li> </ul>
Ground fault	Equipment protection. In a symmetrical 3-phase system, the sum of the instantaneous line currents is equal to zero. Ground fault indicates if the sum differs more than the specified value. This can indicate a serious condition of the motor.	<ul style="list-style-type: none"> <li>Examine motor cables.</li> <li>Examine the motor.</li> </ul>
Overvoltage	The main voltage is too high	<ul style="list-style-type: none"> <li>Do a check of the main voltage.</li> </ul>
Under voltage	The main voltage is too low.	<ul style="list-style-type: none"> <li>Do a check of the main voltage.</li> </ul>
Voltage imbalance	Voltage imbalance between the phases.	<ul style="list-style-type: none"> <li>Do a check of the main voltage and start the motor again.</li> </ul>
External thermal sensor - PTC protection - PT100 protection	The external thermal sensor detected a temperature higher than the trip level in the motor or PT100.	<ul style="list-style-type: none"> <li>Make sure that the PTC or PT100 circuit is closed and that the inputs are connected.</li> <li>Examine and correct the reason for the high temperature.</li> <li>Wait for the temperature of the motor to decrease sufficiently and start again.</li> </ul>

Status	Possible cause	Solution
Power factor underload	The power factor is below the normal level.	<ul style="list-style-type: none"> <li>Examine and correct the reason for the underload.</li> </ul>
Too long current limit	The time at current limit is higher than the set value. The starting condition is too heavy for the set current limit.	<ul style="list-style-type: none"> <li>Do a check of the starting conditions and parameters.</li> </ul>
Bypass open fault	Bypass contactor or relay does not close when reached TOR.	<ul style="list-style-type: none"> <li>Do a check and speak to your ABB sales office.</li> </ul>
Fieldbus communication failure	There is a communication error between the softstarter and PLC.	<ul style="list-style-type: none"> <li>Make sure that the FieldBus Plug is connected correctly.</li> <li>Make sure that correct type of FieldBus Plug is used.</li> <li>Make sure that the parameter Fieldbus Type is set for the present Fieldbus type.</li> </ul>
24V output	The 24V voltage outputs is overloaded or shorted.	<ul style="list-style-type: none"> <li>Do a check of the connections.</li> </ul>
HMI failure	There is a communication error between the softstarter and the HMI. The HMI is removed.	<ul style="list-style-type: none"> <li>Do a check of the connections and correct it.</li> <li>Put the HMI back.</li> </ul>
Extension IO failure	There is a communication error between the softstarter and the extension I/O module.	<ul style="list-style-type: none"> <li>Do a check of the connections and correct it.</li> </ul>
Max number of start per hour	The softstarter made more starts than the pre-set limited number of starts.	<ul style="list-style-type: none"> <li>Wait for the next start interval. For parameter, see <b>chapter 7 Functions</b>.</li> </ul>
Auto-restart time-out	The time between trip and auto-restart attempt exceeds setting.	<ul style="list-style-type: none"> <li>Do a check of the automatic restart parameters and correct it.</li> </ul>
Too long start time	The time to soft start the motor is longer than the set value.	<ul style="list-style-type: none"> <li>Do a check of the starting conditions and current limit..</li> </ul>
Frequency range	The frequency has been outside the allowed range longer than the allowed time.	<ul style="list-style-type: none"> <li>Do a check of the main voltage.</li> </ul>

## 10.5 Fault indication shown on screen

For a description of the faults, see **chapter 7.19 Faults (26) Internal faults (27) External faults**

**Table 3** Fault indication

Status	Possible cause	Solution
High current	A fault current, higher than 8 times the softstarter rated current, has occurred..	<ul style="list-style-type: none"> <li>Do a check of the circuits and the motor for an insulation fault phase to phase or ground fault.</li> </ul>
Phase loss	Voltage to 1 or more phases is missing.	<ul style="list-style-type: none"> <li>Make sure that the mains are connected and that no line contactor or breaker is open.</li> </ul>
	Fuse is blown.	<ul style="list-style-type: none"> <li>Do a check of the fuses for all 3 phases. Replace blown fuse.</li> </ul>
	Power loss on operation current for 1 or multiple phases.	<ul style="list-style-type: none"> <li>Do a check of the operation network supply. Correct it.</li> </ul>
	The line contactor or circuit breaker is open.	<ul style="list-style-type: none"> <li>Do a check of the contactor/breaker or an external switch device. Close it.</li> </ul>
	Line contactor opens too quickly at stop.	<ul style="list-style-type: none"> <li>Control Line contactor with Run signal relay on terminal 4. See <b>chapter 5.1.2.6 Programmable output relay - K4, terminals 4, 5 and 6</b>.</li> <li>Add a time relay before contactor opens.</li> <li>If Stop Ramp is not necessary, set Stop mode to direct stop.</li> </ul>









<b>Heatsink overtemperature</b>	The heatsink temperature is too high. If the fault stays after reset, the heatsink is too hot and the temperature must decrease.	<ul style="list-style-type: none"> <li>• Make sure that the fans work correctly.</li> <li>• Make sure that airways are free from dirt and dust.</li> <li>• Make sure that the ambient temperature is not too high.</li> </ul>
<b>Status</b>	<b>Possible cause</b>	<b>Solution</b>
<b>Bad network fault quality</b>	Excessive interference in the operation supply network.	<ul style="list-style-type: none"> <li>• Do a check for harmonics or frequency interference in the supply network and correct supply operation network.</li> </ul>
	Short power loss on all 3 phases in the operation network.	<ul style="list-style-type: none"> <li>• Do a check of the supply operation network. Correct it.</li> </ul>
<b>Shunt fault</b>	The softstarter cannot stop the motor because of internal short circuit.	<ul style="list-style-type: none"> <li>• Speak to ABB sales office for service.</li> </ul>
	Bypass relay closed, because of inaccurate handling. (PSTX30...170 only).	<ul style="list-style-type: none"> <li>• Disconnect operation voltage and control supply voltage. Connect voltage in correct order.</li> <li>• 1. Control supply voltage on terminals 1 and 2. See <b>chapter 5.1.2 Control supply and control circuit</b>.</li> <li>• 2. Wait 4 seconds, and then connect operation voltage on terminals L1, L2 and L3.</li> <li>• If same fault stays, speak to your ABB Sales Office.</li> </ul>
<b>Low supply voltage</b>	The control supply voltage is too low on terminals 1 and 2.	<ul style="list-style-type: none"> <li>• Do a check for voltage dips or interruptions and correct control supply voltage.</li> </ul>
	Short power loss on the control supply network.	<ul style="list-style-type: none"> <li>• Do a check of the control supply network for short interruptions.</li> </ul>
<b>Thyristor overload</b>	The thyristors are too hot.	<ul style="list-style-type: none"> <li>• Do a check of the start conditions and the fans.</li> <li>• Decrease current limit if possible.</li> <li>• Let the temperature of the thyristors decrease before you start again.</li> </ul>
<b>Short circuit thyristor</b>	1 or multiple thyristors are shorted.	<ul style="list-style-type: none"> <li>• Speak to your ABB sales office for service.</li> </ul>
<b>Open circuit thyristor</b>	1 or multiple thyristors do not conduct.	<ul style="list-style-type: none"> <li>• Speak to your ABB sales office for service.</li> </ul>
	The Operation voltage is below 175 V.	<ul style="list-style-type: none"> <li>• Make sure that you have the correct softstarter for this motor size.</li> </ul>
	The motor is too small.	<ul style="list-style-type: none"> <li>• For test purposes you can use small motor mode. See <b>chapter 7 Functions</b>.</li> </ul>
<b>Unspecified fault</b>	N/A	<ul style="list-style-type: none"> <li>• Disconnect the supply voltage (Us). Connect it again and start again.</li> <li>• If the same fault stays, speak to your ABB sales office.</li> </ul>
<b>Invalid ID</b>	ID parameter out of range	<ul style="list-style-type: none"> <li>• Speak to ABB sales office for service.</li> </ul>
<b>Faulty connection</b>	Motor connection unknown when trying to start motor.	<ul style="list-style-type: none"> <li>• Do a check of the motor connection.</li> </ul>
<b>Faulty usage</b>	Inside delta motor connection when you try to jog forward, jog backward, heat motor or do a stand-still break.	<ul style="list-style-type: none"> <li>• Do not use these functions with Inside delta motor connection.</li> </ul>

## 10.6 Warning indication shown on screen

For a description of the warnings, see **chapter 7.18**  
**Warnings group 0-4.**

**Table 4** Warning indication

Status	Cause/Possible cause
Current imbalance	Current imbalance between the phases is higher than the warning level.
Current underload	The motor current is below the warning level. Make sure that the motor current parameter (Ie) is set correctly.
Faulty fan	The fans do not work correctly because of dust or mechanical blockage. The softstarter can become too hot. Make sure that the fans work and rotate freely. The blades must rotate without resistance. If the fault stays, speak to ABB sales office.
EOL warning	The calculated motor temperature is higher than the warning level.
Locked rotor	The motor current is higher than the warning level. A damaged bearing or a stuck load can be possible causes.
Overvoltage	The RMS phase to phase voltage is higher than the adjustable value.
Under voltage	The RMS phase to phase voltage decreased below the adjustable value.
Power factor underload	The power factor decreased below the adjustable value during continuous operation.
THD(U)	THD(U) is higher than the warning level. Do a check of the quality of the network.
Thyristor overload	The calculated thyristor temperature is higher than the warning level
Voltage imbalance	Voltage imbalance between the phases is higher than the warning level.
Short circuit	There is an internal short circuit and the softstarter runs in limp mode. See chapter 7 Functions.
EOL time-to-trip	The predicted time before EOL trip is at the warning level.
Phase loss	Voltage to one or more phases missing. Check that the mains are connected and that no line contactor or breaker is open.
Number of starts limit	The number of starts exceeds the warning level. Time for service!. The warning will stay active until the Number of starts (resettable) value have been reset. Use menu: Menu  Settings  Reset to defaults  Reset operating data and select Number of starts (resettable) to perform the reset.
Motor run time limit	The Motor runtime exceeds warning level. Time for service! The warning will stay active until the Motor run time (resettable) value have been reset. Use menu: Menu  Settings  Reset to defaults  Reset operating data and select Motor run time (resettable) to perform the reset.
Modbus configuration	The built-in Modbus RTU slave is enabled but the Com 3 function is not set to Modbus RTU





# 11 Wiring diagrams

<b>11.1 Circuit diagram PSTX</b>	154
11.1.1 Circuit diagram	
PSTX30...PSTX1250 (IEC version)	154
11.1.2 Circuit diagram	
PSTX30...PSTX1250 (UL version)	154


## 11.1 Circuit diagram PSTX

### 11.1.1 Circuit diagram PSTX30...PSTX1250 (IEC version)




#### CAUTION

Terminal 22 is a function ground, it is not a protection ground. It shall be connected to the mounting plate.

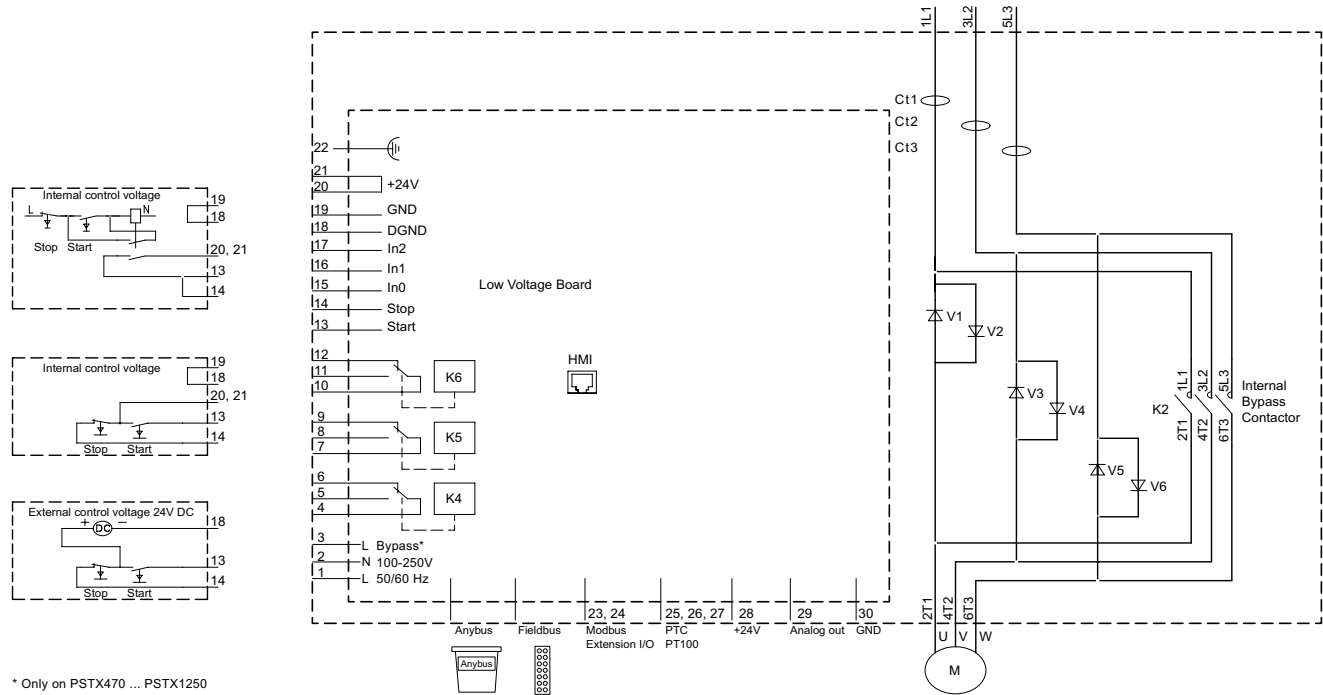

### 11.1.2 Circuit diagram PSTX30...PSTX1250 (UL version)

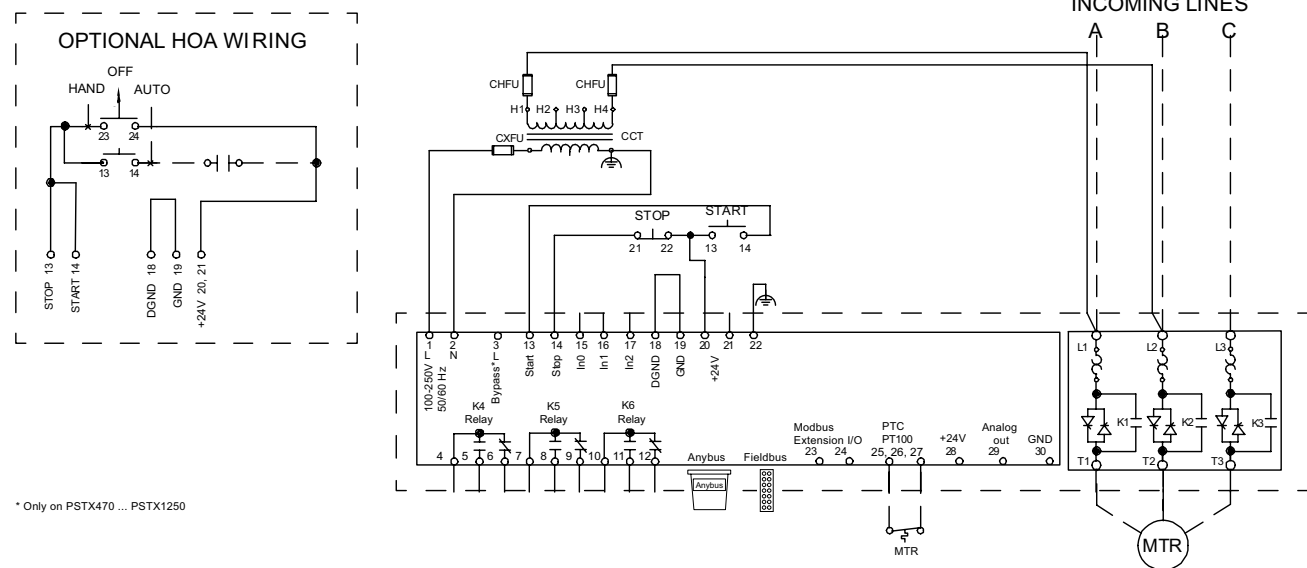



# 12 Revision

The following revisions is done on this document:

Document number	Revision	Chapter	Description	Date
1SFC132081M0201	A	-	First release	2014-06-27
1SFC132081M0201	B	4-11	New numbering of images	
1SFC132081M0201	B	5 -10	Updated technical description	2014-09-19
1SFC132081M0201	C	5, 7	Text and illustration updated	2014-11-14
1SFC132081M0201	D	3, 7	Text and illustration updated	2015-06-26
1SFC132081M0201	E	-	Text and illustration updated	2015-09-30
1SFC132081M0201	F	5	Illustrations updated	2015-10-23





## Symbols

2-wire measurement for PT100 44  
 2-wire measurement for PTC 45  
 3-wire measurement for PT100 44

## A

ABB Fieldbus plug interface (option) 132  
 Acronyms and abbreviations 9  
 Active faults/protectations and warnings 57  
 Add information screens to home view 56  
 Analog output 46, 88  
 Anybus CompactCom 132  
 Application Setting 14, 61, 118  
 Application set-up 14, 61  
 Assistants 61, 118
 

- Application set-up 61
- Basic set-up 61

 Automatic restart 84  
 Available faults 19  
 Available protections 18. See also Protections  
 Available warnings 19. See also Warnings

## B

Backup handling 63
 

- Create backup 63
- Replace backup 63
- Uploading of parameters 63

 Bad network fault 113  
 Basic set-up 14, 61  
 Bi-metal switch 89  
 Built in modbus RTU 132  
 Bypass 18  
 Bypass open protection 99

## C

Changing the Rated motor current  
 (Setting I<sub>e</sub>) 53  
 Communication 131  
 Communication protocols 22  
 Complete list 58  
 Complete parameter list 120  
 Configuration 14  
 Connection 12  
 Connection fault 114  
 control circuit 9  
 Control supply and control circuit 38  
 Control supply voltage 9  
 Control supply voltage - terminals 1 and 2 38  
 cooling 31  
 Cooling system 22  
 Create backup 63  
 current 9  
 Current imbalance protection 97  
 Current imbalance warning 106  
 Current Lim
 

- Dual current limit 79
- Ramp current limit 79

Current limit 79
 

- Normal current limit 79

 Current underload protection 96  
 Current underload warning 105

## D

Date and time 66  
 Delivery note 30  
 Description 17  
 Detachable keypad 32  
 Digital inputs (DI) 86  
 Dimensions and drilling plan 32  
 Direct stop 77  
 Display decimals 57  
 Display name 57  
 Display settings 66  
 Display slot 56  
 Display style 57  
 Document number 2  
 Drilling plan 32  
 Dual current limit 79

## E

Ground fault protection 101  
 Edit home view 56  
 Edit information screens in home view 56  
 Edit parameter values 52  
 Electrical connection 36  
 Electronic overload time-to-trip warning 107  
 Electronic overload warning 104  
 Emergency mode 115  
 Environmental influence 21  
 EOL 9  
 EOL Protection 95  
 Error caused by the line 45  
 Event groups 93  
 Event log
 

- Faults 62
- Parameter changed 62
- Protections 62
- Run 62
- Warnings 62

 Extension I/O failure protection 103  
 Extension IO (Option) 85  
 External control voltage 40  
 External fault 110  
 External faults 113  
 External thermal sensor - PT100 protection 100  
 External thermal sensor - PTC protection 100

## F

Fault 22  
 Fault detection functions 19  
 Faults 62, 110
 

- External fault 110
- Internal fault 110

 Faults indication 146  
 Faulty usage fault 114  
 Favorites 60  
 Fieldbus 90
 

- Fieldbus address 90
- Fieldbus control 90

- Fieldbus Inputs/Outputs 90

Fieldbus address 90

Fieldbus control 90

Fieldbus failure operation 90. See also Fieldbus failure protection

Fieldbus failure protection 103

Fieldbus Inputs/Outputs 90

Frequency range protection 99

Full voltage 9

Full voltage start 77

Functional ground - terminal 22 38

Functions 69

## H

Handling when mounting 31

Heatsink over temperature fault 112

High current fault 114

HMI 9

How to set a parameter 53

How to start/stop the motor 15

Human-Machine Interface 9

Humidity 21

## I

Ie 9, 22

i-key 51

Individual function 70

Inputs/outputs 85

- Analog output 88
- Digital inputs (DI) 86
- Relay outputs 87
- Temperature sensor 89

Insulation 22

Internal fault 110

- Internal fault 110

Internal faults 111

Internal IO 85

## K

Keypad

- i-key 51
- Navigation keys 51
- R\L-key 51
- Start key 51
- Stop key 51

Kick start 80

## L

Language 65

LED 9

LED indicators 50

LED status 50

Limp mode 116

Line contactor close time 116

Local control from keypad 54

- R\L-key 54
- Start key 54
- Stop key 54

Locked rotor protection 95

Locked rotor warning 104

Low supply voltage fault 114

Under voltage warning 106

## M

Main circuit 36

Maintenance 137

Maximum mounting angle 32

Max number of starts protection 96

Menu screen 58

- Favorites 60
- Modified 60
- Parameters 58

Minimum distance to wall/front 31

Minimum enclosure size 32

MINI USB interface 133

Modbus configuration warning 109

Motor Current Ie 71

Motor heating 82

Motor jog 55

Mount 31

Mounting Detachable HMI 33

## N

Navigation keys 51

Navigation Overview 50

Navigation screen 52

Normal current limit 79

## O

On/off switch 52

Open circuit thyristor fault 112

Optional accessories 46

Options screen 56

Output relay 22

Overview 18

Overview of faults, protections and warnings 143

Over voltage protection 98

Over voltage warning 106

## P

Parameter changed 62

Parameters 58

- Complete list 58

Phase loss fault 113

Phase reversal protection 99

PLC 9

Pollution degree 21

Power factor underload protection 97

Power factor underload warning 105

Presentation settings 64

Pre-start 70

Programmable inputs (Sequence start) 42

Programmable inputs - terminals 15, 16 and 17 41

Programmable output relay - K4, terminals 4, 5 and 6 43

Programmable output relay - K5, terminals 7, 8 and 9 43

Programmable output relay - K6, terminals 10, 11 and 12 43

Protection 21

Protection functions 18

Protection indication 145, 148

Protection indication shown on screen 145

Protections 62, 94

PT100 89

PTC 89

PTC/PT100 input 44

## Q

Quick start 11

## R

Ramp current limit 79

Real time clock 66

Receive, unpack and check 30

Relay outputs 87

Replace backup 63

Reset operating data 67

Reset to defaults 67

R\L-key 51, 54

Run 62

## S

Scale value range 57

Selection list 52

Selection softkeys 51

Semi-conductor fuses 22

Sequence start 83

Service and repair 136

Settings 64, 118

- Date and time 66
- Display settings 66
- Language 65
- Reset to defaults 67

Short circuit fault 111

Short circuit warning 108

Signal 56

Signal max 57

Signal min 57

Slow speed 81

Softstarter overview 20

Softstarter ratings 23

Softstarter states 70

- Individual function 70
- Pre-start 70
- Stand by 70
- Start ramp 71
- Stop ramp 71
- Top of ramp 71

Special feature 115

- Emergency mode 115
- Limp mode 116
- Line contactor close time 116
- Start without start command 116
- Step down level 117
- System mode 117
- TOR relay delay time 117

Specifications 21

Stand by 70

Stand still brake 78

Start and Stop - terminals 13, 14, 18, 19, 20, 21 39

Start key 51, 54

Start ramp 71

Start without start command 116

Step down level 117

Stop key 51, 54

Stop ramp 71

Storage 21, 22

System info 64

System mode 117

## T

Table Application settings 119

Technical data 22

Technical data for external keypad 22

Temperature 9, 21, 22

Temperature errors in °C / K 45

Temperature sensor 89

- External thermal sensor - PT100 protection 100
- External thermal sensor - PTC protection 100
- PT100 89
- PTC 89
- Thermistor switch 89

Temperature sensors 100

The numerical setting 52

Thyristor 9

Thyristor overload fault 112

Thyristor overload warning 105

Tightening torques and cable dimensions 37

Too long current limit protection 101

Top level 54

Top of ramp 71

Shunt fault TOR 9

Torque ramp 74

- Torque stop ramp 76

Torque start ramp 75

Torque stop ramp 76

TOR relay delay time 117

Total Harmonic Distortion (THD) warning 107

Troubleshooting 139

- Overview of faults, protections and warnings 143
- Protection indication shown on screen 145

Type designation 21

## U

Uc 9

Ue 9

Under voltage protection 98

Unspecified fault 113

Uploading of parameters 63

Us 9

User defined protection 19

User interface 18

## V

Voltage imbalance warning 107

Voltage outputs protection 100

Voltage ramp 72

- Voltage start ramp 72
- Voltage stop ramp 73

Voltage start ramp 72

Voltage stop ramp 73

## W

Warning functions 19

Warnings 62, 104

Weights 22

Wiring diagrams 151



# Contact us

**ABB AB**  
**Control Products**  
**Low Voltage Products**

SE-721 61 VÄSTERÅS, Sweden

[www.abb.com/lowvoltage](http://www.abb.com/lowvoltage)

© Copyright 2015, All rights reserved.  
Specification subject to change without notice.

Softstarters Type PSTX, Installation and commissioning manual, 1SFC132081M0201 rev G, January 2016

Power and productivity  
for a better world™

