


# Cantilever Door Assembly Instructions

## 1 Component check:


Layout and check all components required are as shown in image:

1. Roller Wheel Assemblies (x2)
2. Channel End Cap
3. Channel Roller End Cap
4. Post Door Catch
5. Post Door Catch Bracket
6. Top Door Guides (x2)
7. Door Stop Post
8. Red Rubber Door Stop
9. Door Handle Kit

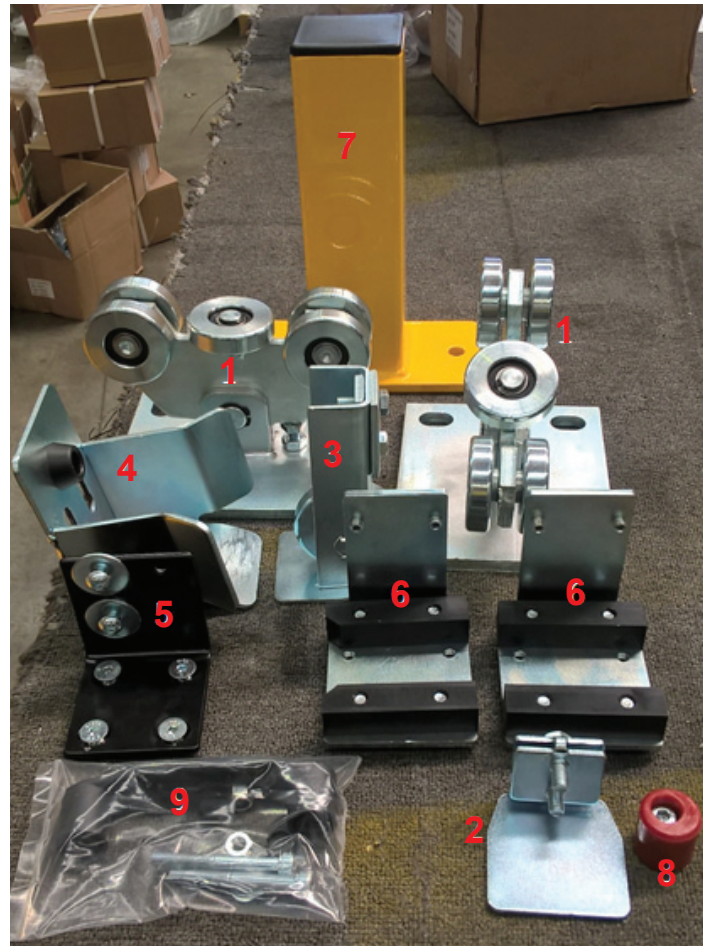

## 2 Secure posts and fixed panels:


Hang fixed panel and bolt posts to the ground – as per required fencing layout.

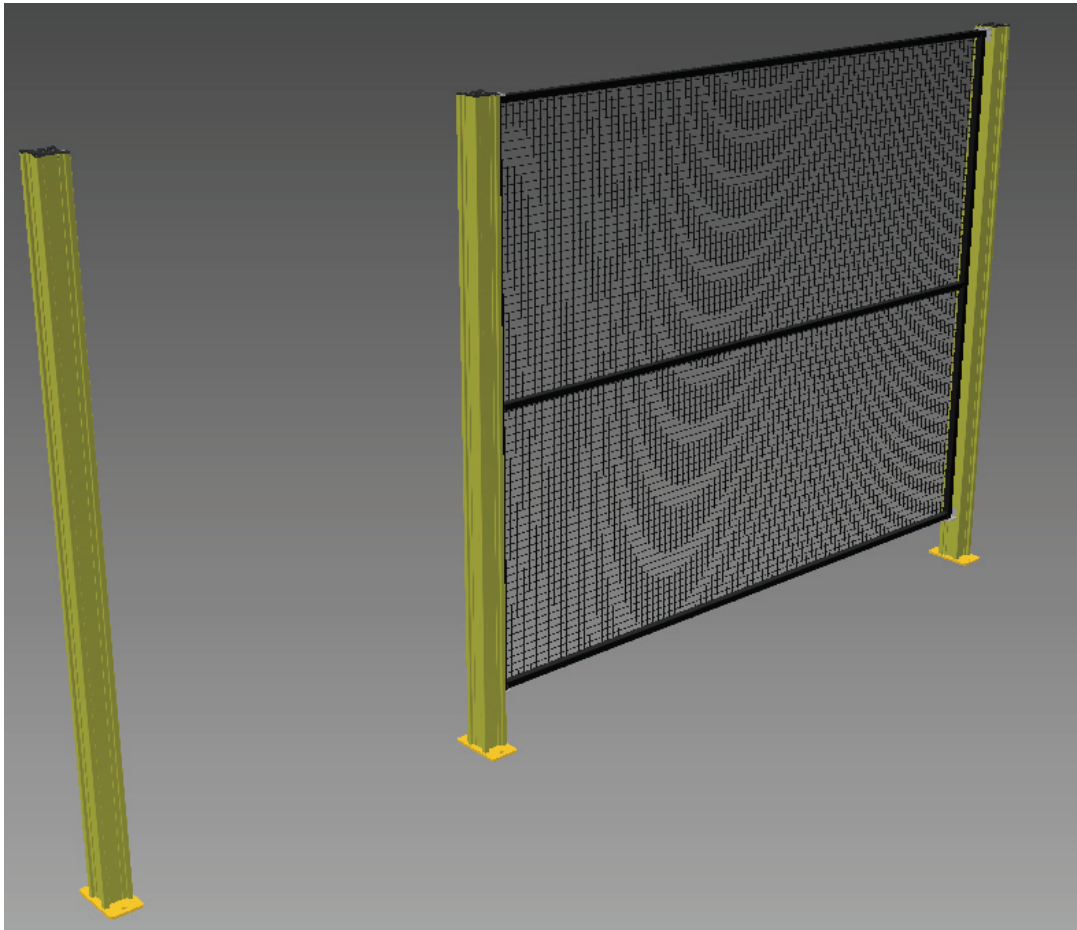

### 3 Secure wheel and channel roller assemblies:


Place wheel roller assemblies (1) on the floor in their approximate final location. Slide the cantilever door onto the roller assemblies and install the channel roller end cap (3) on the leading edge of the door, and the channel end cap (2) on the trailing edge – respectively.

Mount the top door guides (6) by sliding into the post 'T' slot grooves and fastening securely.

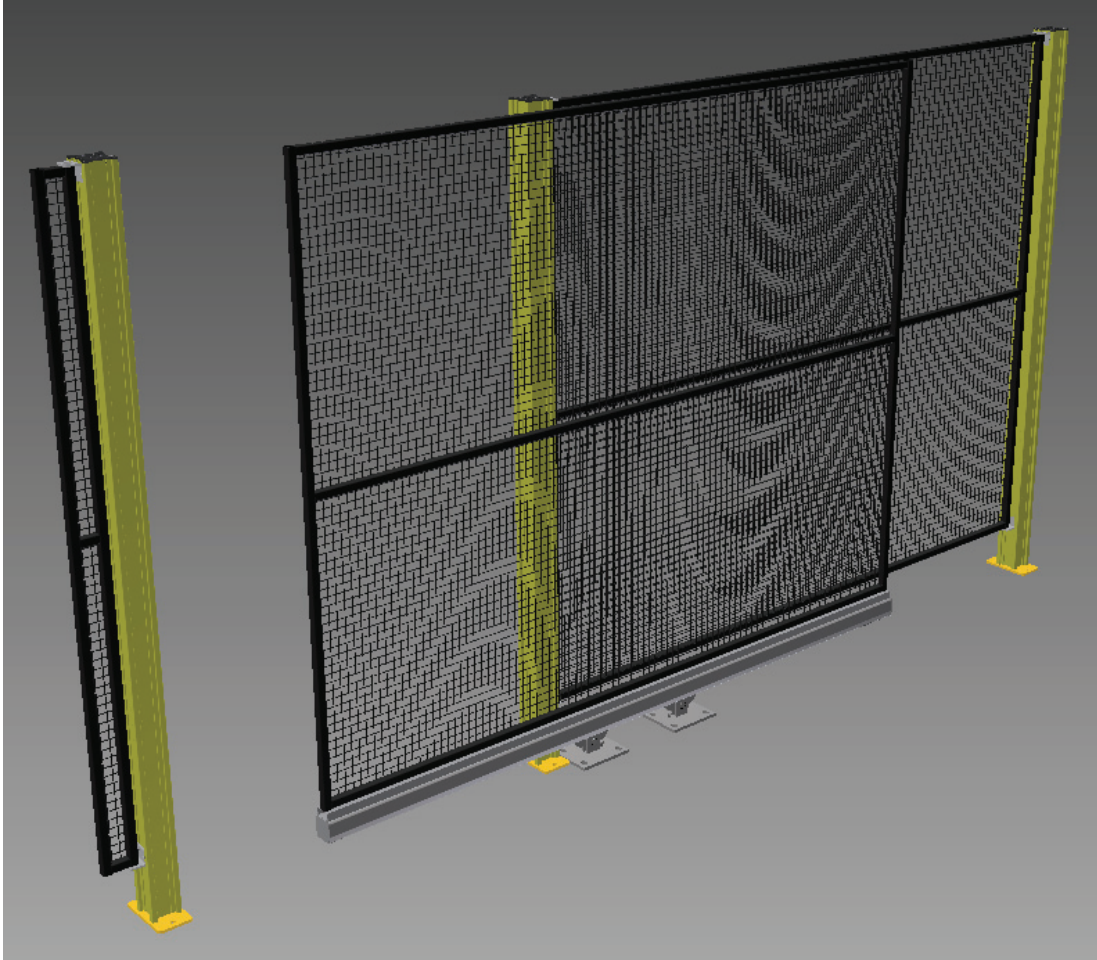

## 4 Mount catch and door stop:

Mount post door catch (4 & 5) so that the door rests in the catch in its fully closed position. Finally, position the door stop post (7 & 8) such that the door can not be opened further than required.

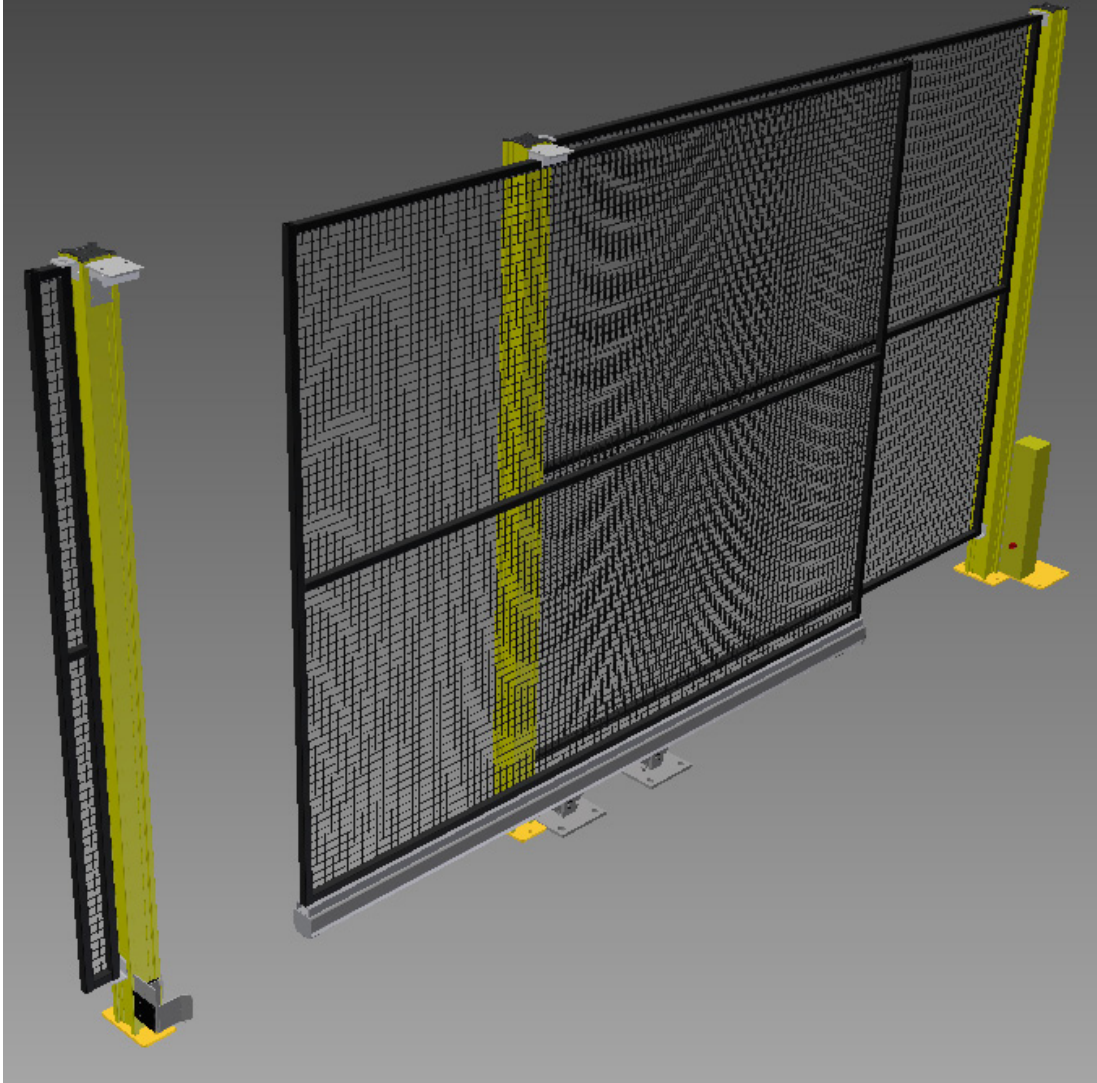

See more at [celltec.com.au](http://celltec.com.au)

### Laverton (Head Office)

6 Paraweena Drive  
Truganina VIC 3029  
Australia

### Bayswater

Unit 6 / 577 Dorset Road  
(via Burgess Road)  
Bayswater North VIC 3153  
Australia

Phone: +61 3 8360 8533

Fax: +61 3 8360 8544

E-mail: [sales@celltec.com.au](mailto:sales@celltec.com.au)