


Power & Control Isolation

Mini Solenoid Controlled Key Switch (back of board)

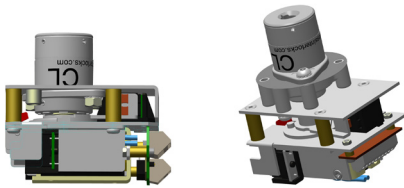

The Mini SS (Solenoid Switch) is a robust, heavy duty, solenoid controlled, key operated switch.

Back of Board (BOB) - This unit can be fixed behind a machine control panel.

Weatherproof (BOB) - This unit is IP66 rated.

**IMPORTANT**

This product is designed for use according to the installation and operating instructions enclosed. It must be installed by competent and qualified personnel who have read and understood the whole of this document prior to commencing installation. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Any modification to or deviation from these instructions invalidates all warranties. Fortress Interlocks Ltd accepts no liability whatsoever for any situation arising from misuse or misapplication of this product. This product is not to be used as a Mains Isolator or Emergency Stop. The unit is a component to be added to a permanent electrical installation meeting the requirements of the applicable IEC/EN standards.

The voltages used on the MSS terminals must all be of the same type. i.e. ALL Hazardous live or ALL Machine Extra Low Voltage.

**IF YOU HAVE ANY QUESTIONS OR QUERIES OF ANY NATURE WHATSOEVER PLEASE CONTACT THE SUPPLIER WHO WILL BE PLEASD TO ADVISE AND ASSIST.**

Switch Approvals



Tools and Fixings Required

Back of Board

- Dia. 6.5 Drill
- 3.5mm Flat blade electrical screwdriver
- 2 x M6 screws
- 2 x M6 washers

Mounting

Mount this unit well away from sources of vibration or use anti-vibration mountings in order to avoid the effects of vibration, shock and bump.

Back of Board (BOB) Mounting

Mount the unit only in its correctly assembled condition to flat metal plate. The plate must be bonded to earth potential. A sound earth connection must be made to the middle plate of the product. A shakerproof washer may be required on at least one fixing, to ensure Earth continuity.

1. Locate the unit so that the lock is within easy reach.
2. Machine the panel as shown in Fig.1 and Fig 2.
3. Mount the unit to the panel using the 2 M6 screws and washers as applicable.
4. All fixing screws must be permanently prevented from removal, either by vibration or by personnel using standard tools.

Electrical Connection

Check that the unit to be installed is of the same electrical type and voltage rating as the machine control circuits. Note that all units are designed to operate at +/-10% of the nominal supply voltage. The use of an incorrect voltage can seriously damage the unit.

**The electrical system must incorporate fuse protection for all circuits, using a Quick-Acting (F) fuse (maximum rating 3A, 250V to IEC 127).**

Terminals 1-3 and 2-4 are N/C contacts opened mechanically by the solenoid operating. These are normally used as the solenoid operated safety circuits.

Terminals 5-6 are the solenoid power supply. For D.C. terminal 5 is the 24V supply and terminal 6 is the OV.

Terminals 7-9 and 8-10 are N/C contacts opened mechanically when the key is turned and released. These are normally used as the key operated safety circuits.

The earth wire used to bond the unit to Earth potential must be multi-stranded Yellow and Green PVC sheathed and approved to BS 6231 with conductor cross-sectional area of 2.5mm<sup>2</sup>. The Earth lead must be fitted such that it will be the last to be broken if the wiring loom is pulled from the product.

When all wiring is complete, conduct a Protective Earth Test to BS 60204, clause 20 to all accessible metal parts. Test the unit for correct operation.

Functionality

Key Trapped State

When the solenoid is not energised, the key is trapped. The solenoid operated safety circuits and key safety circuits are closed.

Key Unlocked State

When voltage is applied to the solenoid, the solenoid safety circuits are positively opened.

Key Free State

When the control key is removed, the contacts on the key safety circuits are positively opened.

Commissioning

Mechanical Function Test

1. Isolate electrical supplies.
2. Insert the key.
3. Check that the key is trapped in position.
4. Manually override the solenoid to allow the removal of the key.

Electrical Function Test

1. Check that all the switches are in the states shown in the wiring diagrams.
2. Apply voltage to the solenoid.
3. Check that the solenoid safety circuits are open.
4. Remove the control key.
5. Check that the key operated safety circuits changes state.

Service and Inspection

Regular weekly inspection of the following is necessary to ensure trouble-free, lasting operation.

1. Correct switching function.
2. Secure mounting of components.
3. Debris and wear.
4. Loose cable terminals.

There are no user serviceable parts in this unit. If damage or wear is found the whole unit must be replaced. If lubrication/cleaning is required use WD40. **DO NOT USE DRY LUBRICANT.**

Lubrication/cleaning will depend on the environment. Lubricate/clean at least once a week when used in the concrete industry.

Disposal

This interlock does not contain any certified hazardous materials so should be disposed of as industrial waste.

Liability coverage is voided under the following conditions:

1. If these instructions are not followed.
2. Non-compliance with safety regulations.
3. Installation and electrical connection not performed by authorised personnel.
4. Non-implementation of functional checks.


Technical Specification	
Cable Size	26-14 AWG
Minimum Voltage and Current for switch contact	1mA at 5VDC
Mechanical & Electrical Life	1,000,000 operations
* Once the maximum electrical or mechanical number of operations has been reached, the unit must be replaced.	

Environmental Specification	
Environment Type	Indoor
Max. Altitude	2000m
Ambient Temperature	-5°C to +40°C
Maximum Relative Humidity	80%@<=31°C 50%@40°C
Transient Overvoltages Installation	Uimp 2500V
Pollution Degree (IEC 664)	Degree 2
Ingress Protection - Std	IP40
Ingress Protection - Weatherproof version	IP65, IP66

The manufacturer reserves the right to modify the design at any time and without notice. This guide should be retained for future reference.


Dimensional Drawing - MSS (BOB)

Fig.1

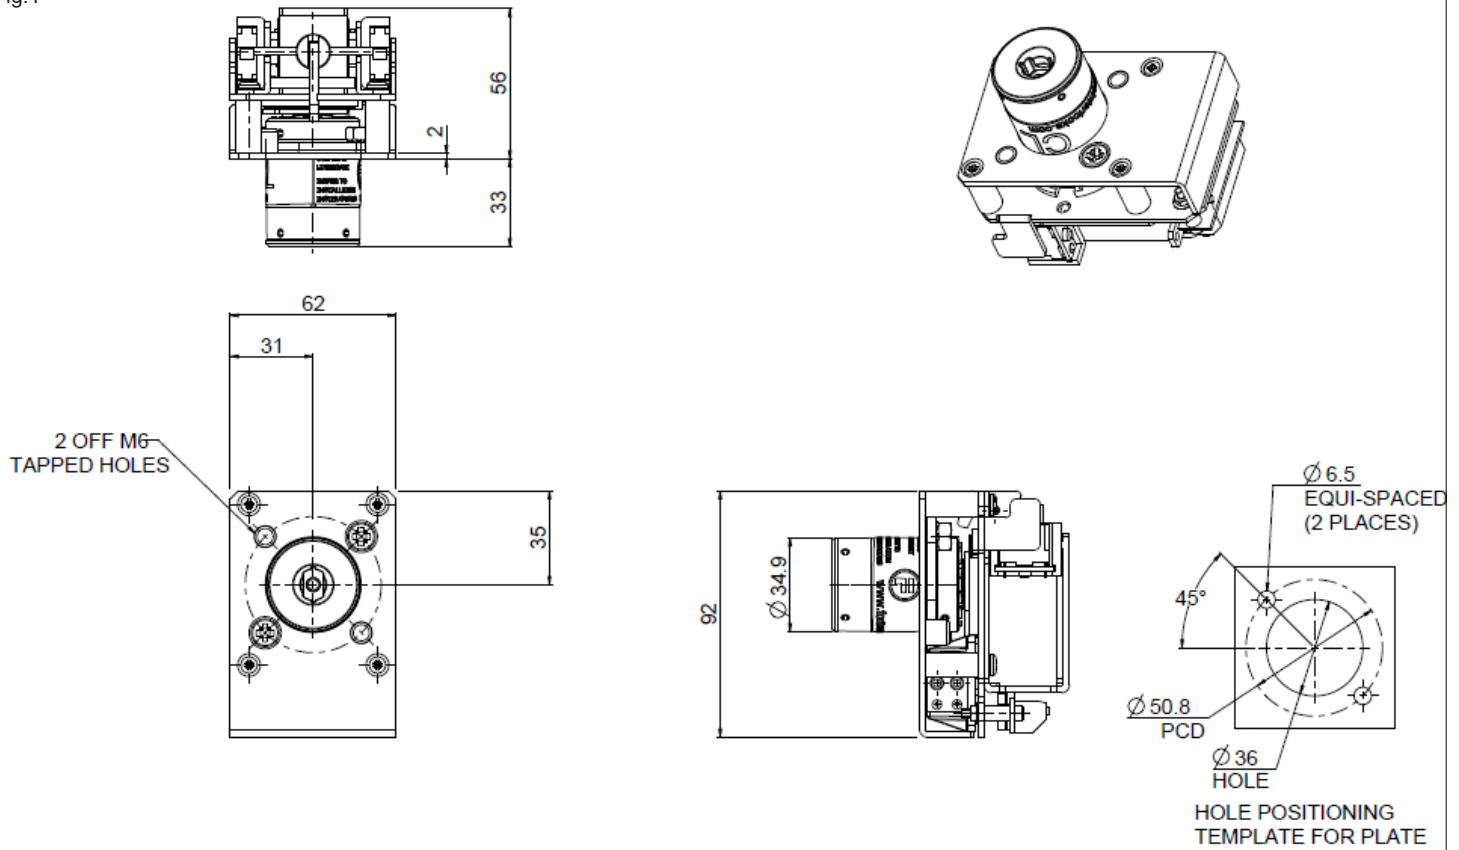


Dimensional Drawing - MSS (BOB) - Weatherproof Version

Fig.2

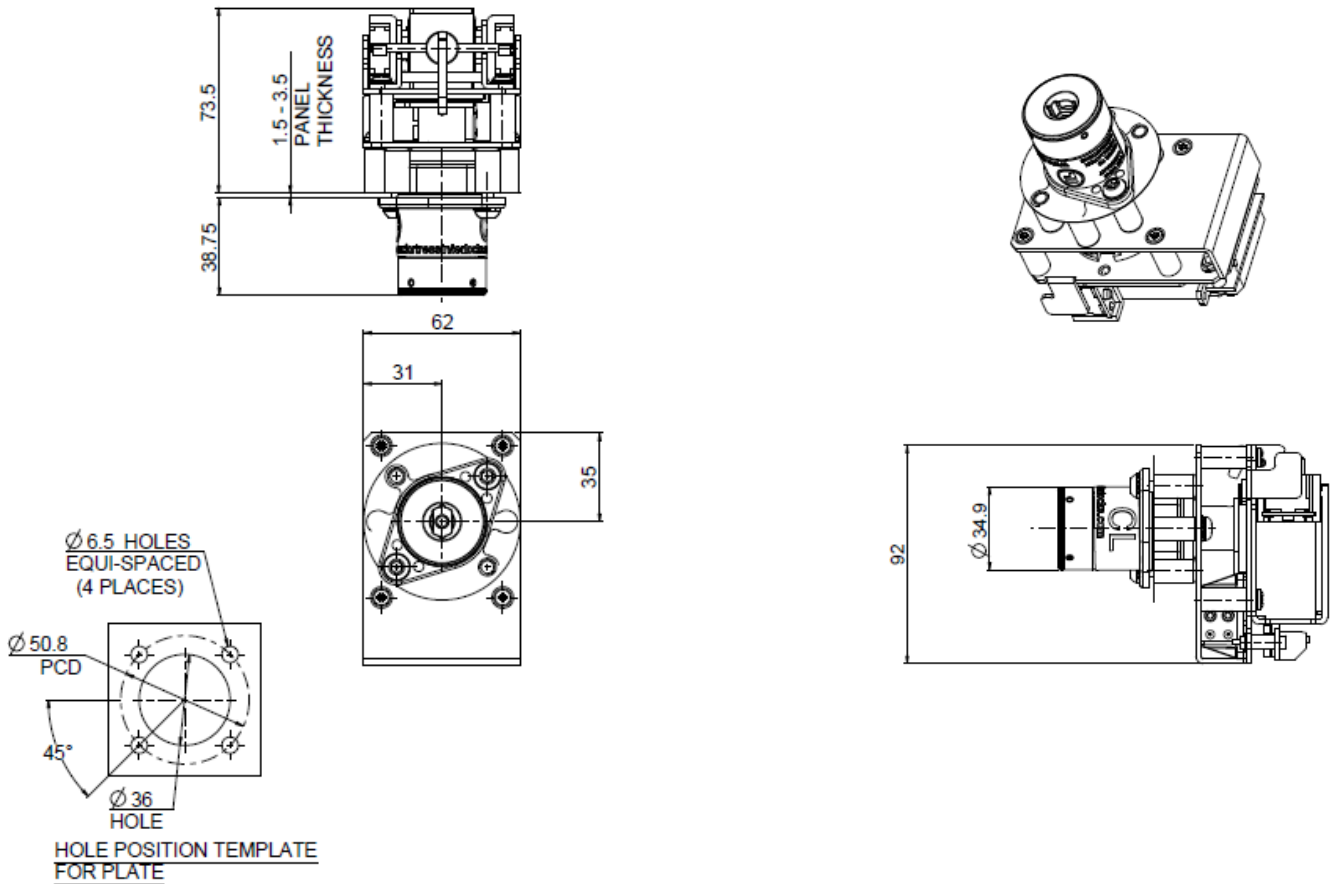

Wiring Diagram 24V / 48V Unit

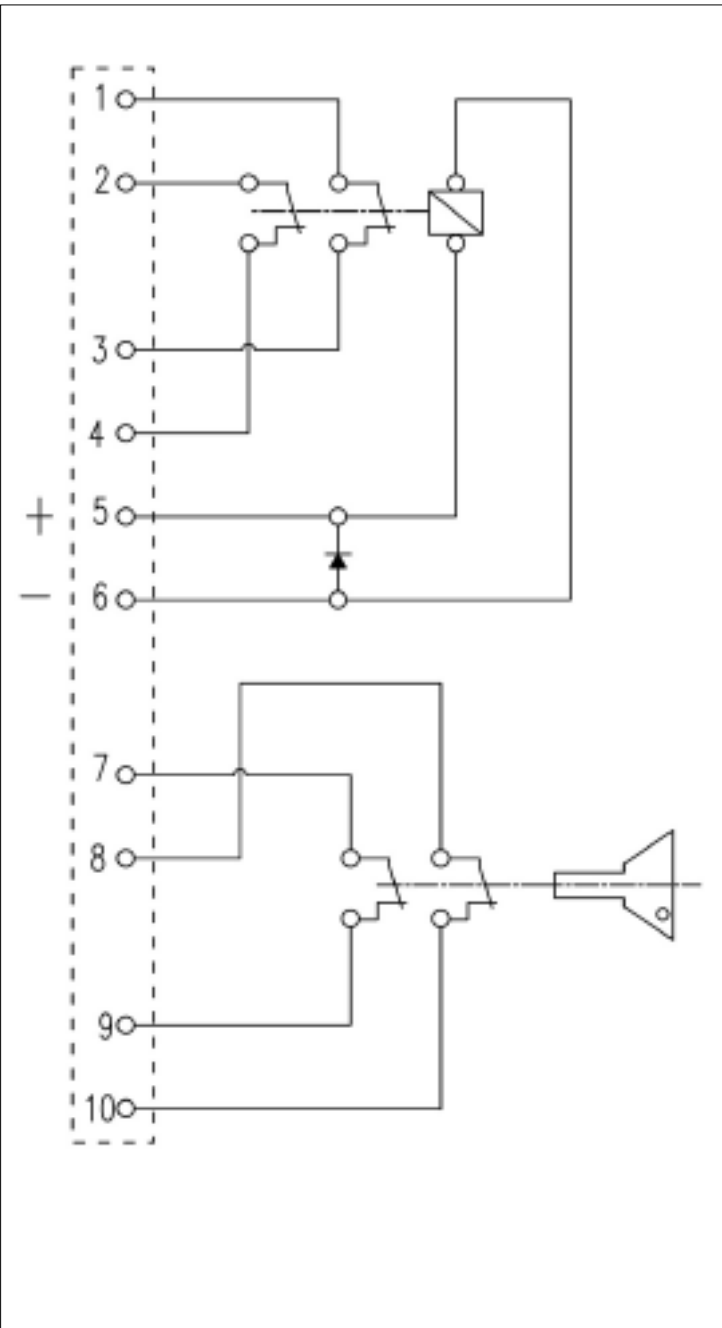

Wiring Diagram 110V / 230V Unit

